

**LABVIEW
GRAPHICAL
PROGRAMMING**

SERHAT BEYENIR

Collection Editor:

Serhat Beyenir

Collection Editor:

Serhat Beyenir

Authors:

National Instruments

Malan Shiralkar

Online:

< <http://cnx.org/content/col11408/1.1/> >

C O N N E X I O N S

Rice University, Houston, Texas

This selection and arrangement of content as a collection is copyrighted by Serhat Beyenir. It is licensed under the Creative Commons Attribution 3.0 license (<http://creativecommons.org/licenses/by/3.0/>).

Collection structure revised: February 6, 2012

PDF generated: October 29, 2012

For copyright and attribution information for the modules contained in this collection, see p. 114.



1 Introduction

1.1 LabVIEW 2

1.2 LabVIEW Environment 3

1.3 Front Panel 14

1.4 Block Diagram 16

1.5 Acquiring a Signal VI	21
1.6 LabVIEW Documentation Resources	33
1.7 Reduce Samples VI	36
1.8 Debugging Techniques	42
1.9 Debug Exercise (Main) VI	43
1.10 Summary, Tips, and Tricks on Introduction to LabVIEW	47
2 Modular Programming	
2.1 Modular Programming	51
2.2 Icons and Connector Panes	53
2.3 Convert C to F VI	56
2.4 Using SubVIs	60
2.5 Thermometer VI	61
2.6 Creating a SubVI from Sections of a VI	65
2.7 Summary, Tips, and Tricks on Modular Programming	66
3 Repetition and Loops	
3.1 While Loops	67
3.2 For Loops	69

3.3	Timed Temperature VI	71
3.4	Summary, Tips, and Tricks on Repetition and Loops	74
4 Customizing VIs		
4.1	Configuring the Appearance of Front Panels	75
4.2	Opening SubVI Front Panels when a VI Runs	76
4.3	Pop-up Graph VI and Use Pop-up Graph VI	77
4.4	Keyboard Shortcuts for Controls	79
4.5	Temperature System VI	80
4.6	Editing VI Properties	82
4.7	Edit Me VI	82
4.8	Customizing the Controls and Functions Palettes	83
4.9	Summary, Tips, and Tricks on Customizing VIs	85
5 Plotting Data		
5.1	Waveform Charts	87
5.2	Temperature Monitor VI	89
5.3	Temperature Running Average VI	94
5.4	Waveform and XY Graphs	98

5.5 Graph Waveform Array VI	99
5.6 Temperature Analysis VI	104
5.7 Graph Circle VI	106
5.8 Intensity Plots	108
5.9 Intensity Graph Example VI	109
5.10 Summary, Tips, and Tricks on Plotting Data	111
5.11 Additional Exercises for Plotting Data	111

iv

Index	113
--------------------	-----

Attributions	114
---------------------------	-----

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

Chapter 1

Introduction

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

1

2

CHAPTER 1. INTRODUCTION

1.1 LabVIEW1

LabVIEW programs are called **virtual instruments**, or **VIs**, because their appearance and operation imitate physical instruments, such as oscilloscopes and multimeters. LabVIEW contains a comprehensive set of tools for acquiring analyzing, displaying, and storing data, as well as tools to help you troubleshoot your code.

LabVIEW VIs contain three components—the **front panel**, the **block diagram**, and the **icon and connector pane**. This lesson describes the front panel and the block diagram; refer to Modular Programming (Section 2.1) for more information about the icon and the connector pane.

In LabVIEW, you build a user interface, or front panel, with controls and indicators. Controls are knobs, push buttons, dials, and other input devices. Indicators are graphs, LEDs, and other displays. After you build the user interface, you add code using VIs and structures to control the front panel objects. The block diagram contains this code. In some ways, the block diagram resembles a flowchart.

Use LabVIEW to communicate with hardware such as data acquisition, vision, and motion control devices, and GPIB, PXI, VXI, RS-232, and RS-484 devices. LabVIEW also has built-in features for connecting your application to the Web using the LabVIEW Web Server and software standards such as TCP/IP networking and ActiveX.

Using LabVIEW, you can create test and measurement, data acquisitions, instrument control, datalogging, measurement analysis, and report generation applications. You also can create stand-alone executables and shared libraries, like DLLs, because LabVIEW is a true 32-bit compiler.

1This content is available online at <<http://cnx.org/content/m12192/1.2/>>.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





































3

1.2 LabVIEW Environment2










When you launch LabVIEW, the navigation dialog box (Figure 1.1) appears that includes introductory material and common commands.











Figure 1.1: LabVIEW Dialog Box

The LabVIEW dialog box includes the following components:

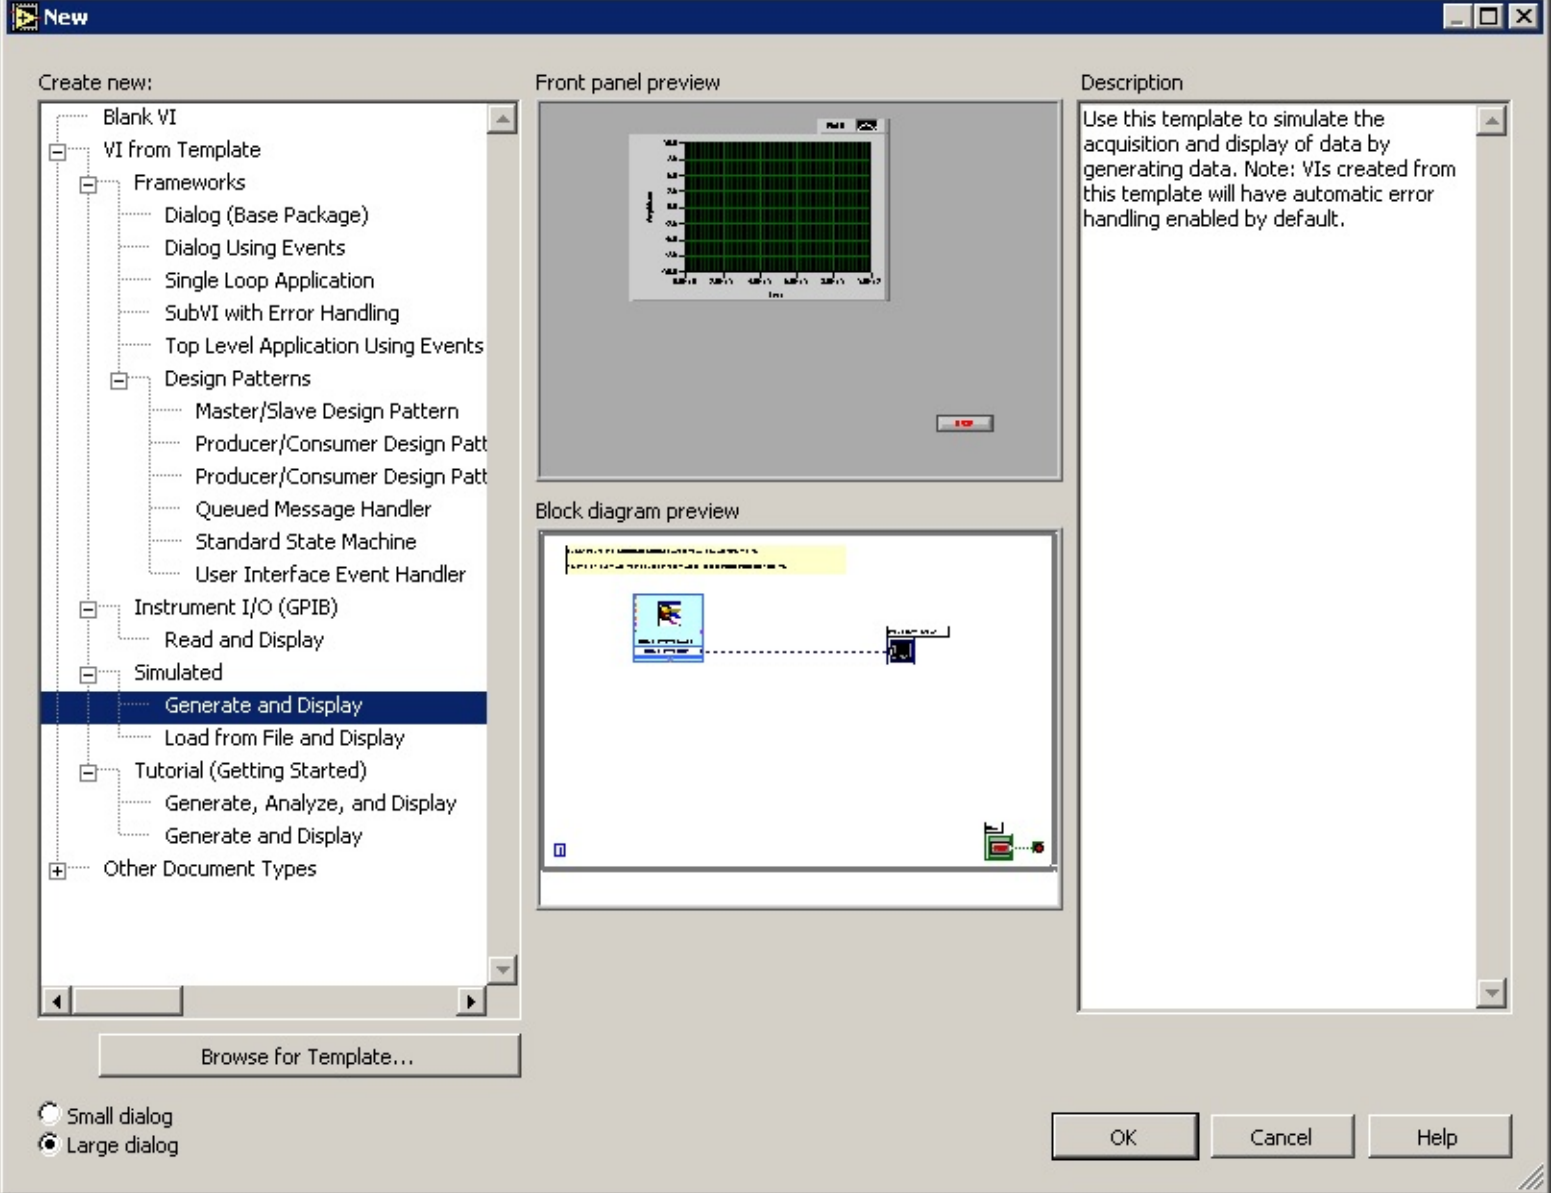
- A menu with standard items such as    .
- A set of buttons for creating and opening VIs, configuring data acquisition devices, and finding helpful information.
 - Click the   button to create a new VI. Click the arrow on the   button to choose to open a blank VI or to open the  dialog box.
 - Click the   button to open an existing VI. Click the arrow on the   button to open recent files.
 - Click the   button to configure your data acquisition devices. Click the arrow on the   button to configure LabVIEW.
 - Click the   button to launch the LabVIEW Help. Click the arrow on the   button for other Help options, including the             .

1.2.1 Creating and Saving a VI

When you click the   button in the       dialog box, the  dialog box appears. You also can select

     to display this dialog box. When you select a template in the      list, previews of the 2This content is available online at <http://cnx.org/content/m12193/1.3/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>



4

CHAPTER 1. INTRODUCTION

VI appear in the **File** menu and the **Tools** palette sections, and a description of the template appears in the **Help** section. Figure 1.2 shows the **File** dialog box and the **File** menu.



File menu **File** menu **File** menu **File** menu **File** menu.

Figure 1.2: New Dialog Box

Click the **File** button to open the template. You also can double-click the name of the template VI in the **File** menu list to open the template. If no template is available for the task you want to create, you can start with a blank VI and create a VI to accomplish the specific task. In the **File** dialog box, click the arrow on the **File** button and select **File** from the shortcut menu or press the **File** keys to open a blank VI.



NOTE:

You also can open a blank VI by selecting   from the    list in the   

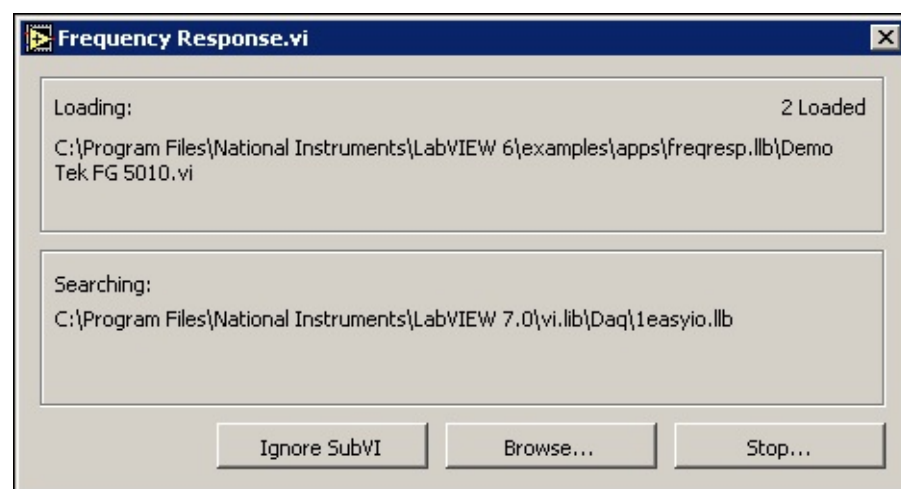
dialog box or by selecting  

1.2.1.1 Open/Templates

Use the    dialog box to create different components in LabVIEW to help you build an application. You can start with a blank VI to write a VI from scratch, or start with a template to simplify the programming.



Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



5

The    dialog box includes the following components:







Create new - Displays templates you can use to start building VIs and other LabVIEW documents.

Select from the following templates and click the   button to start building a VI or other LabVIEW document.

Blank VI - Opens a blank front panel and blank block diagram.

VI from Template - Opens a front panel and block diagram with components you need to build different types of VIs.

Other Document Types - Opens the tools you use to build other LabVIEW objects.

Browse for Template - Displays the    dialog box so you can navigate to a VI, control, or template. If you previously have browsed for and selected a template from this dialog box, use the pull-down menu of the    button to select a template to reopen it.

Front panel preview - Displays the front panel for the VI template you selected in the list.

Block diagram preview - Displays the block diagram for the VI template you selected in the list.

Description - Displays a description of the template you selected in the list if the template includes a description.

1.2.1.2 Opening an Existing VI

You load a VI into memory by selecting

. In the dialog box that appears, navigate to the VI you want to open.

The VIs you edit in this course are located in the directory.

As the VI loads, a status dialog box similar to Figure 1.3 might appear.

Figure 1.3

The section lists the subVIs of the VI as they are loaded into memory. is the

number of subVIs loaded into memory so far. You can cancel the load at any time by clicking the button.

If LabVIEW cannot immediately locate a subVI, it begins searching through all directories specified by the . You can edit the by selecting

and selecting

from the top pull-down menu. The section lists directories or VIs as LabVIEW searches through Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

6

CHAPTER 1. INTRODUCTION

them. You can have LabVIEW ignore a subVI by clicking the button, or you can click the

button to search for the missing subVI.

1.2.1.3 Saving VIs

Select **File > Save**, **File > Save As**, **File > Save As Template**, or **File > Save to Library** from the **File** menu to save VIs as individual files or group several VIs together and save them in a VI library. VI library files end with the extension **.lvlib**.

National Instruments recommends that you save VIs as individual files, organized in directories, especially if multiple developers are working on the same project.

LabVIEW uses the native file dialog boxes so they act similar to other applications on the computer. You can disable this feature by selecting **Tools > Options > Environment > Native File Dialogs**

and selecting **Native File Dialogs** from the top pull-down

menu. If you disable native file dialogs, LabVIEW uses its own platform-independent file dialog boxes with some convenient features, such as providing a list of recent paths and reducing the steps necessary to save VIs in VI libraries.

1.2.1.4 Moving VIs Across Platforms

You can transfer VIs from one platform to another, such as from Mac OS to Windows. LabVIEW automati-

cally translates and recompiles the VIs on the new platform.

Because VIs are files, you can use any file transfer method or utility to move VIs between platforms. You can port VIs over networks using FTP, Z or XModem protocols, or similar utilities. Such network transfers eliminate the need for additional file translation software. If you port VIs using magnetic media, such as floppy disks or a moveable external hard drive, you need a generic file transfer utility program, such as the following:

- **(Windows)** MacDisk and TransferPro transfer Mac OS files to the PC format and vice versa.
- **(Mac OS)** DOS Mounter, MacLink, and Apple File Exchange convert PC files to the Mac OS format and vice versa.
- **(Sun)** PC File System (PCFS) converts PC files to the Sun format and vice versa.

NOTE:

Certain operating system-specific VIs are not portable between platforms, such as DDE






(Dynamic Data Exchange) VIs, ActiveX VIs, and AppleEvents.

Refer to the Porting and Localizing LabVIEW VIs Application Note, available by selecting **Help > Application Notes > Porting and Localizing LabVIEW VIs**

Application Notes > Porting and Localizing LabVIEW VIs

for more information about porting VIs.

1.2.2 Menus







The menus at the top of a VI window contain items common to other applications, such as , , , , and , and other items specific to LabVIEW. Some menu items also list shortcut key combinations.

(Mac OS) The menus appear at the top of the screen.

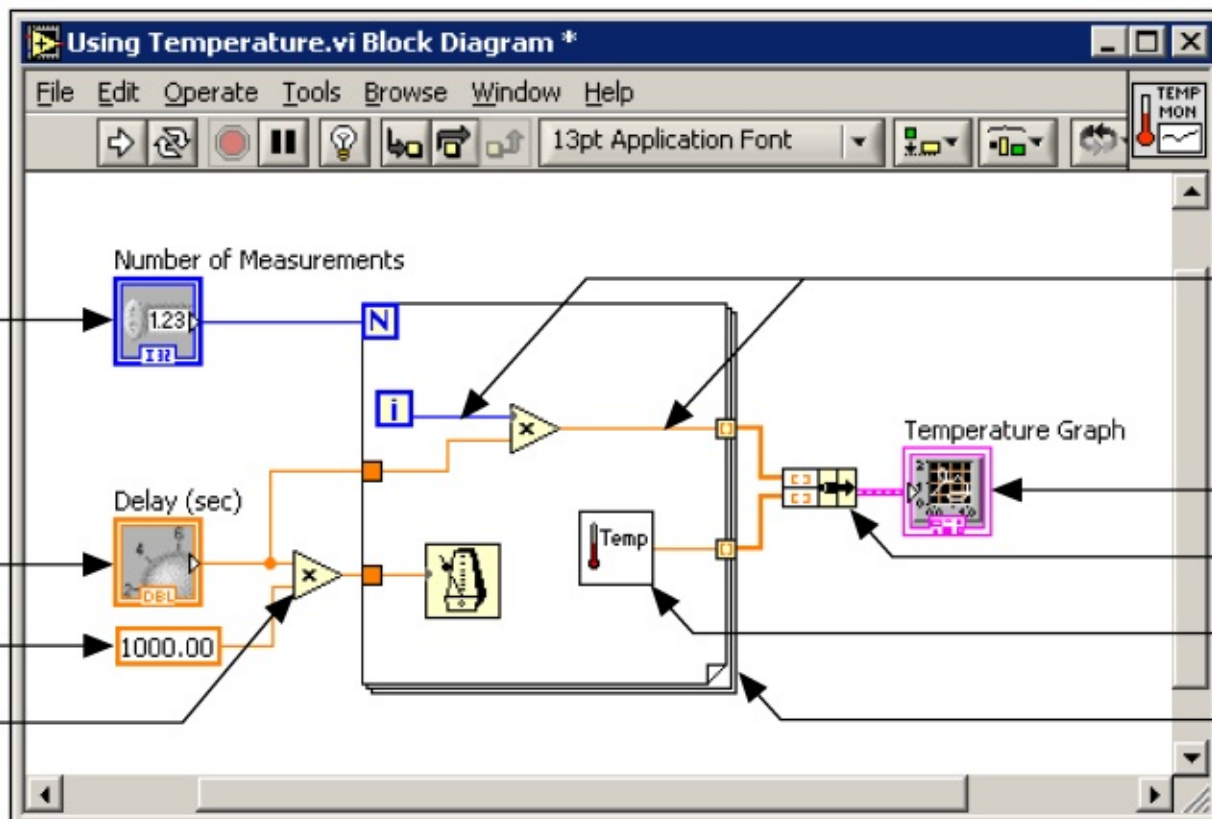
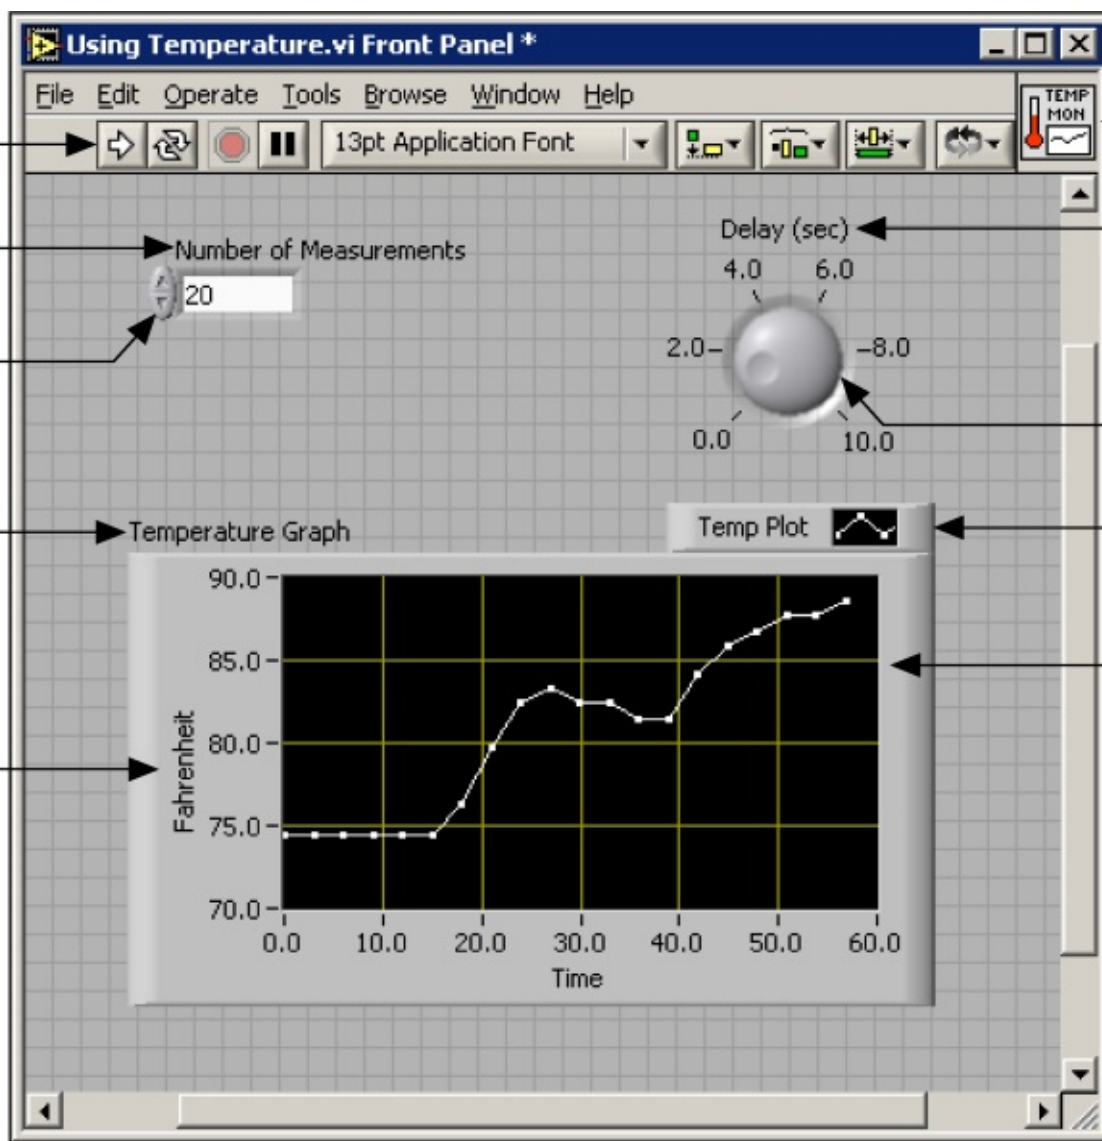
(Windows and UNIX) The menus display only the most recently used items by default. Click the arrows at the bottom of a menu to display all items. You can display all menu items by default by selecting

   and selecting      from the top pull-down menu.

NOTE: Some menu items are unavailable while a VI is in run mode.


- The    menu contains items used for basic file operations, such as opening, closing, saving, and printing files.
- The  menu contains items that allow you to search for and modify LabVIEW files and their components.
- The   menu contains items you use to control the operation of VIs.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



- 1
- 2
- 3
- 2
- 4
- 5
- 6
- 7
- 8

- 9
- 2
- 10
- 11
- 12
- 13
- 14
- 15
- 16
- 17



7

- The menu contains items for configuring LabVIEW, your projects, and your VIs.
- The menu contains items that allow you to view aspects of the current VI and its hierarchy.
- The menu contains items that allow you to configure the appearance of the current windows

and palettes. You also can access the window and view the contents of the clipboard.

- The menu contains items to explain and define LabVIEW features and other components, pro-

vide full LabVIEW documentation, and access National Instruments technical support.

1.2.3 Front Panel and Block Diagram Windows

When you open a blank VI, an untitled front panel window appears. This window displays the front panel and is one of the two LabVIEW windows you use to build a VI. The other window contains the block

diagram. The illustration in Figure 1.4 shows a front panel and its corresponding block diagram with front panel and block diagram components.

Figure 1.4: 1. Toolbar, 2. Owned Label, 3. Numeric Control, 4. Free Label, 5. Numeric Control Terminal, 6. Knob Terminal, 7. Numeric Constant, 8. Multiply Function, 9. Icon, 10. Knob Control, 11. Plot Legend, 12. XY Graph, 13. Wire Data Path, 14. XY Graph Terminal, 15. Bundle Function, 16. SubVI, 17. For Loop Structure

1.2.4 Front Panel Toolbar

Use the toolbar buttons to run and edit a VI. The toolbar in Figure 1.5 appears on the front panel.

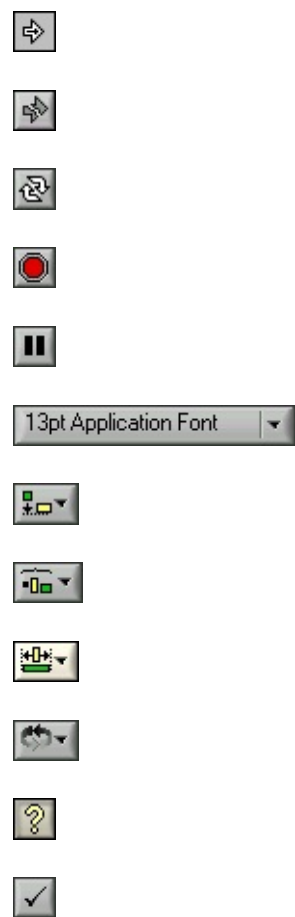
Figure 1.5

Click the button to run a VI. LabVIEW compiles the VI, if necessary. You can run a VI if the

Run button appears as a solid white arrow. The solid white arrow, shown above, also indicates you can use the VI as a subVI if you create a connector pane for the VI.


Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>









8

CHAPTER 1. INTRODUCTION


While the VI runs, the  button appears as shown at left if the VI is a top-level VI, meaning it has no callers and therefore is not a subVI.

If the VI that is running is a subVI, the  button appears as shown at left.

The  button appears broken, shown at left, when the VI you are creating or editing contains errors. If the  button still appears broken after you finish wiring the block diagram, the VI is broken and cannot run. Click this button to display the  window, which lists all errors and warnings.

Click the  button, shown at left, to run the VI until you abort or pause execution.




You also can click the button again to disable continuous running.


While the VI runs, the  button, shown at left, appears. Click this button to stop the VI immediately if there is no other way to stop the VI. If more than one running top-level VI uses the VI, the button is dimmed.


NOTE: Avoid using the  button to stop a VI. Either let the VI complete its data


flow or design a method to stop the VI programmatically. By doing so, the VI is at a known state.


For example, place a button on the front panel that stops the VI when you click it.

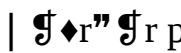





Click the  button, shown at left, to pause a running VI. When you click the  button, LabVIEW highlights on the block diagram the location where you paused execution, and the  button appears red. Click the button again to continue running the VI.



Select the  pull-down menu, shown at left, to change the font settings for the selected portions of the VI, including size, style, and color.



Select the  pull-down menu, shown at left, to align objects along axes, including vertical, top edge, left, and so on.

Select the  pull-down menu, shown at left, to space objects evenly, including gaps, compression, and so on.

Select the  pull-down menu, shown at left, to resize multiple front panel objects to the same size.

Select the  pull-down menu, shown at left, when you have objects that overlap each other and you want to define which one is in front or back of another. Select one of the objects with the Positioning tool and then select from , ,  , and .

Select the  button, shown at left, to toggle the display of the  window.

 appears to remind you that a new value is available to replace an old value. The Enter button disappears when you click it, press the  key, or click the front panel or block diagram workspace.

1.2.5 Block Diagram Toolbar






When you run a VI, buttons appear on the block diagram toolbar that you can use to debug the VI. The toolbar in Figure 1.6 appears on the block diagram.



Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

























Figure 1.6










Click the      button, shown at left, to display an animation of the block dia-

gram execution when you click the   button. see the flow of data through the block diagram. Click the button again to disable execution highlighting.

Click the    button, shown at left, to open a node and pause. When you click the   button again, it executes the first action and pauses at the next action of the subVI or structure. You also can press the   and down arrow keys. Single-stepping through a VI steps through the VI node by node. Each node blinks to denote when it is ready to execute. By stepping into the node, you are ready to single-step inside the node.





Click the    button, shown at left, to execute a node and pause at the next node. You also can press the   and right arrow keys. By stepping over the node, you execute the node without single-stepping through the node.

Click the    button, shown at left, to finish executing the current node and pause. When the VI finishes executing, the    button becomes dimmed. You also can press the   and up arrow keys. By stepping out of a node, you complete single-stepping through the node and go to the next node.

The    button, shown at left, appears if a VI includes a warning and you placed a check-mark in the    s checkbox in the    st window. A warning indicates there is a potential problem with the block diagram, but it does not stop the VI from running.

1.2.6 Palettes

LabVIEW has graphical, floating palettes to help you create and run VIs. The three palettes include the

  s,   s, and s palettes. You can place these palettes anywhere on the screen.

1.2.6.1 Tools Palette

You can create, modify, and debug VIs using the tools located on the floating Tools (Figure 1.7) palette. The

Tools palette is available on both the front panel and the block diagram. A tool is a special operating mode of the mouse cursor. The cursor corresponds to the icon of the tool selected in the Tools palette. Use the tools to operate and modify front panel and block diagram objects.

Select [Erase Copy Paste Undo Redo]



Click the Tools palette icon to display the Tools palette.



NOTE: Press the Ctrl key and right-click to display a temporary version of the Tools palette at the location of the cursor.










Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





Figure 1.7: Tools Palette



If automatic tool selection is enabled and you move the cursor over objects on the front panel or block diagram, LabVIEW automatically selects the corresponding tool from the  palette. You can disable automatic tool selection and select a tool manually by clicking the tool you want on the  palette.

If you want to use the  key to cycle through the four most common tools on the  palette,



click the  button, shown at left, on the  palette to disable automatic tool selection. Press the  keys or click the  button to enable automatic tool selection again. You also can manually select a tool on the  palette to disable automatic tool selection. Press the  or  keys or click the  button on the  palette to enable automatic tool selection again. If automatic tool selection is disabled, you can press the spacebar to switch to the next most useful tool.


Use the  tool, shown at left, to change the values of a control or select the text


within a control. The  tool changes to the icon shown at left when it moves over a text control, such as a numeric or string control.


Use the  tool, shown at left, to select, move, or resize objects. The  tool


changes to resizing handles when it moves over the edge of a resizable object.



Use the  tool, shown at left, to edit text and create free labels. The  tool changes to the following icon when you create free labels.

Use the  tool, shown at left, to wire objects together on the block diagram.

Use the  tool, shown at left, tool to access an object shortcut menu with the left mouse button.

Use the  tool, shown at left, to scroll through windows without using scrollbars.

Use the  tool, shown at left, to set breakpoints on VIs, functions, nodes, wires, and structures to pause execution at that location.

Use the  tool, shown at left, to create probes on wires on the block diagram. Use the  tool to check intermediate values in a VI that produces questionable or unexpected results.



Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>







11

Use the   tool, shown at left, to copy colors for pasting with the   tool.

Use the   tool, shown at left, to color an object. It also displays the current foreground and background color settings.

1.2.6.2 Controls and Functions Palettes

The   palettes contain subpalettes of objects you can use to create a VI. When you click a subpalette icon, the entire palette changes to the subpalette you selected. To use an object on the palettes, click the object and place it on the front panel or block diagram.

















The   palette, shown in Figure 1.8, is available only on the front panel. The   palette contains the controls and indicators you use to build the front panel. Refer to the Front Panel (Section 1.3) section for more information about the using the   palette on the front panel. The controls and indicators located on the   palette depend on the palette view currently selected.

Figure 1.8: Controls Palette

The   palette, shown in the Figure 1.9, is available only on the block diagram. The   palette contains the VIs and functions you use to build the block diagram. Refer to the Block Diagram (Section 1.4) section of this lesson for more information about using the   palette on the block diagram. The VIs and functions located on the   palette depend on the palette view currently selected. The VIs and functions are located on subpalettes based on the types of VIs and functions.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



12

CHAPTER 1. INTRODUCTION

Figure 1.9: Functions Palette

1.2.6.3 Changing Palette Views

Use the button on the or palette toolbar to change to another palette view or format:

1.

Click the button, shown at left, on the or palette toolbar to display the / P page of the dialog box.

2. Select a palette view from the P pull-down menu.

3. Select a format from the pull-down menu, such as , , | , or

| .

4. Click the button. The and palettes change to the palette view and format you selected.

1.2.6.4 Searching for Controls, VIs, and Functions

Use the following navigation buttons on the and palettes to navigate and search for controls, VIs, and functions:

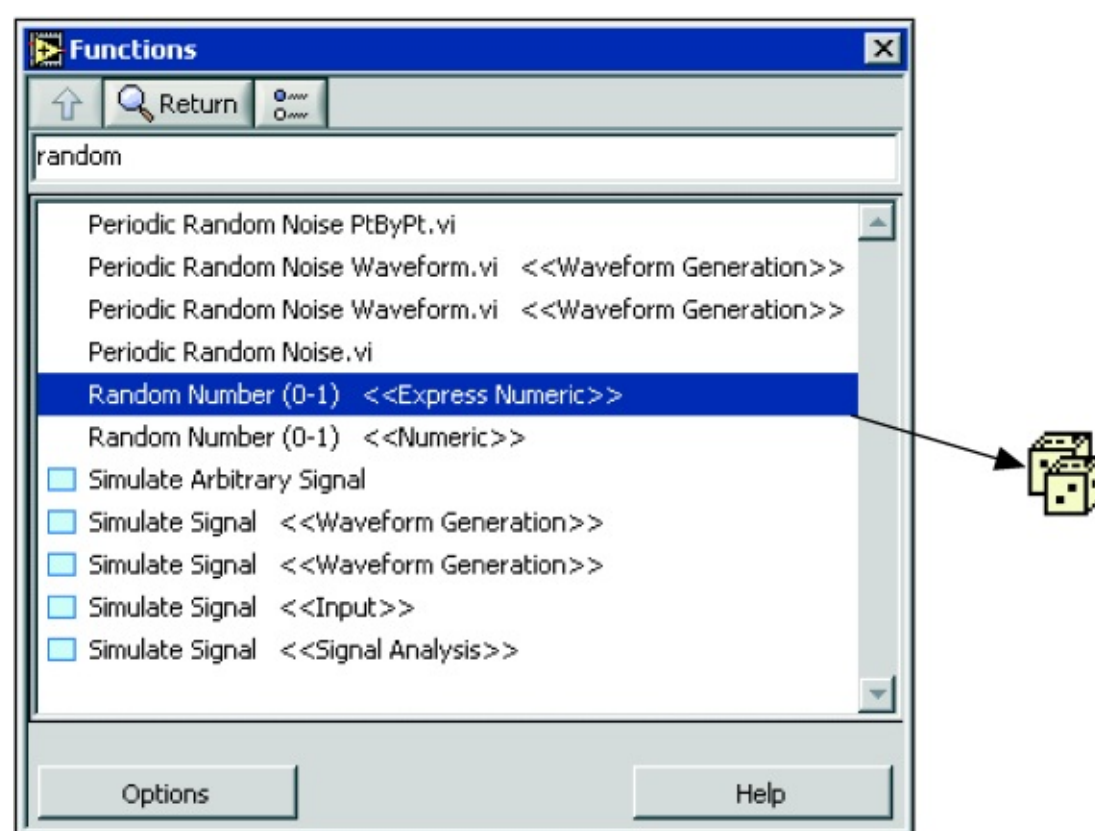
Up to Owning Palette -

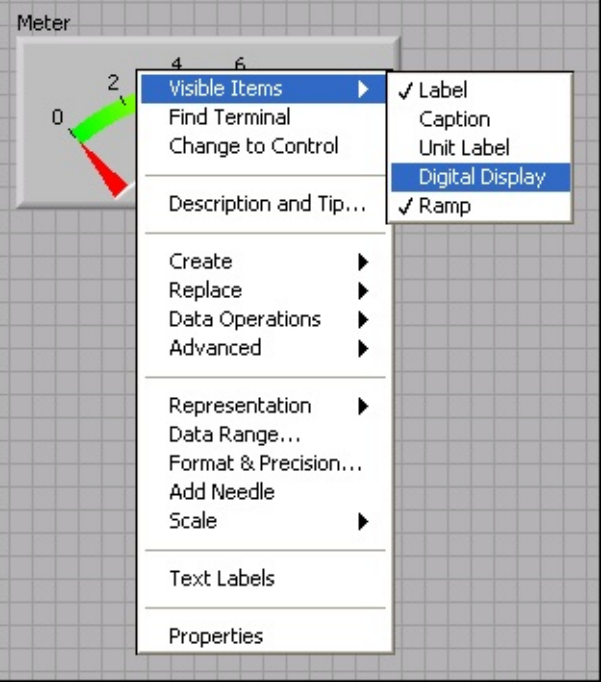
Navigates up one level in the palette hierarchy.

Search -

Changes the palette to search mode. In search mode, you can perform text-based searches to locate controls, VIs, or functions on the palettes. For example, if you want to find the `random` function, click the `random` button on the `random` palette toolbar and start typing `random` in the text box at the top of the palette. LabVIEW lists all matching items that either start with or contain the text you typed. You can click one of the search results and drag it to the block diagram, as shown in Figure 1.10.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





13

Figure 1.10

Double-click the search result to highlight its location on the palette. You then can click the

button to view the hierarchy of where the object resides.

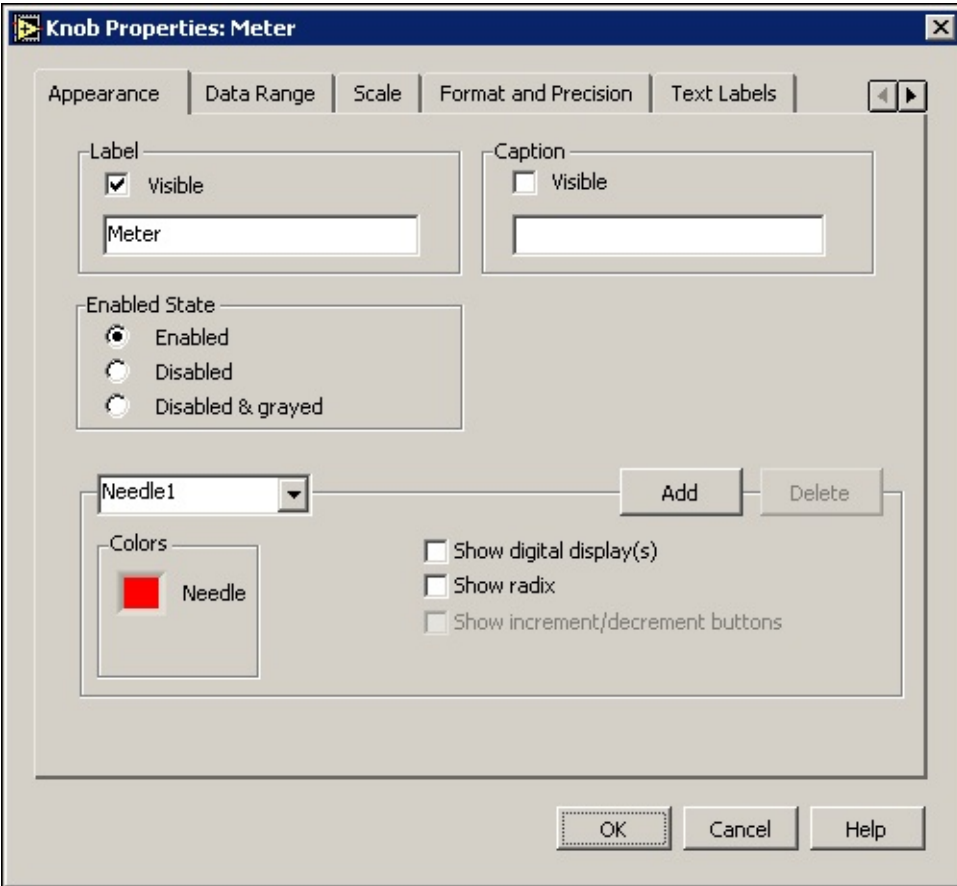
1.2.7 Shortcut Menus

The most often-used menu is the object shortcut menu. All LabVIEW objects and empty space on the front panel and block diagram have associated shortcut menus. Use the shortcut menu items to change the look or behavior of front panel and block diagram objects. To access the shortcut menu, right-click the object, front panel, or block diagram. The shortcut menu for a meter is shown in Figure 1.11.

Figure 1.11: Meter Shortcut Menu

1.2.7.1 Property Dialog Boxes

Front panel objects also have property dialog boxes that you can use to change the look or behavior of front panel objects. Right-click a front panel object and select from the shortcut menu to access the property dialog box for an object. Figure 1.12 shows the property dialog box for the meter in the previous Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



14

CHAPTER 1. INTRODUCTION

figure. The options available on the property dialog box for an object are similar to the options available on the shortcut menu for that object.

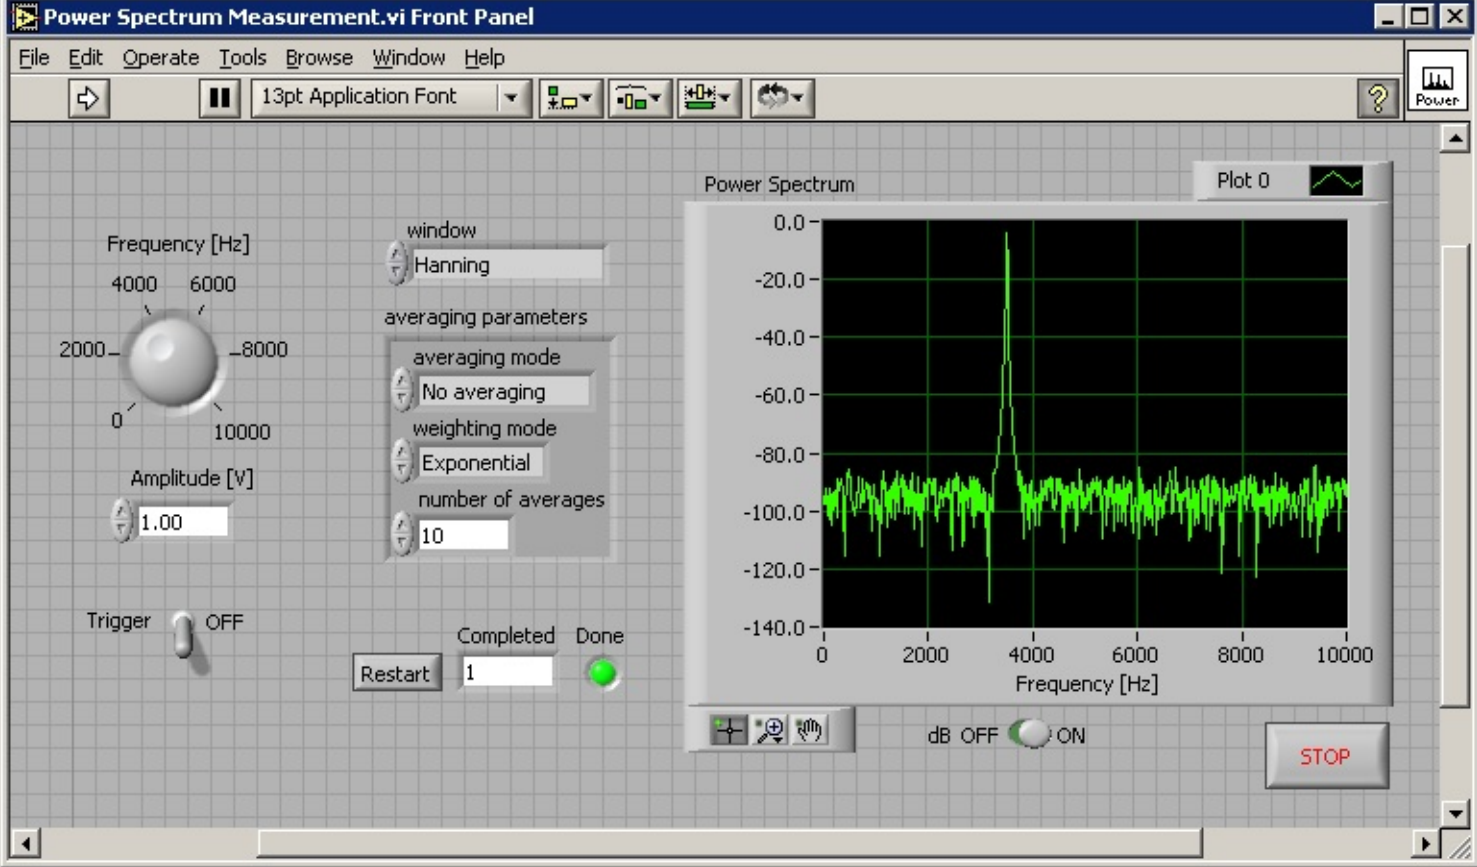
Figure 1.12: Meter Property Dialog Box

1.3 Front Panel3

The front panel is the user interface of the VI. Figure 1.13 shows an example of a front panel.

3This content is available online at <<http://cnx.org/content/m12194/1.1/>>.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



15

Figure 1.13: Example of a Front Panel

1.3.1 Controls and Indicators

You build the front panel with controls and indicators, which are the interactive input and output terminals of the VI, respectively. Controls are knobs, push buttons, dials, and other input devices. Indicators are graphs, LEDs, and other displays. Controls simulate instrument input devices and supply data to the

block diagram of the VI. Indicators simulate instrument output devices and display data the block diagram acquires or generates.


1.3.1.1 Controls Palette

The palette is available only on the front panel. The palette contains the controls and indicators you use to create the front panel. Select





or right-click the

front panel workspace to display the palette. Tack down the palette by clicking the thumbtack on the top left corner of the palette. By default, the palette starts in the Express view.

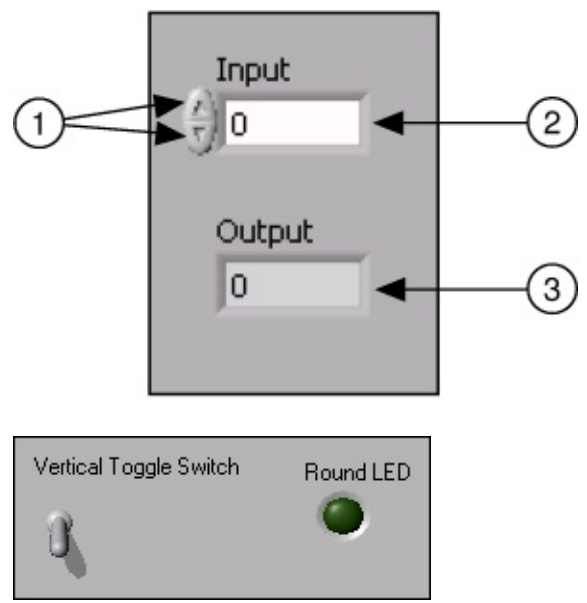
The Express palette view includes subpalettes on the top level of the and palettes that contain Express VIs and other objects you need to build common measurement

applications. The 

s and  s subpalettes contain the complete set of built-in controls, indicators, VIs, and functions.

The  palette view includes subpalettes on the top level of the s and s palettes that contain the complete set of built-in controls, indicators, VIs, and functions. The s subpalettes contain Express VIs and other objects you need to build common measurement applications.









Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



16

CHAPTER 1. INTRODUCTION

NOTE:



In the s palette view, toolsets and modules do not install subpalettes on the top level of the s and s palettes. Instead, toolsets and modules install on the s s and  s subpalettes. In the  palette view, toolsets and modules install subpalettes on the top level.





Click the s button on the s or s palette to change to another palette view or format.

1.3.1.1.1 Numeric Controls and Indicators



The two most commonly used numeric objects are the numeric control and the numeric indicator, as shown in Figure 1.14.

Figure 1.14: 1. Increment and Decrement Buttons, 2. Numeric Control, 3. Numeric Indicator

To enter or change values in a numeric control, click the  and  buttons with the

 tool or double-click the number with either the  tool or the  tool, type a new number, and press the  key.

1.3.1.1.2 Boolean Controls and Indicators

Use Boolean controls and indicators to enter and display Boolean ( or ) values. Boolean objects simulate switches, push buttons, and LEDs. The most common Boolean objects are the vertical toggle

switch and the round LED, as shown in Figure 1.15.

Figure 1.15

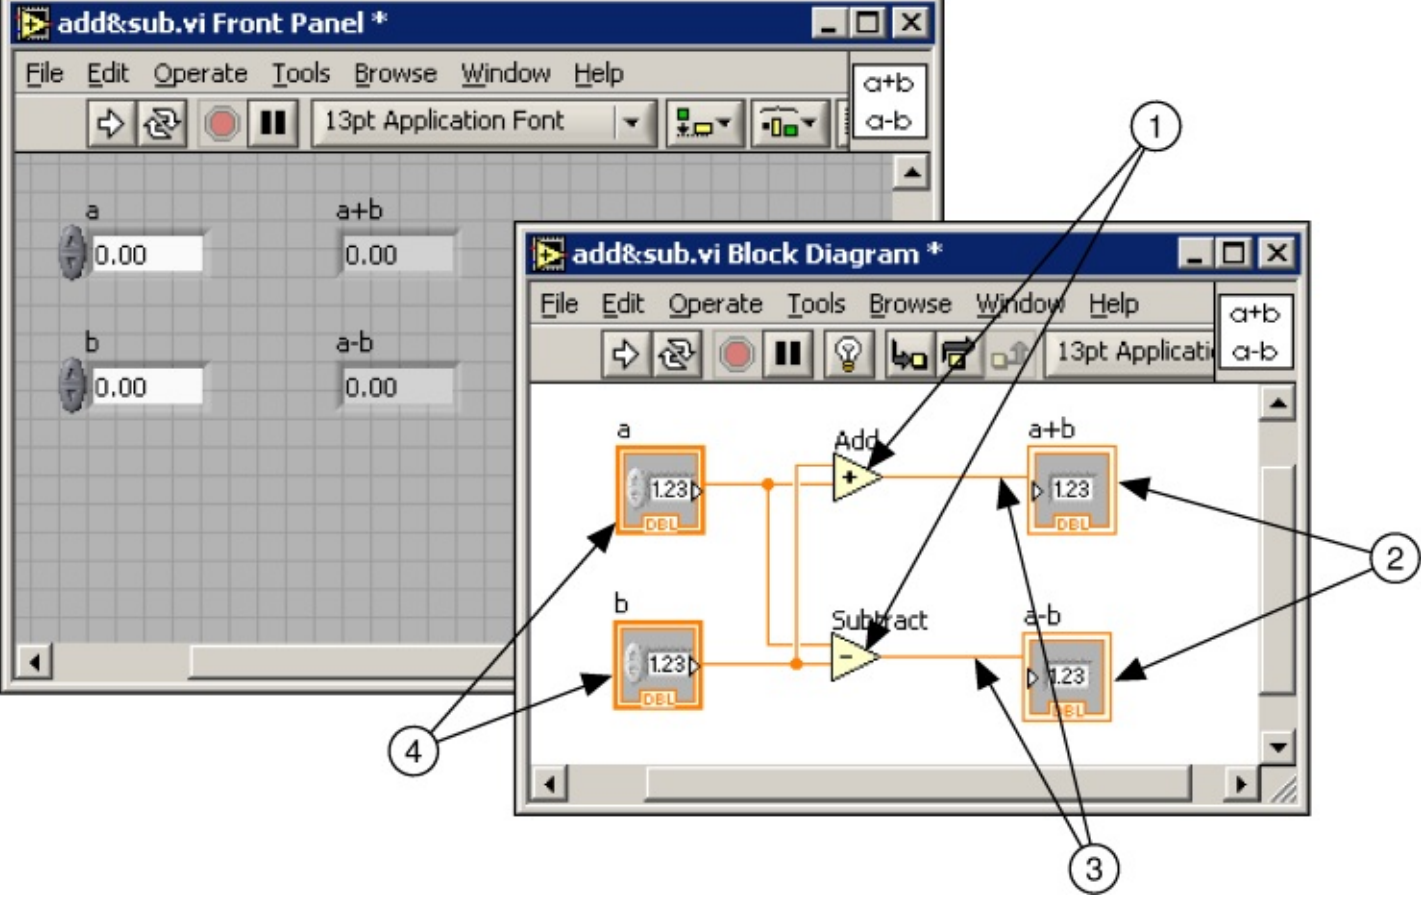
1.4 Block Diagram⁴

After you build the front panel, you add code using graphical representations of functions to control the front panel objects. The block diagram contains this graphical source code. Front panel objects appear as terminals, on the block diagram. Block diagram objects include terminals, subVIs, functions, constants, structures, and wires, which transfer data among other block diagram objects.

The VI in Figure 1.16 shows several primary block diagram objects-nodes, terminals, and wires.

⁴This content is available online at <http://cnx.org/content/m12195/1.2/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>



17

Figure 1.16: 1. Nodes, 2. Indicator Terminals, 3. Wires, 4. Control Terminals

1.4.1 Functions Palette

The palette is available only on the block diagram. The palette contains the VIs and functions you use to build the block diagram. Select { }

P' or right-click the

block diagram workspace to display the palette. Tack down the palette by clicking the thumbtack on the top left corner of the palette. By default, the palette starts in the Express view.

1.4.2 Express VIs, VIs, and Functions

LabVIEW uses colored icons to distinguish between Express VIs, VIs, and functions on the block diagram.

By default, icons for Express VIs appear on the block diagram as expandable nodes with icons surrounded by a blue field. Icons for VIs have white backgrounds, and icons for functions have pale yellow backgrounds.

By default, most functions and VIs on the block diagram appear as icons that are not expandable, unlike Express VIs.

1.4.2.1 Express VIs

Use Express VIs for common measurement tasks. Express VIs are nodes that require minimal wiring be-

cause you configure them with dialog boxes. You can save the configuration of an Express VI as a subVI.

Refer to *Building the Block Diagram*, of the LabVIEW User Manual for more information about creating

subVIs from Express VIs.

1.4.2.2 VIs

When you place a VI on the block diagram, LabVIEW considers the VI to be a subVI. When you double-

click a subVI, its front panel and block diagram appear, rather than a dialog box in which you can configure options. The front panel includes controls and indicators. The block diagram includes wires, front panel icons, functions, possibly subVIs, and other LabVIEW objects.

The upper right corner of the front panel and block diagram displays the icon for the VI. This is the icon that appears when you place the VI on the block diagram.

You can create a VI to use as a subVI. Refer to *Modular Programming* (Section 2.1) for more information about creating VIs and configuring them as subVIs.

1.4.2.3 Functions

Functions are the fundamental operating elements of LabVIEW. Functions do not have front panels or block diagrams but do have connector panes. Double-clicking a function only selects the function.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

18



CHAPTER 1. INTRODUCTION

1.4.3 Nodes


Nodes are objects on the block diagram that have inputs and/or outputs and perform operations when a VI runs. They are analogous to statements, operators, functions, and subroutines in text-based programming languages. Nodes can be functions, subVIs, or structures. Structures are process control elements, such as

*s structures, *r ▲♦♦clubs, or { ♥✍️🌀 } ▲♦♦clubs. The * and |✉️'t functions in Figure 1.16 are function nodes.


1.4.3.1 Expandable Nodes versus Icons

You can display VIs and Express VIs as icons or as expandable nodes. Expandable nodes appear as icons surrounded by a colored field. SubVIs appear with a yellow field, and Express VIs appear with a blue field. Use icons, such as the  if you want to conserve space on the block diagram. Use expandable nodes, such as the  VI expandable node to make

wiring easier and to aid in documenting block diagrams. By default, subVIs appear as icons on the block diagram, and Express VIs appear as expandable nodes.

To display a subVI or Express VI as an expandable node, right-click the subVI or Express VI and select  from the shortcut menu to remove the checkmark.

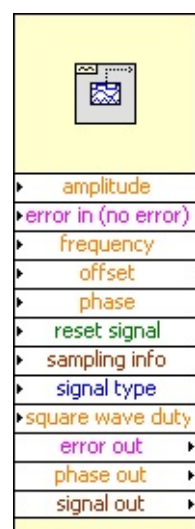
You can resize the expandable node to make wiring even easier, but it also takes a large amount of space on the block diagram. Complete the following steps to resize a node on the block diagram.

1. Move the  tool over the node. Resizing handles appear at the top and bottom of the node.
2. Move the cursor over a resizing handle to change the cursor to the resizing cursor.
3. Use the resizing cursor to drag the border of the node down to display additional terminals.
4. Release the mouse button.

To cancel a resizing operation, drag the node border past the block diagram window before you release the mouse button.

Figure 1.17 shows the  VI as a resized expandable node.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





19

Figure 1.17

NOTE: If you display a subVI or Express VI as an expandable node, you cannot display the terminals for that node and you cannot enable database access for that node.

1.4.3.2 Terminals

















Front panel objects appear as terminals on the block diagram. The terminals represent the data type of the control or indicator. You can configure front panel controls or indicators to appear as icon or data type terminals on the block diagram. By default, front panel objects appear as icon terminals. For example, a knob icon terminal, shown at left, represents a knob on the front panel. The DBL at the bottom of the terminal represents a data type of double-precision, floating-point numeric. To display a terminal as a data type on the block diagram, right-click the terminal and select from the shortcut menu to remove the checkmark. A DBL data type terminal, shown above at left, represents a double-precision, floating-point numeric control or indicator.





















Terminals are entry and exit ports that exchange information between the front panel and block diagram. Terminals are analogous to parameters and constants in text-based programming languages. Types of terminals include control or indicator terminals and node terminals. Control and indicator terminals belong to front panel controls and indicators. Data you enter into the front panel controls (a and b in Figure 1.16) enter the block diagram through the control terminals. The data then enter the and functions. When the and functions complete their internal calculations, they produce new Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>




20


data values. The data flow to the indicator terminals, where they exit the block diagram, reenter the front panel, and appear in front panel indicators ($a + b$ and $a - b$ in Figure 1.16). The terminals in Figure 1.16

belong to four front panel controls and indicators. The connector panes of the  and  functions, shown in this media, have three node terminals. To display the terminals of the function on the block diagram, right-click the function node and select               from the shortcut menu.

                    s from the shortcut menu.

1.4.3.3 Wires

You transfer data among block diagram objects through wires. Wires are analogous to variables in text-based programming languages. In Figure 1.16, wires connect the control and indicator terminals to the 

and  functions. Each wire has a single data source, but you can wire it to many VIs and functions that read the data. Wires are different colors, styles, and thicknesses, depending on their data types. A broken wire appears as a dashed black line with a red X in the middle. The examples in Table 1.1 are the most common wire types.

Wire Type

Scalar

1D Array

2D Array

Color

Numeric

Orange

(floating-point),

Blue (integer)

Boolean

Green

String

Pink

Table 1.1

In LabVIEW, you use wires to connect multiple terminals together to pass data in a VI. The wires must be connected to inputs and outputs that are compatible with the data that is transferred with the wire. For example, you cannot wire an array output to a numeric input. In addition the direction of the wires must be correct. The wires must be connected to only one input and at least one output. For example, you cannot wire two indicators together. The components that determine wiring compatibility include the data type of the control and/or indicator and the data type of the terminal.

1.4.3.3.1 Data Types

Data types indicate what objects, inputs, and outputs you can wire together. For example, a switch has a green border so you can wire a switch to any input with a green label on an Express VI. A knob has an orange border so you can wire a knob to any input with an orange label. However, you cannot wire an orange knob to an input with a green label. Notice the wires are the same color as the terminal.


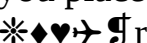
The dynamic data type stores the information generated or acquired by an Express VI. The

dynamic data type appears as a dark blue terminal, shown at left. Most Express VIs accept and/or return the dynamic data type. You can wire the dynamic data type to any indicator or input that accepts numeric, waveform, or Boolean data. Wire the dynamic data type to an indicator that can best present the data.

Indicators include a graph, chart, or numeric indicator.

Most other VIs and functions in LabVIEW do not accept the dynamic data type. To use a built-in VI or function to analyze or process the data the dynamic data type includes, you must convert the dynamic data type.

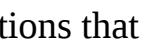
 Express VI, shown at left, to


convert the dynamic data type to numeric, Boolean, waveform, and array data types for use with other VIs and functions. When you place the  Express VI on the block diagram, the  Express VI

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

21

The  dialog box appears. The  dialog box displays op-

tions that let you specify how you want to format the data that the  Express VI returns.

When you wire a dynamic data type to an array indicator, LabVIEW automatically places the  Express VI

on the block diagram. Double-click the  Express VI

✱'t' Ex-

press VI to open the ✱♦♥☞ ☞✉r Ⓝ ✱♦♥→ Ⓝrt ☞r♦♠ ✱②♥'♠☞ " ✱'t' dialog box to control how the data appears

in the array.

Use the ✱♦♥→ Ⓝrt t♦ ✱②♥'♠☞ " ✱'t' Express VI to convert numeric, Boolean, waveform, and array data

types to the dynamic data type for use with Express VIs. When you place the ✱♦♥→ Ⓝrt t♦ ✱②♥'♠☞ " ✱'t'

Express VI on the block diagram, the ✱♦♥☞ ☞✉r Ⓝ ✱♦♥→ Ⓝrt t♦ ✱②♥'♠☞ " ✱'t' dialog box appears. Use this

dialog box to select the kind of data to convert to the dynamic data type.

1.4.3.3.2 Automatically Wiring Objects

LabVIEW automatically wires objects as you place them on the block diagram. You also can automatically wire objects already on the block diagram. LabVIEW connects the terminals that best match and leaves terminals that do not match unconnected.

As you move a selected object close to other objects on the block diagram, LabVIEW draws temporary wires to show you valid connections. When you release the mouse button to place the object on the block diagram, LabVIEW automatically connects the wires.

Toggle automatic wiring by pressing the spacebar while you move an object using the P♦s ☞t ☞♦♥☞ ☞☞ tool.

You can adjust the automatic wiring settings by selecting | ♦♦☞s

☞♣t ☞♦♥s and selecting ✱☞♦☞☞☞ ☞☞☞'☞r'♠

from the top pull-down menu.

1.4.3.3.3 Manually Wiring Objects

When you pass the { ☞r☞☞☞☞ tool over a terminal, a tip strip appears with the name of the terminal. In addition, the terminal blinks in the ✱♦♥t Ⓝrt ☞ ☞☞☞☞☞☞ window and on the icon to help you verify that you are wiring to the correct terminal.

1.5 Acquiring a Signal VI5

Exercise 1.5.1

In the following exercise, you will build a VI that generates a signal and displays that signal in

a graph. LabVIEW provides templates containing information from which you can build a VI.

These templates help you get started with LabVIEW.

Complete the following steps to create a VI that generates a signal and displays it on the front panel.

1. Launch LabVIEW.

2. In the **Start** dialog box that appears, shown in Figure 1.18, click the **Open Recent** button to display the **Open Recent** dialog box.

5This content is available online at <<http://cnx.org/content/m12196/1.3/>>.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



22

CHAPTER 1. INTRODUCTION

Figure 1.18

3. Select **Open Recent** in the **Start** dialog box.

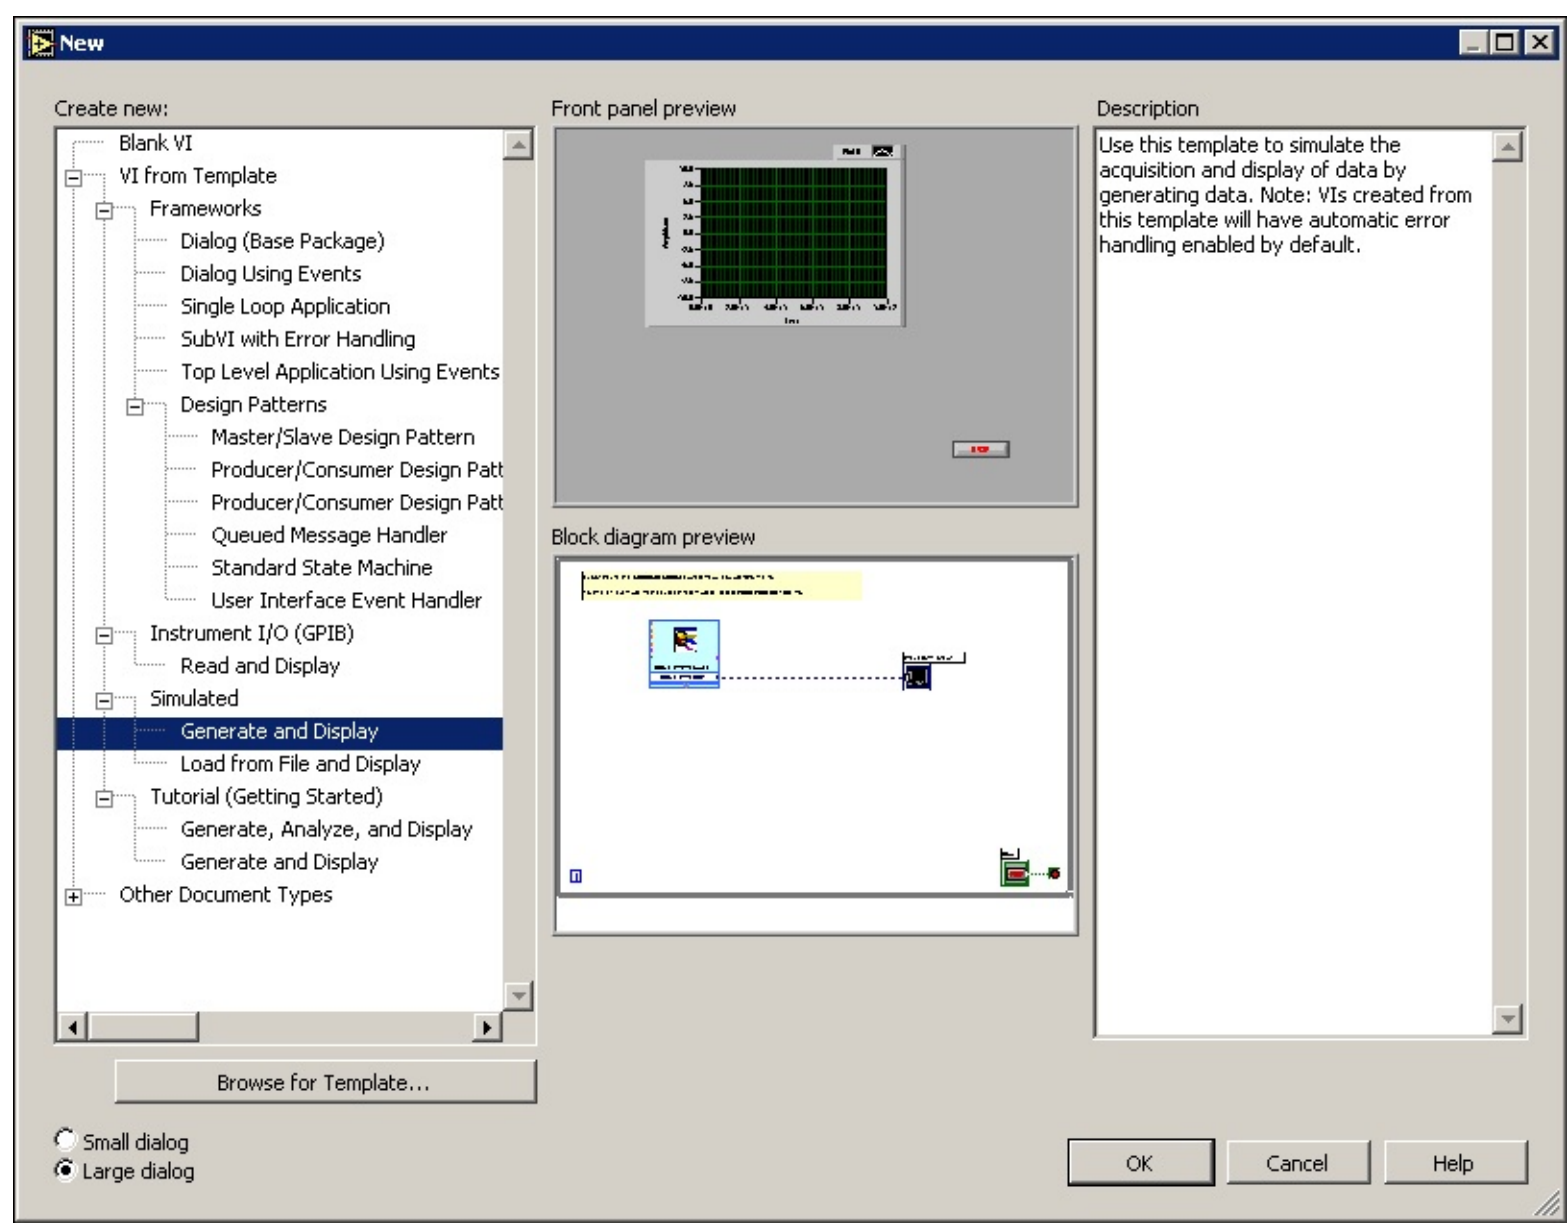
Open Recent in the **Start** dialog box.

Open Recent list. This template VI generates and displays a signal. Notice that previews of

the template VI appear in the *r♦♥t ♣'♥♣ ♣r♣→♣♣ and the *♣♦“♣” ♣'♥♣♣r♣→♣♣ sec-

tions. The Figure 1.19 shows the ♦♣♣ dialog box and the •♣♥♣r't♣ '♥" *♣♣♣'② t♣♣♣'t♣ VI.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



23

Figure 1.19

4. Click the ♦□ button to open the template. You also can double-click the name of the template VI in the *r♣'t♣ ♥♣♣ list to open the template.

5. Examine the front panel of the VI. The user interface, or front panel, appears with a gray background and includes controls and indicators. The title bar of the front panel indicates that this window is the front panel for the **Front Panel** VI.

NOTE:

If the front panel is not visible, you can display the front panel by selecting

{ **View Front Panel**.

6. Examine the block diagram of the VI. The block diagram appears with a white background and includes VIs and structures that control the front panel objects. The title bar of the block diagram indicates that this window is the block diagram for the **Front Panel** VI.

NOTE:

If the block diagram is not visible, you can display the block diagram by selecting

{ **View Block Diagram**.

7.

On the front panel toolbar, click the **Simulate Signal** button, shown at left. Notice that a sine wave appears on the graph.

8.

Stop the VI by clicking the **Stop** button, shown at left, on the front panel.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



24


CHAPTER 1. INTRODUCTION

1.5.1 Adding a Control to the Front Panel





Controls on the front panel simulate the input devices on a physical instrument and supply data to the block diagram of the VI. Many physical instruments have knobs you can turn to change an

input value. Complete the following steps to add a knob control to the front panel.


TIP: Throughout these exercises, you can undo recent edits by selecting  or pressing

 or pressing


the  keys.

1. If the  palette is not visible on the front panel, select {   

 to display it.






2. Move the cursor over the icons on the  palette to locate the  

palette. Notice that when you move the cursor over icons on the  palette, the name

of that subpalette appears in the gray space above all the icons on the palette. When you idle

the cursor over any icon on any palette, the full name of the subpalette, control, or indicator

appears.

3. Click the    icon to access the   palette.

4. Select the knob control on the   palette and place it on the front panel to the

left of the waveform graph. You will use this knob in a later exercise to control the amplitude

of a signal.

5. Select

  and save this VI as  "q r '    in the

     {  "s "s ■ directory.

NOTE:

Save all the VIs you edit or create in this course in the       {

 "s "s ■ directory.

1.5.2 Changing the Signal Type

The block diagram has a blue icon labeled   . This icon represents the   

 Express VI. The    Express VI simulates a sine wave by default.

Complete

the following steps to change this signal to a sawtooth wave.

1. Display the block diagram by selecting { }

or by clicking the block diagram.

Notice the Express VI, shown in this media.

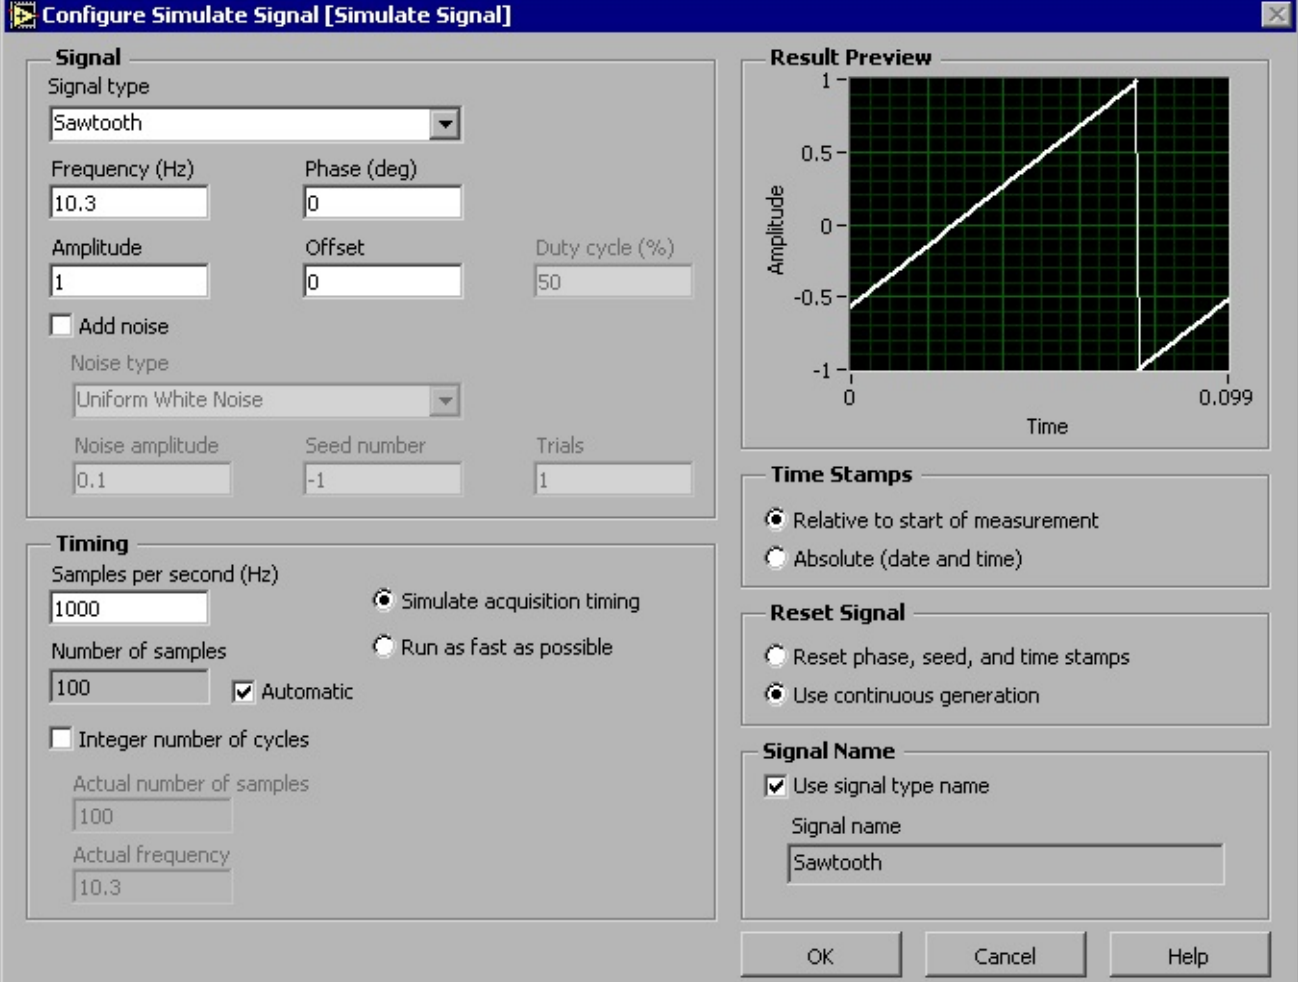
An Express VI is a component of the block diagram that you can configure to perform common measurement tasks. The Express VI simulates a signal based on the configuration that you specify.

2. Right-click the Express VI and select from the shortcut menu to display the dialog box.

3. Select from the pull-down menu. Notice that the waveform on the graph in the section changes to a sawtooth wave. The dialog box







should appear similar to Figure 1.20.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>






25

Figure 1.20



4. Click the  button to apply the current configuration and close the  dialog box.
5. Move the cursor over the down arrows at the bottom of the  Express VI.
6. When a double-headed arrow appears, shown at left, click and drag the border of the Express VI until the  input appears. Notice how you expanded the  Express VI to display a new input. Because the  input appears on the block

diagram, you can configure the amplitude of the sawtooth wave on the block diagram. In

Figure 1.20, notice how  is an option in the  dialog



box. When inputs, such as , appear on the block diagram and in the configuration dialog box, you can configure the inputs in either location.



1.5.3 Wiring Objects on the Block Diagram

To use the knob control to change the amplitude of the signal, you must connect the two objects on the block diagram. Complete the following steps to wire the knob to the  input on the  Express VI.


Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





Move the cursor over the  terminal, shown at left, until the  tool appears.

Notice how the cursor becomes an arrow, or the  tool, shown in this media. Use the  tool to select, position, and resize objects.

2.


Click the  terminal to select it, then drag the terminal to the left of the


 Express VI. Make sure the  terminal is inside the loop, shown in this media. The terminals are representations of front panel controls and indicators. Terminals


are entry and exit ports that exchange information between the front panel and block diagram.

3. Deselect the  terminal by clicking a blank space on the block diagram.

4.


Move the cursor over the arrow of the  terminal, shown in this media.

Notice how the cursor becomes a wire spool, or the  tool, shown at left. Use the

 tool to wire objects together on the block diagram.

NOTE: The cursor does not switch to another tool while an object is selected.

5.

When the  tool appears, click the arrow and then click the

 input of the  Express VI, shown in this media, to wire the two



objects together. Notice that a wire appears and connects the two objects. Data flows along

this wire from the terminal to the Express VI.

6. Select 

 to save this VI.

1.5.4 Running the VI


Running a VI executes your solution. Complete the following steps to run the  ' 

 VI.

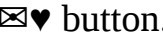
1. Display the front panel by selecting 

 or by clicking the front

panel.

TIP: Press the  keys to switch from the front panel to the block diagram or from the

block diagram to the front panel.

2. Click the  button.

3. Move the cursor over the knob control.

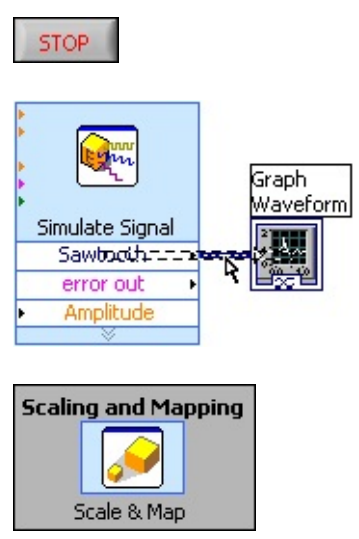
Notice how the cursor becomes a hand, or the

✦♣♠ tool, shown at left. Use the ✦♣♠ tool to change the value of a control or select the text within a control.

4. Using the ✦♣♠ tool, turn the knob to adjust the amplitude of the sawtooth wave. Notice how the amplitude of the sawtooth wave changes as you turn the knob. Also notice that the y-axis on the graph autoscales to account for the change in amplitude.

To indicate

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



27

that the VI is running, the | ✦♥ button changes to a darkened arrow, shown at left. You cannot edit the front panel or block diagram while the VI runs.

5.

Click the ♠♣ button, shown at left, to stop the VI.


NOTE: Although ✦♥ button looks like a stop button, the ✦♥ button does not always properly close the VI. National Instruments recommends stopping your VIs using the ♠♣ button on the front panel. Use the ✦♥ button only when errors prevent you from terminating the application using the ♠♣ button.



1.5.5 Modifying the Signal


Complete the following steps to add scaling to the signal and display the results in the graph on


the front panel.

1.

On the block diagram, use the    tool to double-click the wire

that connects the  Express VI to the  terminal shown in this media.

2. Press the  key to delete this wire.

3. If the  palette is not visible on the block diagram, select  


to display it.


4.

Select the  Express VI, shown at left, on the 

palette and place it on the block diagram inside the loop between the

 Express VI and the  terminal. If there is no room between

the Express VI and the terminal, move the  terminal to the right. Notice that

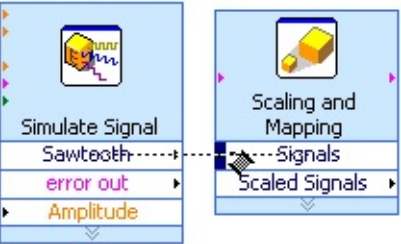
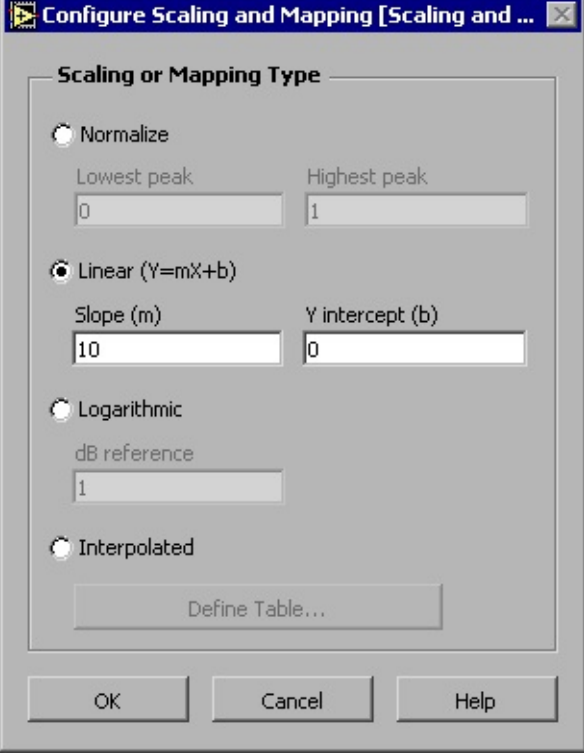
the  dialog box automatically opens when you place the

Express VI on the block diagram.

5. Define the value of the scaling factor by entering 10 in the  text box. The 

dialog box should appear similar to Figure 1.21.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



28


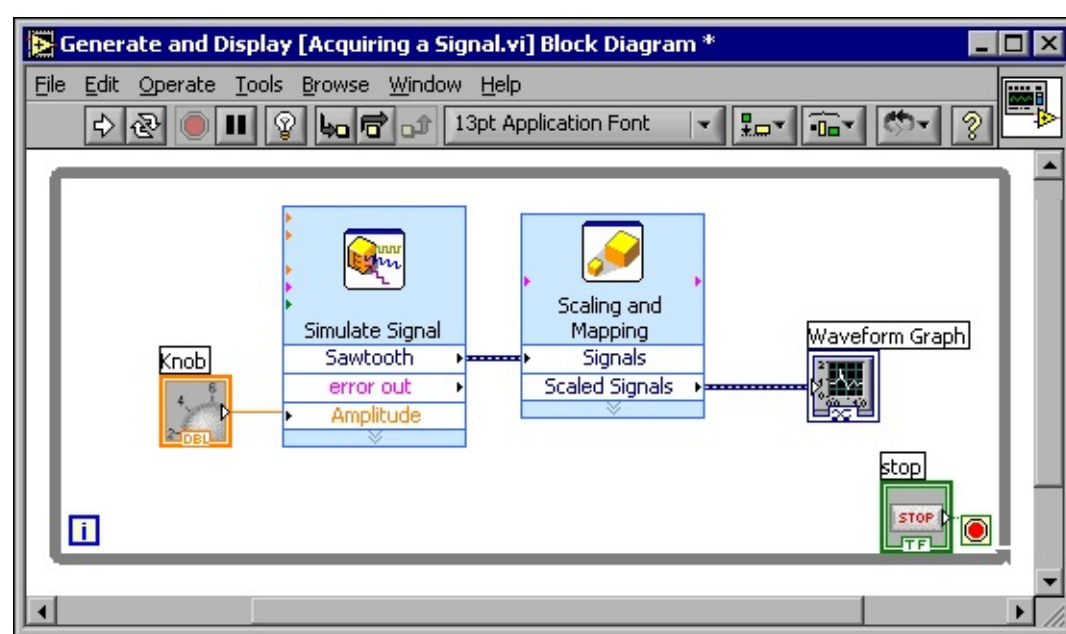
CHAPTER 1. INTRODUCTION

Figure 1.21

6. Click the button to apply the current configuration and close the dialog box.
7. Move the cursor over the arrow on the output of the Express VI.
8. When the Wiring tool appears, click the arrow and then click the arrow on the input of the Express VI, shown in this media, to wire the two objects together.
9. Using the tool, wire the output of the Express VI to the terminal. Notice the wires connecting the Express VIs and

terminals. The arrows on the Express VIs and terminals indicate the direction that the data flows along these wires. The block diagram should appear similar to Figure 1.22.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



29

Figure 1.22

NOTE: The terminals in the block diagram are set to display as icons. To display a terminal as a data type on the block diagram, right-click the terminal and select from the shortcut menu to remove the checkmark.

10. Select


to save this VI.

1.5.6 Displaying Two Signals on the Graph

To compare the signal generated by the Express VI and the signal modified by the Express VI on the same graph, use the function.

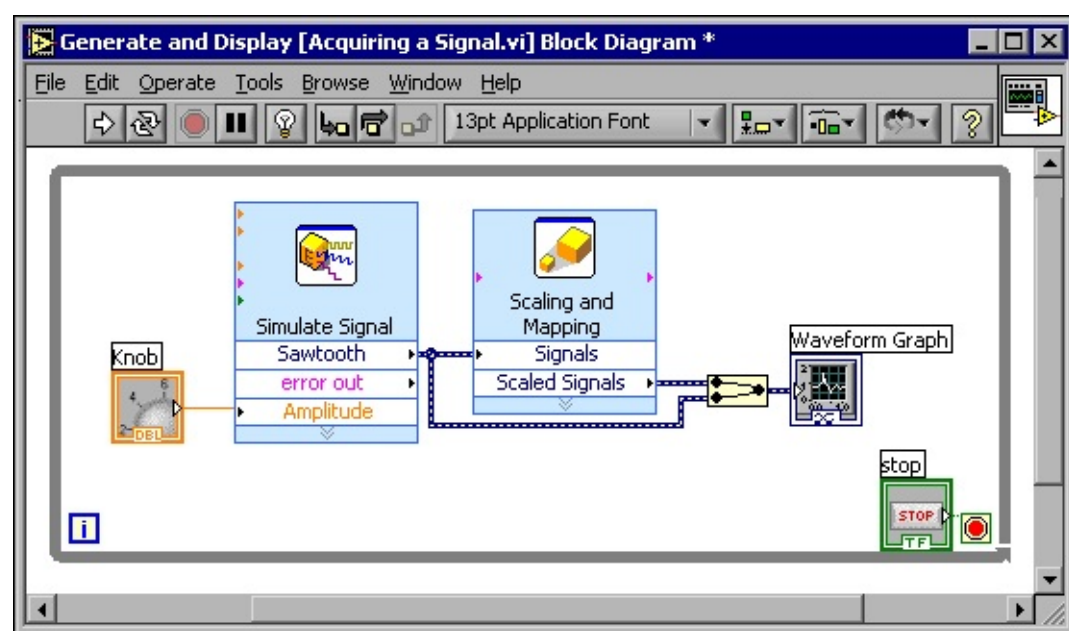
Complete the following steps to display two signals on the same graph.

1. Move the cursor over the arrow on the output of the Express VI.
2. Using the tool, wire the output to the terminal.

The  function, shown in this media, appears where the two wires connect.

This function takes the two separate signals and combines them so that both can be displayed on the same graph. The block diagram should appear similar to Figure 1.23.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>







30

CHAPTER 1. INTRODUCTION

Figure 1.23






3. Select  

  to save this VI. You also can press the   keys to save a VI.

4. Return to the front panel, run the VI, and turn the knob control. Notice that the graph plots the sawtooth wave and the scaled signal. Also notice that the maximum value on the y-axis automatically changes to be 10 times the knob value. This scaling occurs because you set the slope to 10 in the Scaling and Mapping Express VI.

5. Click the  button.

1.5.7 Customizing the Knob

The knob control changes the amplitude of the sawtooth wave so labeling it      accurately describes the function of the knob. Complete the following steps to customize the appearance of

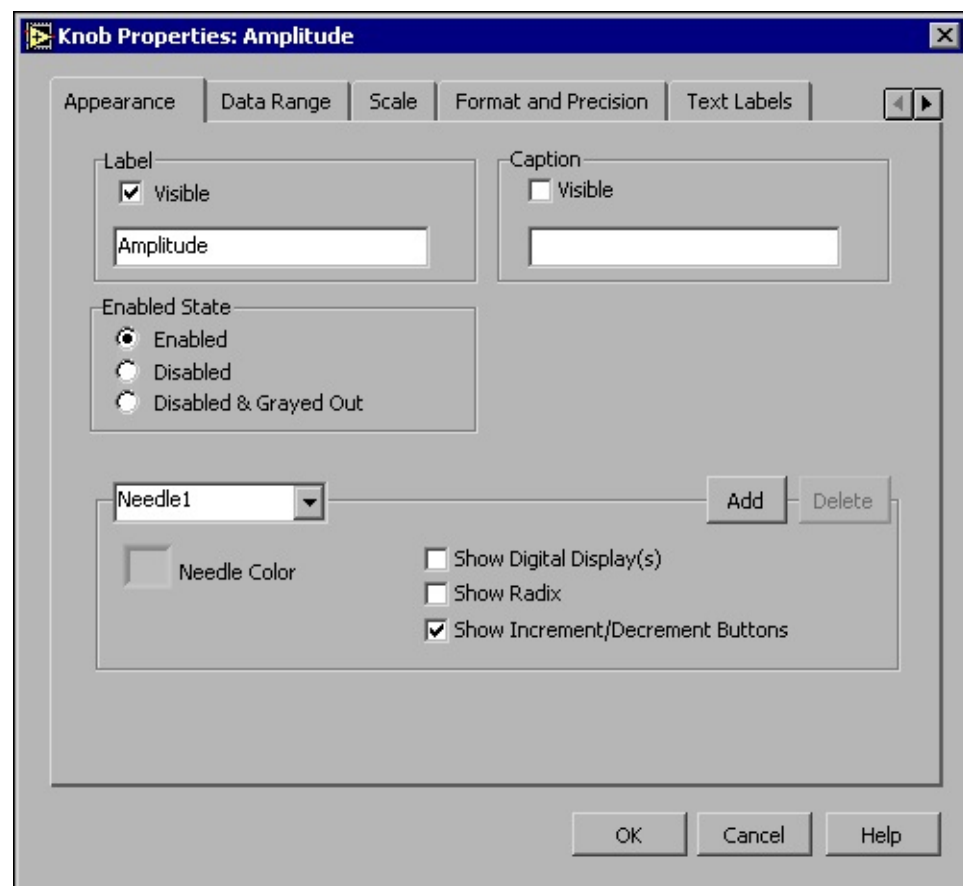
a control on the front panel.

1. Right-click the knob and select Properties from the shortcut menu to display the Properties dialog box.

2. In the Appearance section on the Properties tab, delete the label Knob, and type Amplitude in the

text box. The Properties dialog box should appear similar to Figure 1.24.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



31

Figure 1.24

3. Click the Properties tab and, in the Appearance section, change the maximum value to 5.0.

Notice how the knob on the front panel instantly updates to reflect these changes.

4. Click the Apply button to apply the current configuration and close the Properties dialog box.

5. Save this VI.

TIP:

As you build VIs, you can experiment with different properties and configurations.

You also can add and delete objects. Remember, you can undo recent edits by selecting

or pressing the keys.

6. Experiment with other properties of the knob by using the Properties dialog box.

For example, try changing the colors for the indicator by clicking the color box located on the tab.

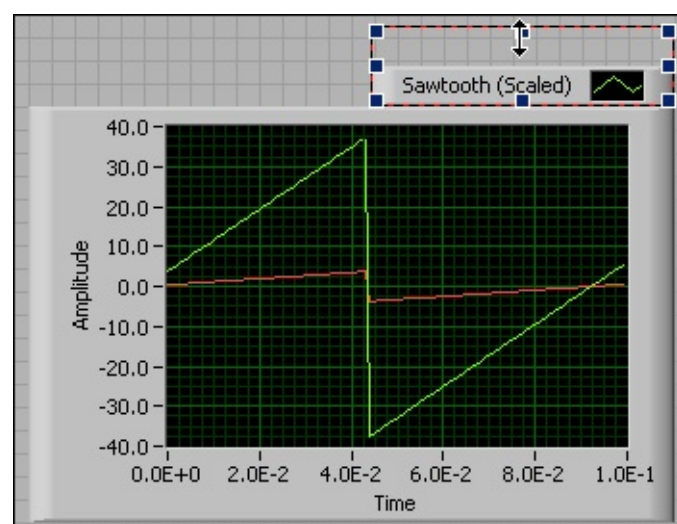
7. Click the button to avoid applying the changes you made while experimenting. If you want to keep the changes you made, click the button.

1.5.8 Customizing the Waveform Graph

The indicator displays the two signals. To indicate which plot is the scaled signal and which is the simulated signal, you customize the plots. Complete the following steps to customize the appearance of an indicator on the front panel.

1. Move the cursor over the top of the indicator on the front panel. Notice that while there are two plots on the graph, the indicator displays only one plot.






Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



CHAPTER 1. INTRODUCTION

2. When a double-headed arrow appears, shown in Figure 1.25, click and drag the border of the indicator until the second plot name appears.

Figure 1.25

3. Right-click the  and select **Properties** from the shortcut menu to display the **Properties** dialog box.
4. On the **Points** tab, select **Plot** from the pull-down menu. Click the  color box to display the **Color** dialog. Select a new line color.
5. Select **Plot** from the pull-down menu.
6. Place a checkmark in the **Autoscale** checkbox.
7. In the **Label** text box, delete the current label and change the name of this plot to **Plot**.
8. Click the  button to apply the current configuration and close the **Properties** dialog box. Notice how the plot color on the front panel changes.
9. Experiment with other properties of the graph by using the **Properties** dialog box. For example, try disabling the autoscale feature located on the **Plot** tab.
10. Click the  button to avoid applying the changes you made while experimenting. If you want to keep the changes you made, click the  button.
11. Save and close this VI.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

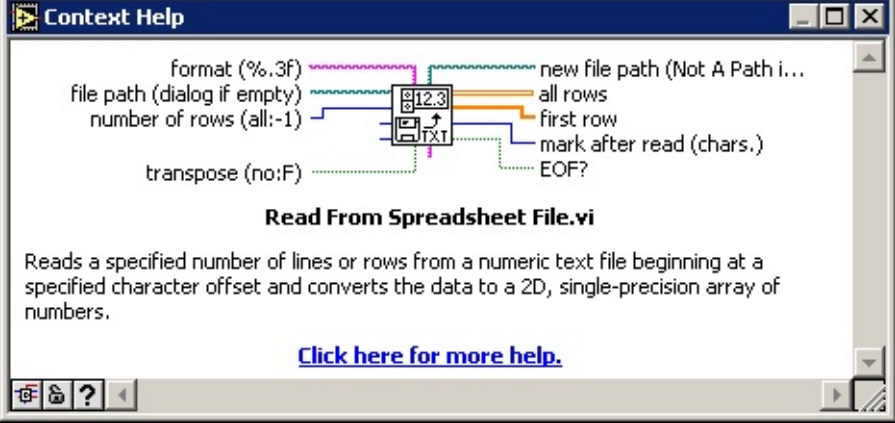
33

1.6 LabVIEW Documentation Resources

This content is available online at <<http://cnx.org/content/m12199/1.1/>>.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





34

CHAPTER 1. INTRODUCTION

1.6.1 LabVIEW Documentation Resources

Use the window, the LabVIEW Help, and the NI Example Finder to help you build and edit

VIs. Refer to the LabVIEW Help and manuals for more information about LabVIEW.

1.6.1.1 Context Help Window

The window displays basic information about LabVIEW objects when you move the

cursor over each object. The window is visible by default. To toggle display of the

window, select , press the keys, or click the

button, shown in this media, on the toolbar.

When you move the cursor over front panel and block diagram objects, the window

displays the icon for subVIs, functions, constants, controls, and indicators, with wires attached to each terminal. When you move the cursor over dialog box options, the window displays descriptions of those options. In the window, required connections are bold, recommended connections are plain text, and optional connections are dimmed or do not appear. Figure 1.26 shows an example

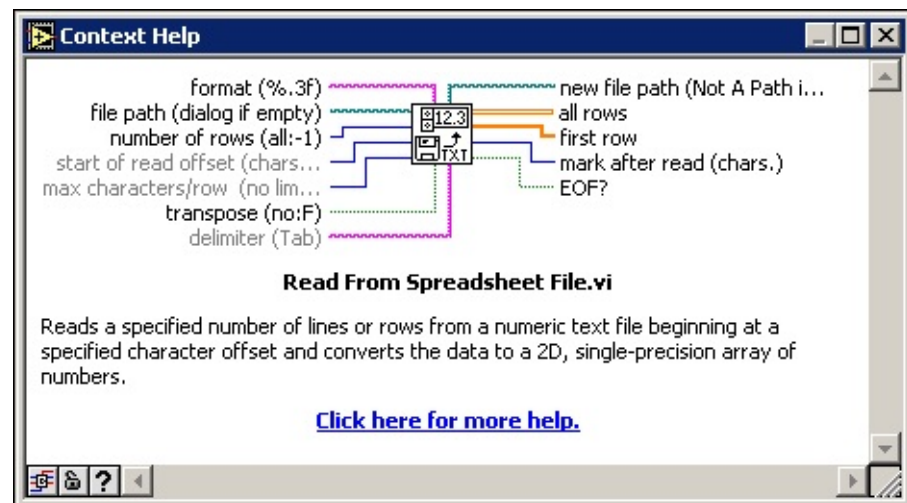
window.

Figure 1.26: Context Help Window

Click the button located on the lower left corner of the

window to display the optional terminals of a connector pane and to display the full path to a VI. Optional terminals are shown by wire stubs, informing you that other connections exist. The detailed mode displays all terminals, as shown in Figure 1.27.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



35

Figure 1.27: Detailed Context Help Window

Click the button to lock the current contents of the window.

When the contents are locked, moving the cursor over another object does not change the contents of the window. To unlock the window, click the button again. You also can access this option from the menu.

If a corresponding LabVIEW Help topic exists for an object the window describes, a

blue link appears in the window. Also, the button,

shown at left, is enabled. Click the link or the button to display the LabVIEW Help for more information about the object.


Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

36

1.6.1.2 LabVIEW Help

You can access the LabVIEW Help either by clicking the  button in the  window,

selecting .

or clicking the blue  link in


the  window.

The LabVIEW Help contains detailed descriptions of most palettes, menus, tools, VIs, and functions.


The LabVIEW Help also includes step-by-step instructions for using LabVIEW features. The LabVIEW Help includes links to the following resources:


- LabVIEW Bookshelf, which includes PDF versions of all the LabVIEW manuals and Application Notes.
- Technical support resources on the National Instruments Web site⁷, such as the NI Developer Zone⁸, the Knowledge Base⁹, and the Product Manuals Library¹⁰.

1.6.1.3 NI Example Finder


The  dialog box contains many LabVIEW template VIs that you can use to start building VIs. However, these template VIs are only a subset of the hundreds of example VIs included with LabVIEW. You can

modify any example VI to fit an application, or you can copy and paste from an example into a VI that you create.

In addition to the example VIs that ship with LabVIEW, you also can access hundreds of example VIs on the NI Developer Zone at ni.com/zone¹¹. To search all examples using LabVIEW VIs, use the .

The  is the gateway to all installed examples and the examples located on the NI Developer Zone.

To launch the , select .

s from the front panel or block diagram

menu bar. You also can launch the  by clicking the arrow on the .

button on the

LabVIEW dialog box and selecting       s from the shortcut menu.

1.7 Reduce Samples VI12

Exercise 1.7.1

In the following exercises, you will open a blank VI and add Express VIs and structures to the block diagram to build a new VI. When you complete the exercise, the front panel of the VI will appear similar to the Figure 1.28.

7<http://ni.com>

8<http://zone.ni.com/zone/jsp/zone.jsp>

9http://digital.ni.com/public.nsf/MainPage?OpenForm&node=133020_US

10http://digital.ni.com/manuals.nsf/MainPage?ReadForm&node=132020_US

11<http://www.ni.com/zone>

12This content is available online at <http://cnx.org/content/m12200/1.2/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1/>

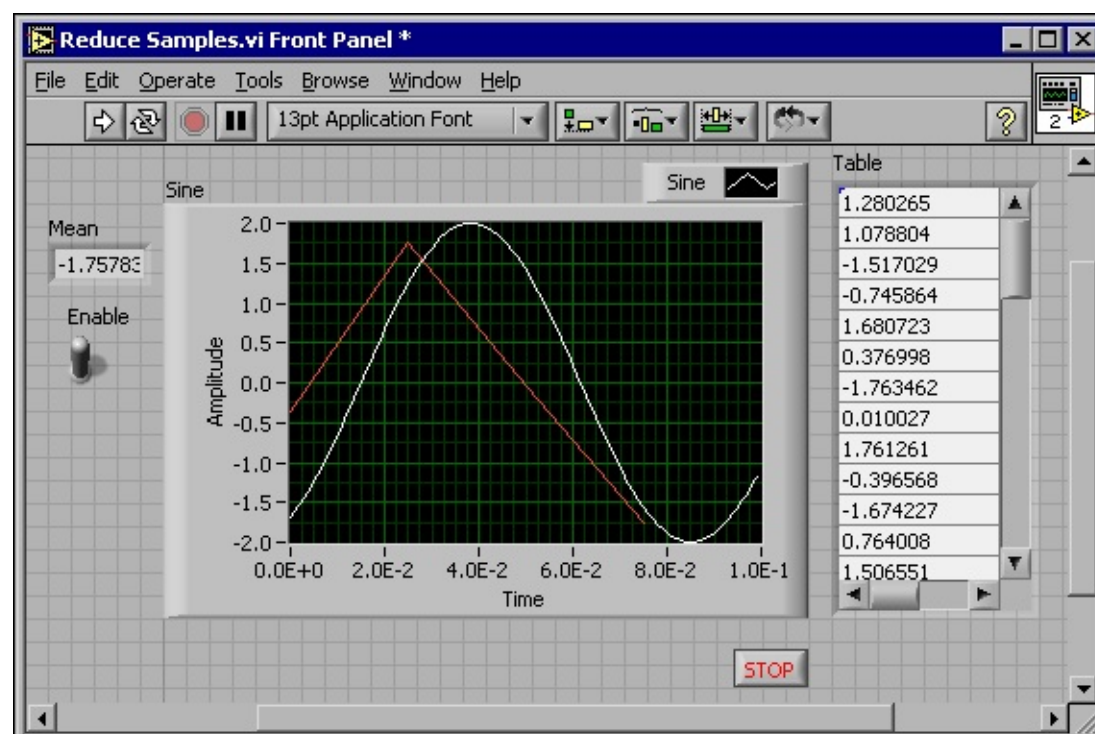


Figure 1.28

1.7.1 Opening a Blank VI

If no template is available for the task you want to create, you can start with a blank VI and add Express VIs to accomplish the specific task. Complete the following steps to open a blank VI.

1. In the **File > New** dialog box, click the arrow on the **File > New** button and select **File > New > Blank VI** from the shortcut menu or press the **Ctrl+N** keys to open a blank VI. Notice that a blank front panel and block diagram appear.

2.

If the **Block Definition Palette** is not visible, right-click any blank space on the block diagram to display the **Block Definition Palette**. Click the thumbtack, shown in this media, in the upper left corner of the **Block Definition Palette** to place the palette on the screen.

NOTE:

You can right-click a blank space on the block diagram or the front panel to display the **Block Definition Palette** or **Block Definition Palette** palettes.






















1.7.2 Adding an Express VI that Simulates a Signal

Complete the following steps to find the Express VI you want to use and then add it to the block diagram.

1.



If the **Block Definition Palette** window is not visible, press the **Ctrl+V** keys to open the **Block Definition Palette** window. You also can press the **Ctrl+V** keys to open the **Block Definition Palette** window. You also can press the **Ctrl+V** button, shown in this media, to open the **Block Definition Palette** window.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

2. Select the  palette on the  palette and move the cursor over the Express VIs on the  palette. Notice that the  window displays information about the function of each Express VI.
3. From the information provided in the  window, find the Express VI that can simulate a sine wave signal.
4. Select the Express VI and place it on the block diagram. The  dialog box appears.
5. Idle the cursor over the various options in the  dialog box, such as , , and . Read the information that appears in the  window.
6. Configure the  Express VI to generate a sine wave with a frequency of 10.7 and amplitude of 2.
7. Notice how the signal displayed in the  window changes to reflect the configured sine wave.
8. Close the  dialog box by clicking the  button.
9. Move the cursor over the  Express VI and read the information that appears in the  window. Notice that the  window now displays the configuration of the  Express VI.
10. Save this VI as  in the  directory.

1.7.3 Modifying the Signal

Complete the following steps to use the LabVIEW Help to search for the Express VI that reduces the number of samples in a signal.

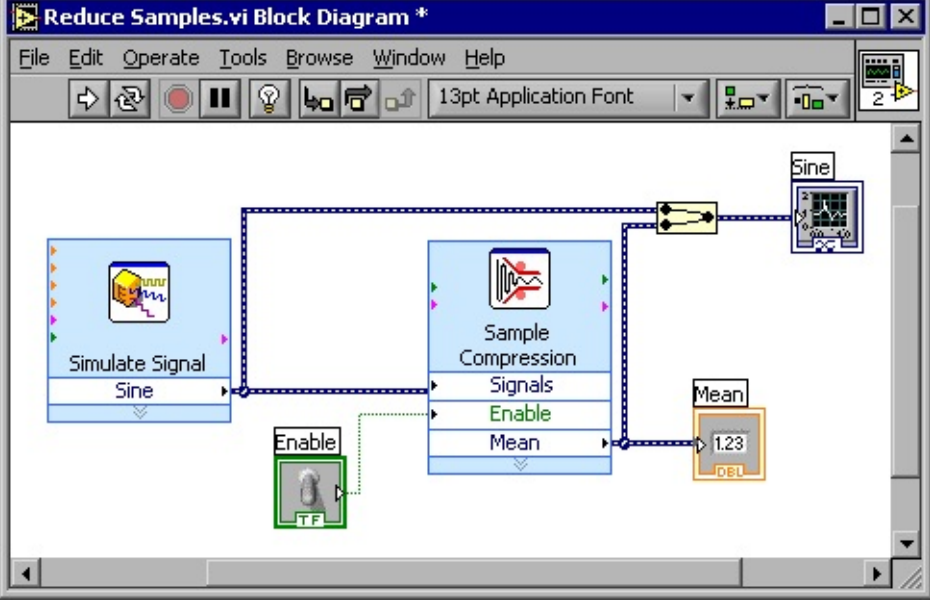
1. Select   to open the LabVIEW Help.

2. Click the **File** tab and type **Express VI** in the search text box. Notice that this word choice reflects what you want this Express VI to do—compress, or reduce, the number of samples in a signal.
3. To begin the search, press the **Enter** key or click the **Search** button.
4. Double-click the **Express VI** topic to display the topic that describes the **Express VI**.
5. After you read the description of the Express VI, click the **OK** button to select the Express VI.
6. Move the cursor to the block diagram.
Notice how LabVIEW attaches the **Express VI** to the cursor.
7. Place the **Express VI** on the block diagram to the right of the **Input** Express VI.
8. Configure the **Express VI** to reduce the signal by a factor of 25 using the mean of these values.
9. Close the **Express VI** dialog box.
10. Using the **Wire** tool, wire the **Output** output in the **Input** Express VI to the **Input** input in the **Express VI**.

1.7.4 Customizing the Front Panel

In a previous exercise (Section 1.5), you added controls and indicators to the front panel using the **Tools** palette. You also can add controls and indicators from the block diagram. Complete the following steps to create controls and indicators as shown in Figure 1.29.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>




39

Figure 1.29

1. Right-click the output in the Express VI and select from the shortcut menu to create a numeric indicator.
2. Right-click the output of the Express VI and select from the shortcut menu to insert the input.
3. Right-click the input and select from the shortcut menu to create the switch.
4. Right-click the wire linking the output in the Express VI to the input in the Express VI and select from the shortcut menu. Notice that you can create controls and indicators from the block diagram. When you create controls and indicators using this method, LabVIEW automatically creates terminals that are labeled and formatted correctly.
5. Using the tool, wire the output in the Express VI to the graph indicator terminal created in the previous step. Notice that the function appears.

6. Arrange the objects on the block diagram so that they appear similar to Figure 1.29.



TIP:


You can right-click any wire and select  from the shortcut menu to automatically route an existing wire.

7. Display the front panel. Notice that the controls and indicators you added automatically appear on the front panel with labels that correspond to their function.

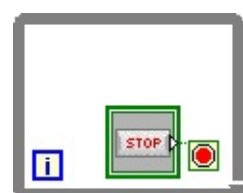
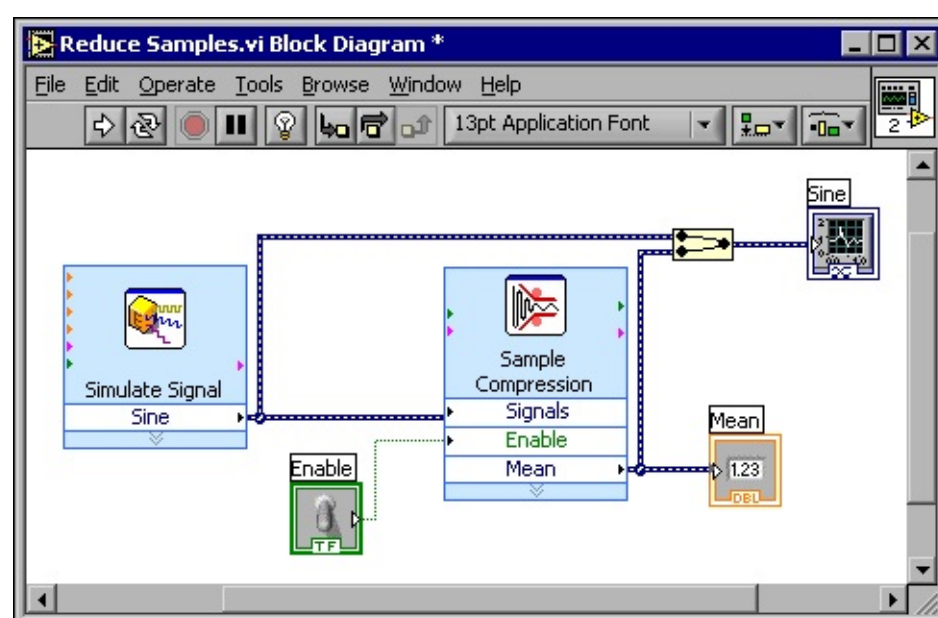
8. Save this VI.

1.7.5 Configuring the VI to Run Continuously Until the User Stops It

In the current state, the VI runs once, generates one signal, then stops executing. To run the VI until a condition is met, you can add a  to the block diagram. Complete the following steps to add a .

1. Display the front panel and run the VI. Notice how the VI runs once and then stops. Also notice how there is no  button.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



2. Display the block diagram and select the While Loop on the  palette.

 palette.

 palette.

3. Move the cursor to the upper left corner of the block diagram. Place the top left corner of the


 here.

4. Click and drag the cursor diagonally to enclose **all** the Express VIs and wires, as shown in Figure 1.30.


Figure 1.30

Notice that the  appears with a  but-

ton wired to the condition terminal. This  is configured to stop when the user clicks the  button.

5. Display the front panel and run the VI. Notice that the VI now runs until you click the  button.

A  executes the functions inside the loop until the user presses the  button.

Refer to Repetition and Loops (Section 3.1) for more information about .

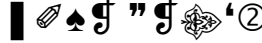
1.7.6 Controlling the Speed of Execution

To plot the points on the waveform graph more slowly, you can add a time delay to the block diagram. Complete the following steps to control the speed at which the VI executes.

1. On the block diagram, select the  Express VI on the .

 palette.

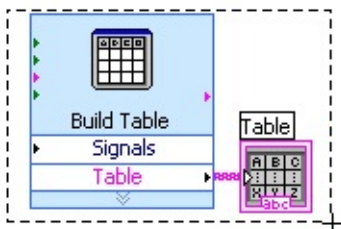
 palette and place it inside the loop.

2. Type .250 in the  text box. This time delay specifies how fast the loop runs. With a .250 second time delay, the loop iterates once every quarter of a second.

3. Close the  dialog box.

4. Save this VI.

5. Display the front panel and run the VI.



41

6. Click the switch and notice the change on the graph. Notice how if the switch is on, the graph displays the reduced signal. If the switch is off, the graph does not display the reduced signal.

7. Click the button to stop the VI.

1.7.7 Using a Table to Display Data

Complete the following steps to display a collection of mean values in a table on the front panel.

1. On the front panel, select the Express Table indicator on the palette and place it on the front panel to the right of the waveform graph.

2. Display the block diagram. Notice that the terminal appears wired to the Express VI automatically.

3. If the Express VI and the terminal are not selected already, click an open space on the block diagram to the left of the Express VI and the terminal. Drag the cursor diagonally until the selection rectangle encloses the Express VI and the terminal, shown in this media. A moving dashed outline called a marquee highlights the Express VI, the terminal, and the wire joining the two.

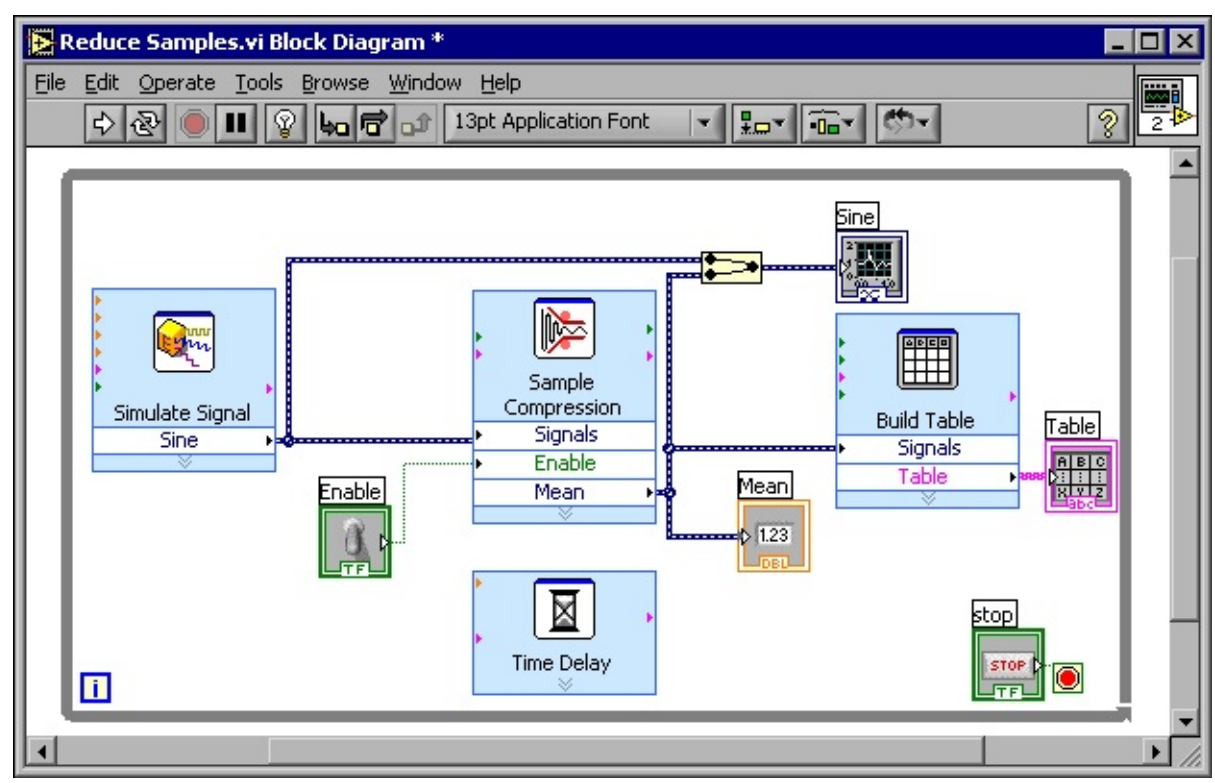
4. Drag the objects into the terminal. Notice that the

▲♦♦♣ automatically resizes to enclose the *✉✎✎” | “✎✎ Express VI and the | “✎✎ terminal.

5. Using the { ✎✎♥♥ tool, wire the ▼✎♥ terminal of the |♣♣✎✎ ✎♦♣♣✎✎ss✎♥♥ Express VI to the

✎♥♥♥s input of the *✉✎✎” | “✎✎ Express VI. The block diagram should appear similar to Figure 1.31.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>




CHAPTER 1. INTRODUCTION

Figure 1.31

6. Display the front panel and run the VI.
7. Click the *♥♥✎✎ switch. The table displays the mean values of every 25 samples of the sine wave. Notice if the *♥♥✎✎ switch is off, the table does not record the mean values.
8. Stop the VI.
9. Experiment with properties of the table by using the | “✎✎ Pr♣♣✎✎rt✎✎s dialog box. For example, try changing the number of columns to one.

10. Save and close this VI.

1.8 Debugging Techniques

If a VI does not run, it is a broken, or nonexecutable, VI. The  button often appears broken, shown at left, when you create or edit a VI. If it is still broken when you finish wiring the block diagram, the VI is broken and will not run. Generally, this means that a required input is not wired, or a wire is broken.

1.8.1 Finding Errors

Click the broken  button or select           

which lists all the errors. Double-click an error description to display the relevant block diagram or front panel and highlight the object that contains the error.































13This content is available online at <http://cnx.org/content/m12201/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>



43































1.8.2 Execution Highlighting

View an animation of the execution of the block diagram by clicking the                              

shown in this media. Execution highlighting shows the flow of data on the block diagram from one node to another using bubbles that move along the wires. Use execution highlighting in conjunction with single-stepping to see how data move from node to node through a VI.

NOTE: Execution highlighting greatly reduces the speed at which the VI runs.


1.8.3 Single-Stepping



Single-step through a VI to view each action of the VI on the block diagram as the VI runs. The single-stepping buttons affect execution only in a VI or subVI in single-step mode. Enter single-step mode by clicking the                              

step through subVIs or run them normally.

If you single-step through a VI with execution highlighting on, an execution glyph, shown in this media, appears on the icons of the subVIs that are currently running.


1.8.4 Probes


Use the  tool, shown in this media, to check intermediate values on a wire as a VFI runs. When execution pauses at a node because of single-stepping or a breakpoint, you also can probe the wire that just executed to see the value that flowed through that wire.


You also can create a custom probe to specify which indicator you use to view the probed data. For example, if you are viewing numeric data, you can choose to see that data in a chart within the probe. To create a custom probe, right-click a wire and select  .

 from the shortcut menu.

1.8.5 Breakpoints

Use the  tool, shown in this media, to place a breakpoint on a VI, node, or wire on the block diagram and pause execution at that locatiFon. When you set a breakpoint on a wire, execution pauses after data pass through the wire. Place a breakpoint on the block diagram workspace to pause execution after all nodes on the block diagram execute. When a VI pauses at a breakpoint, LabVIEW brings the block diagram to the front and uses a marquee to highlight the node or wire that contains the breakpoint. LabVIEW

highlights breakpoints with red borders for nodes and block diagrams and red bullets for wires. When you move the cursor over an existing breakpoint, the black area of the  tool cursor appears white.

Use the  tool to click an existing breakpoint to remove it.

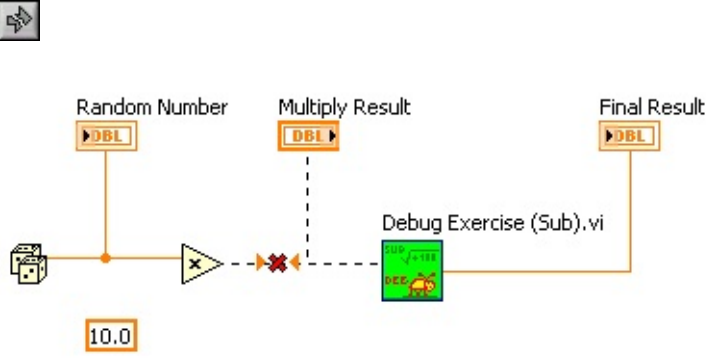
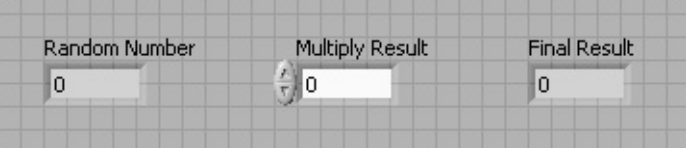
1.9 Debug Exercise (Main) VI14

Exercise 1.9.1

Complete the following steps to load a broken VI and correct the error. Use single-stepping and execution highlighting to step through the VI.

14This content is available online at <http://cnx.org/content/m12202/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>



44

CHAPTER 1. INTRODUCTION

1.9.1 Front Panel

1. Select and navigate to to open the VI. The front panel shown in Figure 1.32 appears.

Figure 1.32


Notice the button on the toolbar appears broken, shown in this media, indicating that the VI is broken and cannot run.


1.9.2 Block Diagram


1. Select to display the block diagram shown in Figure 1.33.

Figure 1.33

The function, located on the toolbar

c. Click the  button to display a topic in the LabVIEW Help that describes the error in detail and includes step-by-step instructions for correcting the error.

d. Click the  button or double-click the error description to highlight the area on the block diagram that contains the error.

e. Use the  window to fix each error.


3. Select  .



 to save the VI.











4. Display the front panel by clicking it or by selecting {  .

     .

1.9.3 Run the VI











1. Click the  button to run the VI several times.

2. Select {  .




          to display the block diagram.

3. Animate the flow of data through the block diagram.











a.

Click the           button, shown in this media, on the toolbar to enable execution highlighting.

b.

Click the    button, shown in this media, to start single-stepping. Execution highlighting shows the movement of data on the block diagram from one node to another using bubbles that move along the wires. Nodes blink to indicate they are ready to execute.




c.

Click the      button, shown in this media, after each node to step through the entire block diagram. Each time you click the      button, the current node

executes and pauses at the next node. Data appear on the front panel as you step through the VI. The VI generates a random number and multiplies it by 10.0. The subVI adds 100.0 and takes the square root of the result.

d.

When a blinking border surrounds the entire block diagram, click the  button,



shown in this media, to stop single-stepping through the    button,

  VI.







4. Single-step through the VI and its subVI.

a. Click the   button to start single-stepping.




b.

When the    VI blinks, click the  button. Notice the run button on the subVI.

c.

Display the    VI block diagram by clicking it. A green glyph, shown in this media, appears on the subVI icon on the    VI block diagram, indicating that the subVI is running.

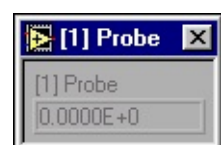
d. Display the    VI block diagram by clicking it.

e. Click the  button twice to finish single-stepping through the subVI block diagram. The    VI block diagram is active.

f. Click the  button to stop single-stepping.

5. Use a probe to check intermediate values on a wire as a VI runs.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





46

CHAPTER 1. INTRODUCTION

a.




Use the  tool, shown in this media, to click any wire. A window similar to Figure 1.34 appears.


Figure 1.34



LabVIEW numbers the  window automatically and displays the same number in a glyph on the wire you clicked.

b. Single-step through the VI again. The  window displays data passed along the wire.


6. Place breakpoints on the block diagram to pause execution at that location.


a.

Use the  tool, shown in this media, to click nodes or wires. Place a breakpoint on the block diagram to pause execution after all nodes on the block diagram execute.

b. Click the  button to run the VI. When you reach a breakpoint during execution, the VI pauses and the  button on the toolbar appears red.

c.

Click the  button, shown in this media, to continue running to the next breakpoint or until the VI finishes running.

d. Use the  tool to click the breakpoints you set and remove them.

7. Click the  button to disable execution highlighting.

8. Select 

* to close the VI and all open windows.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

47

1.10 Summary, Tips, and Tricks on Introduction to LabVIEW¹⁵



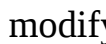

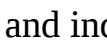




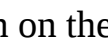














¹⁵This content is available online at <<http://cnx.org/content/m12203/1.2/>>.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

48

CHAPTER 1. INTRODUCTION

1.10.1 Summary

- Virtual instruments (VIs) contain three main components—the front panel, the block diagram, and the icon and connector pane.
- The front panel is the user interface of a VI and specifies the inputs and displays the outputs of the VI.
- The block diagram contains the graphical source code composed of nodes, terminals, and wires.
- Use the  palette to create, modify, and debug VIs. Press the  key and right-click to display a temporary version of the  palette at the location of the cursor.
- Use the  palette to place controls and indicators on the front panel. Right-click an open space on the front panel to display the  palette.
- Use the  palette to place VIs and functions on the block diagram. Right-click an open space on the block diagram to display the  palette.
- Use the  button on the  and  palettes to search for controls, VIs, and functions.
- All LabVIEW objects and empty space on the front panel and block diagram have associated shortcut menus, which you access by right-clicking an object, the front panel, or the block diagram.
- Use the  menu to display the   window and the LabVIEW Help, which describes most palettes, menus, tools, VIs, functions, and features.
- Select            to display the LabVIEW Bookshelf, which you can use

to search PDF versions of all the LabVIEW manuals and Application Notes.

- You build the front panel with controls and indicators, which are the interactive input and output terminals of the VI, respectively.
- Control terminals have a thicker border than indicator terminals. To change a control to an indicator or to change an indicator to a control, right-click the object and select *♥'♥? Ⓐ t♦ ■♥"Ⓞ “t♦r or *♥'♥? Ⓐ

t♦ *♦♥tr♦↻ from the shortcut menu.

- The block diagram is composed of nodes, terminals, and wires.
- The broken | ☒♥ button appears on the toolbar to indicate the VI is broken. Click the broken | ☒♥ button to display the *rr♦r Ⓞ✎ st window, which lists all the errors.
- Use execution highlighting, single-stepping, probes, and breakpoints to debug VIs by animating the flow of data through the block diagram.

1.10.2 Tips and Tricks

1.10.2.1 Operating

- Frequently used menu options have equivalent keyboard shortcuts. For example, to save a VI, you can select *Ⓞ✎ Ⓞ✎ Ⓐ

! → Ⓐ or press the *tr☒ *! keys. Common keyboard shortcuts include the following:

Ctrl-R - Runs a VI.

Ctrl-E - Toggles between the front panel and block diagram.

Ctrl-H - Toggles display of the *♦♥tⒶ Ⓞt ○ Ⓐ ☒♣ window.

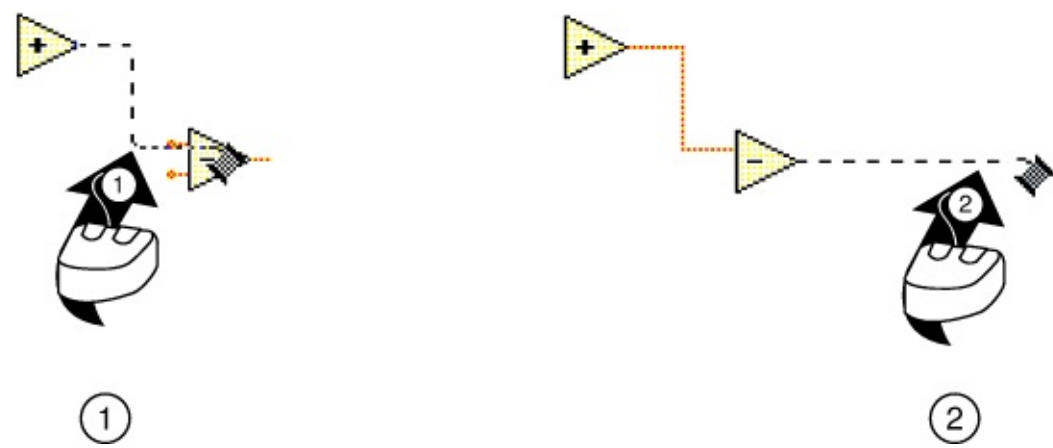
Ctrl-B - Removes all broken wires.

Ctrl-F - Finds VIs, globals, functions, text, or other objects loaded in memory or in a specified list of VIs.

- To increment or decrement numeric controls faster, use the ♣♣Ⓐr'tⓄ♥♥ or ▲ "Ⓐ☒Ⓞ♥♥ tools to place the cursor in the control and press the !♥Ⓞ?Ⓐ key while pressing the up or down arrow keys.

• You can disable the debugging tools to reduce memory requirements and to increase performance slightly. Select *Ⓞ✎ ☒ Ⓐ

➤ ■ Pr♣♣Ⓐr'tⓄⒶs, select *ⓄⓄ Ⓞ☒Ⓞ♥ from the top pull-down menu, and remove the checkmark from the ☒☒☒♦Ⓞ *Ⓐ'☒? ? Ⓞ♥? checkbox.



1.10.2.2 Wiring

- Click the button on the toolbar to display the window.

Use the window to determine which terminals are required. Required terminals are bold, recommended connections are plain text, and optional connections are dimmed.

- Press the spacebar to toggle the wire direction.
- To move objects one pixel, press the arrow keys. To move objects several pixels, press the key while you press the arrow keys.
- To cancel a wire you started, press the key, right-click, or click the terminal where you started the wire.
- Use the tip strips that appear as you move the tool over terminals.
- Display the connector pane by right-clicking the node and selecting from the shortcut menu.
- You can bend a wire by clicking to tack the wire down and moving the cursor in a perpendicular direction. To tack down a wire and break it, double-click.

Figure 1.35: 1. Tack Down a Wire by Clicking, 2. Tack and Break the Wire by Double-clicking

1.10.2.3 Editing

- Use the following shortcuts to create constants, controls, and indicators:
 - Right-click a function terminal and select

*♦♥st♥t, *r♣'t♣ *♦♥tr♦♣, or

*r♣'t♣ ■♥" "t♦r from the shortcut menu.

- Drag controls and indicators from the front panel to the block diagram to create a constant.

- Drag constants from the block diagram to the front panel to create a control.

• To duplicate an object, press the *tr♣ key while using the Positioning tool to click and drag a selection.

• To restrict an object's direction of movement horizontally or vertically, use the P♦s♣t♣♦♥♣♥ tool to select the object and press the |♥♣!t key while you move the object.

• To keep an object proportional to its original size as you resize it, press the |♥♣!t key while you drag the resizing handles or circles.

• To resize an object as you place it on the front panel, press the *tr♣ key while you click to place the object and drag the resizing handles or circles.

• To replace nodes, right-click the node and select |♣♣"♣ from the shortcut menu.

• To display the block diagram of a subVI from the calling VI, press the *tr♣ key and use the ♦♣♣r't♥♥

or P♦s♣t♣♦♥♣♥ tool to double-click the subVI on the block diagram.

• To display the front panel of a subVI from the calling VI, use the ♦♣♣r't♥♥ ♦r P♦s♣t♣♦♥♣♥ tool to double-click the subVI on the block diagram. You also can select *r♦s♣

|♥♣s)■*s |')■s.

• After you type a label, press the *♥t♣r key to end text entry.

• To add items quickly to ring controls and *'s♣ structures, press the |♥♣!t*♥t♣r keys after each item.

Pressing |♥♣!t*♥t♣r accepts the item and positions the cursor to add the next item. Refer to Making Decisions in a VI16 for more information about *'s♣ structures.










16"Case Structures" <<http://cnx.org/content/m12245/latest/>>

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





50







CHAPTER 1. INTRODUCTION

• To copy the color of one object and transfer it to a second object without using a color picker, use the

     tool to click the object whose color you want to copy. Use the     tool to click the object to which you want to apply the color. You also can copy the color of one object by using the

    tool and pressing the   key.

- Select     if you make a mistake.

- To create more blank space on the block diagram, press the   key while you use the     tool

to draw a rectangle on the block diagram.

1.10.2.4 Debugging

- When single-stepping, use the following keyboard shortcuts:

Ctrl-down arrow - Steps into a node.

Ctrl-right arrow - Steps over a node.

Ctrl-up arrow - Steps out of a node.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



Chapter 2

Modular Programming

2.1 Modular Programming¹

The power of LabVIEW lies in the hierarchical nature of the VI. After you create a VI, you can use it on the block diagram of another VI. There is no limit on the number of layers in the hierarchy. Using modular programming helps you manage changes and debug the block diagram quickly.

A VI within another VI is called a subVI. A subVI corresponds to a subroutine in text-based programming languages. When you double-click a subVI, a front panel and block diagram appear, rather than a dialog box in which you can configure options. The front panel includes controls and indicators that might look familiar. The block diagram includes wires, front panel icons, functions, possibly subVIs, and other LabVIEW objects that also might look familiar.

The upper right corner of the front panel and block diagram displays the icon for the VI. This icon is the same as the icon that appears when you place the VI on the block diagram.

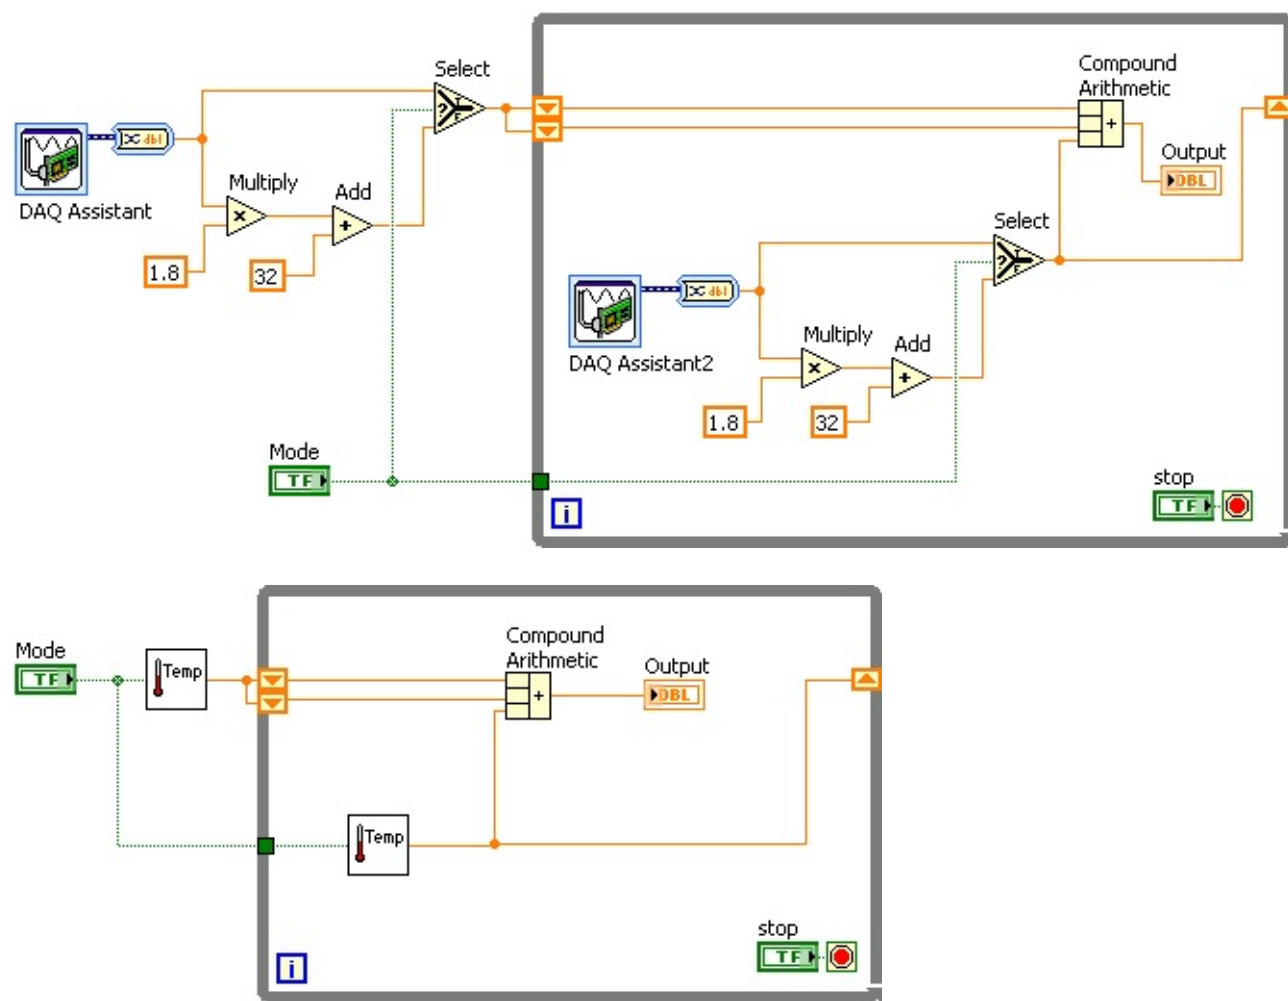
2.1.1 Icon and Connector Pane

After you build a front panel and block diagram, build the icon and the connector pane so you can use the VI as a subVI. Every VI displays an icon, such as the one shown in this media, in the upper right corner of the front panel and block diagram windows. An icon is a graphical representation of a VI. It can contain text, images, or a combination of both. If you use a VI as a subVI, the icon identifies the subVI on the block diagram of the VI. You can double-click the icon to customize or edit it.

You also need to build a connector pane, shown in this media, to use the VI as a subVI. The connector pane is a set of terminals that correspond to the controls and indicators of that VI, similar to the parameter list of a function call in text-based programming languages. The connector pane defines the inputs and outputs you can wire to the VI so you can use it as a subVI. A connector pane receives data at its input terminals and passes the data to the block diagram code through the front panel controls and receives the results at its output terminals from the front panel indicators.

As you create VIs, you might find that you perform a certain operation frequently. Consider using subVIs or loops to perform that operation repetitively. For example, the block diagram in Figure 2.1 contains two identical operations.

¹This content is available online at <http://cnx.org/content/m12204/1.2/>.



52

CHAPTER 2. MODULAR PROGRAMMING

Figure 2.1


You can create a subVI that performs that operation and call the subVI twice. The example in Figure 2.2 calls the  VI as a subVI twice on its block diagram and functions the same as the previous block diagram. You also can reuse the subVI in other VIs. Refer to Repetition and Loops (Section 3.1) for more information about using loops to combine common operations.

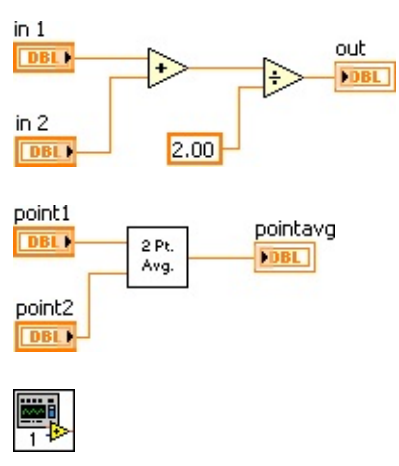
Figure 2.2

Refer to the LabVIEW Basics II: Development Course Manual for more information about application development. The following pseudo-code and block diagrams demonstrate the analogy between subVIs and subroutines.

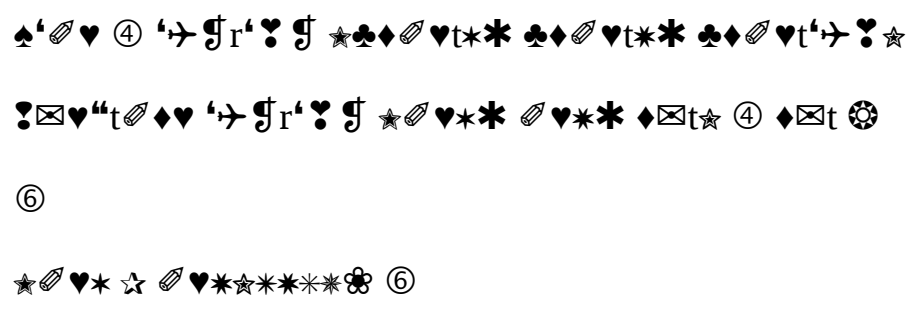
Function Code

Calling Program Code

continued on next page



53



SubVI Block Diagram

CallingVI Block Diagram

Table 2.1

2.2 Icons and Connector Panes2

After you build a VI front panel and block diagram, build the icon and the connector pane so you can use the VI as a subVI.

2.2.1 Creating an Icon




Every VI displays an icon, shown in this media, in the upper right corner of the front panel and

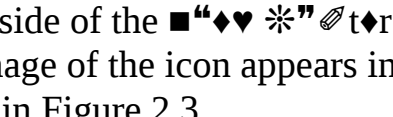
block diagram windows. An icon is a graphical representation of a VI. It can contain text, images, or a combination of both. If you use a VI as a subVI, the icon identifies the subVI on the block diagram of the VI.

The default icon contains a number that indicates how many new VIs you have opened since launching

LabVIEW. Create custom icons to replace the default icon by right-clicking the icon in the upper right corner of the front panel or block diagram and selecting *” t ■“◆♥ from the shortcut menu or double-clicking the icon in the upper right corner of the front panel. You also can edit icons by selecting

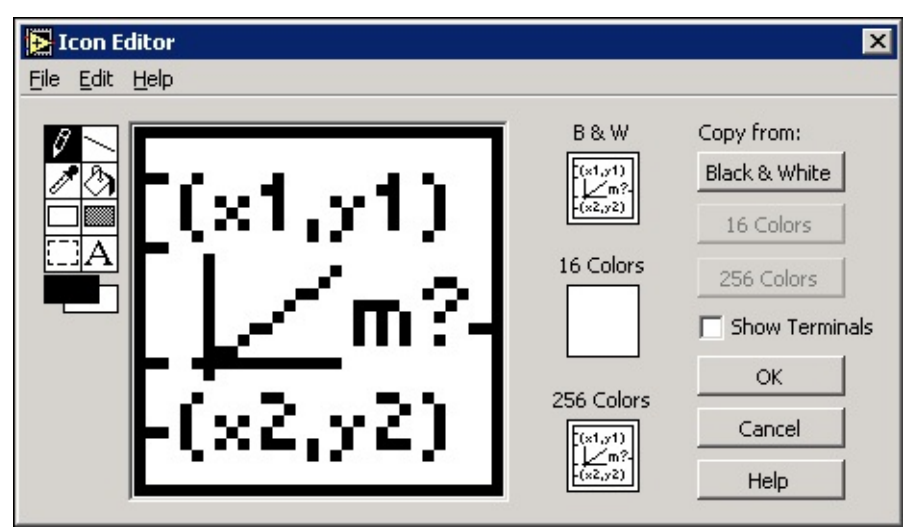


selecting  from the  pull-down menu, and clicking the  button.

Use the tools on the left side of the  dialog box to create the icon design in the editing area. The normal size image of the icon appears in the appropriate box to the right of the editing area, as shown in the dialog box in Figure 2.3.

This content is available online at <http://cnx.org/content/m12205/1.2/>.


Available for free at Connexions <http://cnx.org/content/col11408/1.1>









CHAPTER 2. MODULAR PROGRAMMING

Figure 2.3

Depending on the type of monitor you use, you can design a separate icon for monochrome, 16-color, and 256-color mode. LabVIEW uses the monochrome icon for printing unless you have a color printer.


Use the  menu to cut, copy, and paste images from and to the icon. When you select a portion of the icon and paste an image, LabVIEW resizes the image to fit into the selection area. You also can drag

a graphic from anywhere in your file system and drop it in the upper right corner of the front panel or block diagram. LabVIEW converts the graphic to a 32 × 32 pixel icon.


Use the   option on the right side of the  dialog box to copy from a color icon to a black-and-white icon and vice versa. After you select a   option, click the  button to complete the change.

NOTE:



If you do not draw a complete border around a VI icon, the icon background appears transparent. When you select the icon on the block diagram, a selection marquee appears around each individual graphic element in the icon.

Use the tools on the left side of the  dialog box to create the icon design in the editing area. The normal size image of the icon appears in the appropriate box to the right of the editing area. The following tasks can be performed with these tools:

•

Use the  tool to draw and erase pixel by pixel.


•

Use the  tool to draw straight lines. To draw horizontal, vertical, and diagonal lines, press the  key while you use this tool to drag the cursor.


•

Use the  tool to copy the foreground color from an element in the icon.


•

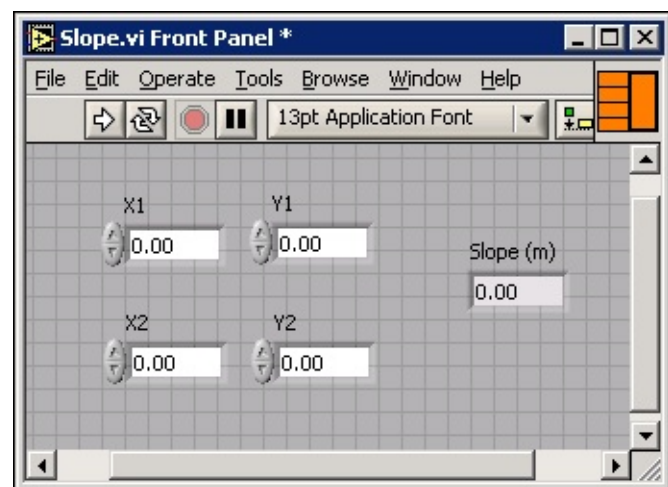
Use the  tool to fill an outlined area with the foreground color.

•

Use the  tool to draw a rectangular border in the foreground color. Double-click this tool to frame the icon in the foreground color.


•

Use the  tool to draw a rectangle with a foreground color frame and filled with the background color. Double-click this tool to frame the icon in the foreground color and fill it with the background color.



55

•

Use the  tool to select an area of the icon to cut, copy, move, or make other changes.


Double-click this tool and press the  key to delete the entire icon.

•

Use the  tool to enter text into the icon. Double-click this tool to select a different font.

 The  option works well in icons.

•




Use the  tool to display the current foreground and background colors. Click each rectangle to display a color palette from which you can select new colors.






• Use the options on the right side of the editing area to perform the following tasks:

Show Terminals - Displays the terminal pattern of the connector pane.

OK - Saves the drawing as the icon and returns to the front panel.

Cancel - Returns to the front panel without saving any changes.

• The menu bar in the  dialog box contains more editing options such as  | .

   P'st , and  .

2.2.2 Setting Up the Connector Pane

To use a VI as a subVI, you need to build a **connector pane**, shown in this media. The connector pane is a set of terminals that corresponds to the controls and indicators of that VI, similar to the parameter list of a function call in text-based programming languages. The connector pane defines the inputs and outputs you can wire to the VI so you can use it as a subVI.





Define connections by assigning a front panel control or indicator to each of the connector pane terminals. To define a connector pane, right-click the icon in the upper right corner of the front panel window and select     from the shortcut menu. The connector pane replaces the icon. Each rectangle on the connector pane represents a terminal. Use the rectangles to assign inputs and outputs. The number of terminals LabVIEW displays on the connector pane depends on the number of controls and indicators on the front panel. The following front panel has four controls and one indicator, so LabVIEW displays four input terminals and one output terminal on the connector pane.


Figure 2.4

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



CHAPTER 2. MODULAR PROGRAMMING

2.2.3 Selecting and Modifying Terminal Patterns

Select a different terminal pattern for a VI by right-clicking the connector pane and selecting P'tt  from the shortcut menu. Select a connector pane pattern with extra terminals. You can leave the extra terminals unconnected until you need them. This flexibility enables you to make changes with minimal effect on the hierarchy of the VIs. You also can have more front panel controls or indicators than terminals.

A solid border highlights the pattern currently associated with the icon. The maximum number of terminals available for a subVI is 28.

The most commonly used pattern is shown in this media. This pattern is used as a standard to assist in simplifying wiring. The top inputs and outputs are commonly used for passing references and the bottom inputs and outputs are used for error handling. Refer to the section on Clusters3 for more information about error handling.

NOTE: Try not to assign more than 16 terminals to a VI. Too many terminals can reduce the read-

ability and usability of the VI.

To change the spatial arrangement of the connector pane patterns, right-click the connector pane and select * from the shortcut menu.

2.2.4 Assigning Terminals to Controls and Indicators

After you select a pattern to use for the connector pane, you must define connections by assigning a front panel control or indicator to each of the connector pane terminals. When you link controls and indicators to the connector pane, place inputs on the left and outputs on the right to prevent complicated, unclear wiring patterns in your VIs.

To assign a terminal to a front panel control or indicator, click a terminal of the connector pane, then click the front panel control or indicator you want to assign to that terminal. Click an open space on the front panel. The terminal changes to the data type color of the control to indicate that you connected the terminal.

You also can select the control or indicator first and then select the terminal.

NOTE: Although you use the { tool to assign terminals on the connector pane to front panel controls and indicators, no wires are drawn between the connector pane and these controls and indicators.

2.3 Convert C to F VI4

Exercise 2.3.1

Complete the following steps to create a VI that takes a number representing degrees Celsius and converts it to a number representing degrees Fahrenheit.

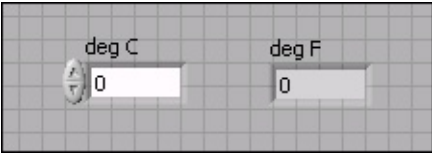
2.3.1 Front Panel

1. Open a blank VI and begin building the following front panel.

3"Error Clusters" <<http://cnx.org/content/m12231/latest/>>

4This content is available online at <<http://cnx.org/content/m12207/1.2/>>.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





57

Figure 2.5

2. (Optional) Select { [Pencil] [Heart] [Quote] [Diamond] [Smiley] }

[Pencil] [Gears] [Grip] [Triangle] [Grip] [Heart] [Quote] [Diamond] [Smiley] | [Pencil] [Heart] [Quote] [Diamond] [Smiley] to display the front panel and block diagram side by side or { [Pencil] [Heart] [Quote] [Diamond] [Smiley] }

[Pencil] [Gears] [Grip] [Triangle] [Grip] [Heart] [Quote] [Diamond] [Smiley] to display the front panel and block diagram stacked.

[Pencil] [Gears] [Grip] [Triangle] [Grip] [Heart] [Quote] [Diamond] [Smiley] to display the front panel and block diagram stacked.

3. Create a numeric control. You will use this control to enter the value for degrees Celsius.

a. Select [Star] [Diamond] [Heart] [Triangle] [Gears] [Grip] [Smiley]

[Diamond] [Envelope] [Spade] [Grip] [Pencil] [Quote] [Star] [Diamond] [Heart] [Triangle] [Gears] [Grip] [Smiley] to display the [Diamond] [Envelope] [Spade] [Grip] [Pencil] [Quote] [Star] [Diamond] [Heart] [Triangle] [Gears] [Grip] [Smiley] palette. If

the [Star] [Diamond] [Heart] [Triangle] [Gears] [Grip] [Smiley] palette is not visible, right-click an open space on the front panel workspace to display it.

b.

Select the [Diamond] [Envelope] [Spade] [Grip] [Pencil] [Quote] [Star] [Diamond] [Heart] [Triangle] [Gears] [Grip] [Smiley]. Move the control to the front panel and click to place the control.

c.

Type " [Grip] [Heart] [Star] " in the label of the control and press the <[Star] [Heart] [Triangle] [Grip] [Smiley]> key or click the [Star] [Heart] [Triangle] [Grip] [Smiley] button, shown in this media, on the toolbar. If you do not type the name immediately, LabVIEW uses a default label.

NOTE: You can edit a label at any time by double-clicking the label, using the [Triangle] [Quote] [Grip] [Gears] [Pencil] [Heart] [Smiley] tool, or right-clicking and selecting Pr [Diamond] [Spade] [Grip] [Pencil] [Grip] [Smiley] from the shortcut menu to display the property

dialog box.

4. Create a numeric indicator. You will use this indicator to display the value for degrees Fahrenheit.

a.

Select the located on the s

palette.

b. Move the indicator to the front panel and click to place the indicator.

c. Type " ° F " in the label and press the <Ctrl> key or click the button.

2.3.2 Block Diagram

1. Display the block diagram by clicking it or by selecting ()

.

LabVIEW creates corresponding control and indicator terminal icons on the block diagram when you place controls and indicators on the front panel. The terminals represent the data type of the control or indicator. You should see two double-precision, floating-point terminals on the block diagram, one indicator, and one control.

NOTE: Control terminals have a thicker border than indicator terminals.

2.

Place

the

function, located on the star

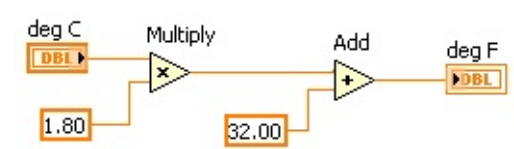
palette, on the block diagram to the right of the " ° F "

indicator. If the palette is not visible, right-click an open space on the block diagram workspace to display it.



123

123



58

CHAPTER 2. MODULAR PROGRAMMING

3.

Place

the

function,

located

on

the

palette, on the block diagram to the right of the

function.

4.

Place

a

function,

located

on

the

*⊠♥“t⊠♦♥s ⊠r⊠t♥♠♣t⊠“ ☆

*♦♠♣‘r⊠s♦♥ *⊠♣r♣ss ⊠⊠♠♣r⊠“ palette, to the lower left of the ▼⊠⊠t⊠♣⊠⊠② function.

Type **** in the constant. When you first place a numeric constant, it is highlighted so you can type a value. If the constant is no longer highlighted, double-click the constant to activate the ▲“♣⊠⊠♥ tool.

5.

Place

a

⊠⊠♠♣r⊠“ *♦♥st‘♥t,

located

on

the

*⊠♥“t⊠♦♥s ⊠r⊠t♥♠♣t⊠“ ☆

*♦♠♣‘r⊠s♦♥ *⊠♣r♣ss ⊠⊠♠♣r⊠“ palette, to the left of the ⊠”” function. Type **** in the constant.




6.

Use the { ⊠r⊠♥♥ tool, shown in this media, to wire the icons as shown in Figure 2.6.




Figure 2.6




- To wire from one terminal to another, use the { ⊠r⊠♥♥ tool to click the first terminal, move the tool to the second terminal, and click the second terminal. You can start wiring at either terminal.
- You can bend a wire by clicking to tack down the wire and moving the cursor in a perpendicular direction. Press the s♣““♣”“r to toggle the wire direction.
- To identify terminals on the nodes, right-click the ▼⊠⊠t⊠♣⊠⊠② and ⊠”” functions and

select   




   from the shortcut menu to display the connector

pane on the block diagram. Return to the icons after wiring by right-clicking the func-

tions and selecting   

   from the shortcut menu to remove

the checkmark.

- When you move the  tool over a terminal, the terminal area blinks, indicating that clicking will connect the wire to that terminal and a tip strip appears, displaying the name of the terminal. If the  window is open, the terminal area also blinks in the  window.

- To cancel a wire you started, press the <Esc> key, right-click, or click the terminal where you started the wire.

7. Display the front panel by clicking it or by selecting 

  .

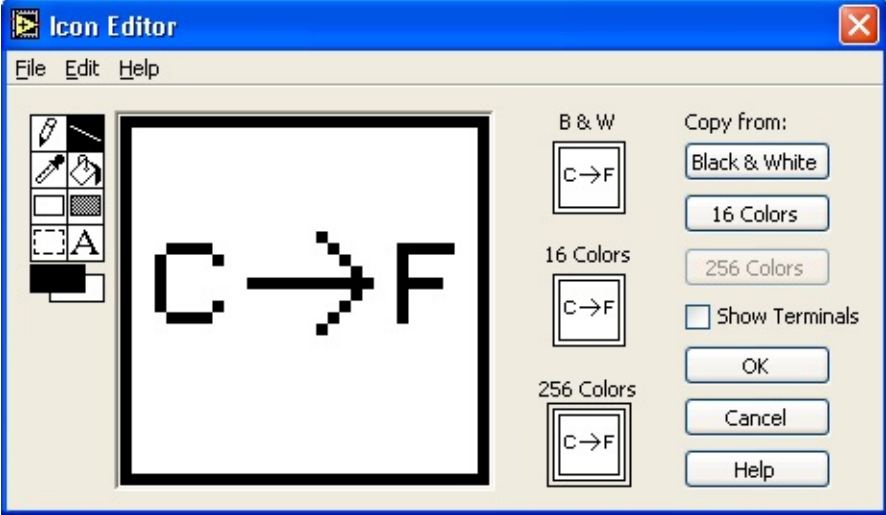
8. Save the VI as  in the  directory.

2.3.3 Run the VI

1. Enter a number in the numeric control and run the VI.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





A

✎

59

a.

Use the tool, shown in this media, or the tool to double-click the numeric control and type a new number.

b.

Click the button, shown at left, to run the VI.

c. Try several different numbers and run the VI again.

2.3.4 Icon and Connector Pane

1. Right-click the icon in the upper right corner of the front panel window and select from the shortcut menu. The dialog box appears.

2.

Double-click the tool, shown in this media, on the left side of the dialog box to select the default icon.

3. Press the key to remove the default icon.



4.

Double-click the tool, shown in this media, to redraw the border.

5. Create the icon in Figure 2.7.

Figure 2.7

a.


Double-click the  tool, shown in this media, and change the font to .

*♦♥ts .

b. Use the  tool to click the editing area where you will begin typing.

c. Type * and *. While the text is active, you can move the text by pressing the arrow keys.



d.

Use the  tool, shown in this media, to create the arrow.

NOTE: To draw horizontal or vertical straight lines, press the  key while you

use the  tool to drag the cursor.

e. Use the  tool and the arrow keys to move the text and arrow you created.

f. Select the  icon and click the  button in the  section




to create a black and white icon, which LabVIEW uses for printing unless you have a color printer.



Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>




60

CHAPTER 2. MODULAR PROGRAMMING

g. Select the  icon and click the  button in the  section.

h. When you complete the icon, click the  button to close the  dialog box. The icon appears in the upper right corner of the front panel and block diagram.

6.

Right-click the icon on the front panel and select  from the shortcut menu to define the connector pane terminal pattern. LabVIEW selects a default connector

pane pattern based on the number of controls and indicators on the front panel. For example, this front panel has two terminals, "G ♣ * and "G ♣ * , so LabVIEW selects a connector pane pattern with two terminals, shown in this media.

7. Assign the terminals to the numeric control and numeric indicator.

a. Select 

 *♦♥t G ①t  to display the *♦♥t G ①t  window.

b. Click the left terminal in the connector pane. The tool automatically changes to the


{  r  ♣ tool, and the terminal turns black.

c. Click the "G ♣ * control. A marquee highlights the control on the front panel.

d. Click an open space on the front panel. The marquee disappears, and the terminal changes to the data type color of the control to indicate that you connected the terminal.

e. Click the right terminal in the connector pane, and click the "G ♣ * indicator.

f. Click an open space on the front panel. Both terminals of the connector pane are orange.

g. Move the cursor over the connector pane. The *♦♥t G ①t  window shows that both terminals are connected to double-precision, floating-point values.




8. Save and close the VI. You will use this VI later in the course.

2.4 Using SubVIs

After you build a VI and create its icon and connector pane, you can use the VI as a subVI. To place a subVI on the block diagram, select *✉♥"t  ♦♥s

 *✉♥"t  ♦♥s |  G "t ' > ■ . Navigate to the VI you want to

use as a subVI and double-click to place it on the block diagram.

You also can place an open VI on the block diagram of another open VI. Use the P♦s  t  ♦♥♥  ♣ tool to

click the icon in the upper right corner of the front panel or block diagram of the VI you want to use as a subVI and drag the icon to the block diagram of the other VI.

2.4.1 Opening and Editing SubVIs

To display the front panel of a subVI from the calling VI, use the  ♣ G r't  ♣ ♣ or P♦s  t  ♦♥♥  ♣ tool

to double-click the subVI on the block diagram. You also can select **Ctrl+Shift+D**

Ctrl+Shift+D. To display the block

diagram of a subVI from the calling VI, press the **Ctrl+D** key and use the **Ctrl+Shift+D** or **Ctrl+Shift+D** tool to double-click the subVI on the block diagram.

Any changes you make to a subVI affect only the current instance of the subVI until you save the subVI.

When you save the subVI, the changes affect all calls to the subVI, not just the current instance.

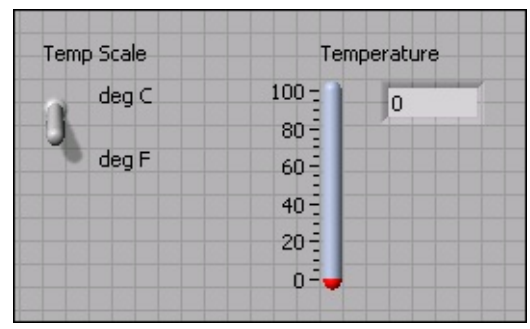
2.4.2 Setting Required, Recommended, and Optional Inputs and Outputs

In the

Ctrl+Shift+D window, which you can access by selecting **Ctrl+Shift+D** re-

quired terminals appear bold, recommended terminals appear as plain text, and optional terminals appear 5This content is available online at <http://cnx.org/content/m12208/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1/>



61

dimmed. The labels of optional terminals do not appear if you click the **Ctrl+Shift+D** **Ctrl+Shift+D**

Ctrl+Shift+D button in the **Ctrl+Shift+D** window.

You can designate which inputs and outputs are required, recommended, and optional to prevent users from forgetting to wire subVI terminals.

Right-click a terminal in the connector pane and select **Ctrl+Shift+D** from the shortcut menu.

A checkmark indicates the terminal setting. Select **Ctrl+Shift+D**, **Ctrl+Shift+D**, or **Ctrl+Shift+D**.

For terminal inputs, required means that the block diagram on which you placed the subVI will be broken if you do not wire the required inputs. Required is not available for terminal outputs. For terminal inputs and outputs, recommended or optional means that the block diagram on which you placed the subVI can execute if you do not wire the recommended or optional terminals. If you do not wire the terminals, the VI does not generate any warnings.

LabVIEW sets inputs and outputs of VIs you create to **Required** by default. Set a terminal setting

to required only if the VI must have the input or output to run properly. Refer to the Read File function located on the **File I/O** palette

and optional inputs and outputs.

2.5 Thermometer VI

Exercise 2.5.1

Complete the following steps to create a VI that reads a measurement from the temperature sensor on the DAQ Signal Accessory and displays the temperature in Celsius or Fahrenheit.

The sensor returns a voltage proportional to temperature. For example, if the temperature is 23 °C, the sensor output voltage is 0.23 V. The sensor is connected to Channel 0 of Device 1. Device 1 is the DAQ device. On some systems, the DAQ device may have another device number.

2.5.1 Front Panel

1. In the **Open VI** dialog box, click the arrow on the **Open Recent** button and select **Blank VI** from the shortcut menu or press the **Ctrl+N** keys to open a blank VI.

2. Create the following front panel.

Figure 2.8

a. Place a thermometer, located on the **Temperature** palette

on the front panel.

b.

b.

Type **Temperature (C)** in the label and press the **Ctrl+L** key or click the **Label**

button on the toolbar, shown at left.








This content is available online at <http://cnx.org/content/m12209/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>

A





62

CHAPTER 2. MODULAR PROGRAMMING

c. Right-click the thermometer and select       









          from the

shortcut menu to show the digital display for the thermometer.

d. Place a vertical toggle switch control, located on the    

palette, on the front panel.









e. Type       in the label and press the  key or click the  button.

f.





Use the     tool, shown in this media, to place a free label,      , next to the

   position of the switch. If you are using automatic tool selection, double-click the





































blank area of the front panel to begin typing a free label.












































g. Place a free label,      , next to the    position of the switch.

2.5.2 User Documentation


1. Document the VI so a description appears in the     window when you move the cursor over the VI icon.

a. Select   

                        to display the             dialog box.

b. Select                           from the                  pull-down menu.

c. Type the following description for the VI in the                      text box:



d. Click the button.

2. Document the thermometer indicator and switch control so descriptions appear in the

window when you move the cursor over the objects and tip strips appear on the front panel or block diagram when you move the cursor over the objects while the VI runs.

- Right-click the thermometer indicator and select "r t v" from the shortcut menu.

- Type the following description for the thermometer in the "r t v" text box:

s '2 s t t r 't r s r t *

- Type t r 't r in the text box.

- Click the button.

- Right-click the switch control and select "r t v" from the shortcut menu.

- Type the following description for the vertical switch control in the "r t v" text box:

t r v s t s " * v r v t r s s t s r

t t r 't r s r t *

- Type s " * r * in the text box.

- Click the button.

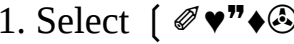
3. Select

to display the window.

4. Move the cursor over the front panel objects and the VI icon to display the descriptions in

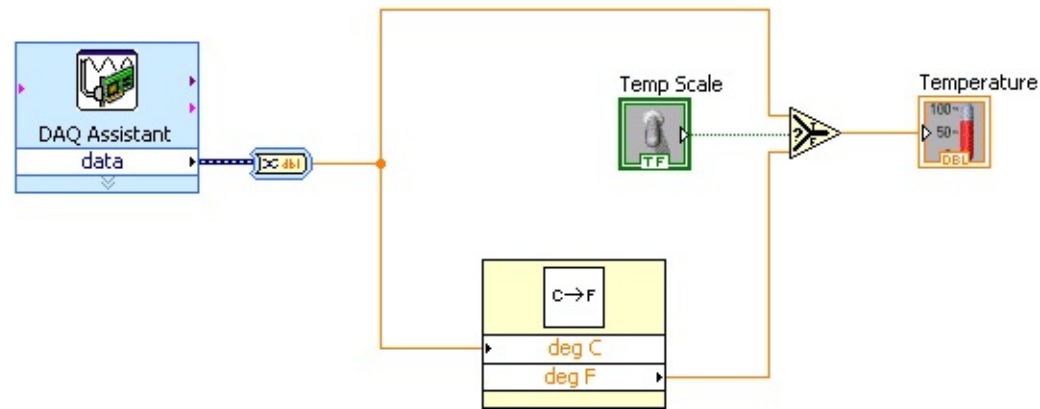
the  window.

2.5.3 Block Diagram

1. Select 

 to display the block diagram (Figure 2.9).

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



63

Figure 2.9

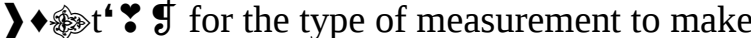
2.

Place the  Express VI, located on the  palette, on

the block diagram. When you place this Express VI on the block diagram the DAQ Assistant configuration dialog box appears.

the block diagram. When you place this Express VI on the block diagram the DAQ Assistant configuration dialog box appears.

a. Select 

 for the type of measurement to make.

b. Select 

' * (or * → * ' *) for the physical channel and click the * ♥ s♥ button.

c. You must multiply the temperature by 100 to convert it from voltage to Celsius. On the

! tt ♥ s tab, select * st♦♦ | " " ♥ ♥ * r t t ♦ t . Select a ▲ ♥ t r scale. Name the scale | t ♦♦ r t r t . Enter a s " " t s " " of * * * . Click the ❖ □ button.

d. Set ♥ ♥ ♥ * . Set ♥ ' ① ♥ * * *

e. Select the * " q r t * | ♦♦♥ t option on the | ' s | ♥ ♥ ♥ ♥ tab. Click the ❖ □ button.

NOTE: If you do not have a DAQ device with a temperature sensor connected to your computer, use the * t ♦♦♦ | t ")♦ t ♥ t VI, located in the * \ * ① r " s s ▲ ") * { * ' s " s ■ directory.

3.

Place

the

* ♥ ♥ t r t : r ♦♦ * ② ♥ ' ♥ " * ' t ' Express VI, located on the

* ♥ ♥ " t ♥ ♥ s | ♥ ♥ ♥ ♥ ♥ ♥ ♥ ♥ ♥ ♥ t ♥ ♥ palette, on the block diagram.

This VI converts

the dynamic data type.

In the configuration dialog box, select | ♥ ♥ ♥ ♥ s " " r in the

| s ♥ ♥ ♥ ♥ t ♥ ♥ ♥ " t ' t ② ♦ t listbox.

4.

Place the * ♥ ♥ ♥ t * t ♦ * VI on the block diagram.

Select * ♥ ♥ ♥ " t ♥ ♥ s

♥ ♥ ♥

* ♥ ♥ ♥ " t ♥ ♥ s | t t " t ') ■ , navigate to * \ * ① r " s s \ ▲ ") * { * ' s " s \ * ♥ ♥ ♥ t * t ♦ * ♥ ♥ ♥ . This VI converts the Celsius readings to Fahrenheit.

5.

Place

the

the "t function,

located

on

the

the "t function, located on the

the "t function, located on the palette, on the block diagram.

This function re-

turns either the Fahrenheit (the "t function) or Celsius (the r function) temperature value, depending on the

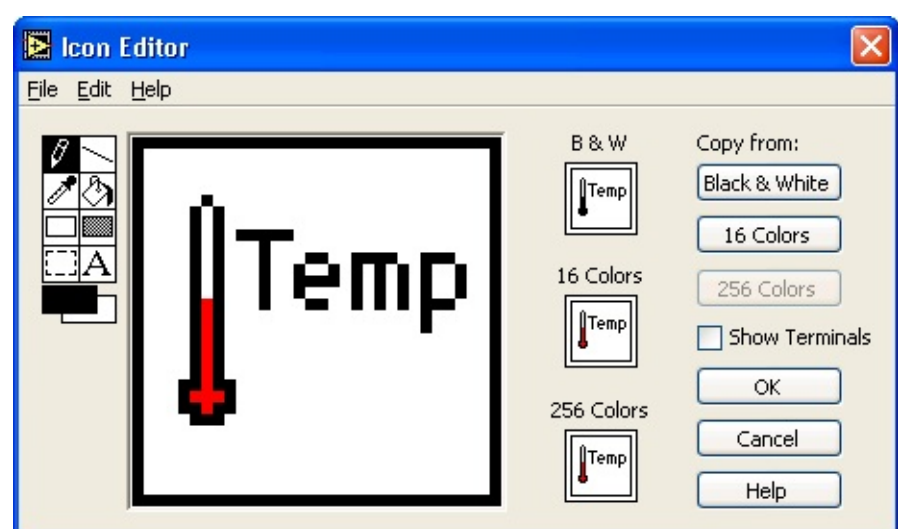
value of the "t function. Use the Place tool to place the icons as shown in the block diagram (Figure 2.9) and use the Wire tool to wire them together.

NOTE:

To display terminals for a node, right-click the icon and select Show Terminals from the shortcut menu.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





64

CHAPTER 2. MODULAR PROGRAMMING

2.5.4 Front Panel

1. Display the front panel by clicking it or by selecting { }

*r♦♥t P'♥♣ .

2.

Click the | *♦♥t ② button, shown at left, to run the VI continuously.

3. Put your finger on the temperature sensor and notice the temperature increase.

4. Click the | *♦♥t ② button again to stop the VI. This allows the VI to finish the current run of the VI.

2.5.5 Icon and Connector Pane

1. Create an icon so you can use the r♦♥t r VI as a subVI. The following icon is an example. If necessary, create a simpler icon to save time.

Figure 2.10

a. Right-click the icon in the upper right corner of the front panel and select t Icon from the shortcut menu. The t♦r dialog box appears.

b.

Double-click the t♦r tool, shown at left, on the left side of the t♦r dialog box to select the default icon.

c. Press the < t♦r > key to remove the default icon.

d.

Double-click the | t♦r tool, shown at this media, to redraw the border.

e.

Use the P tool, shown in this media, to draw an icon that represents the thermometer.

f. Use the tools to color the thermometer red.

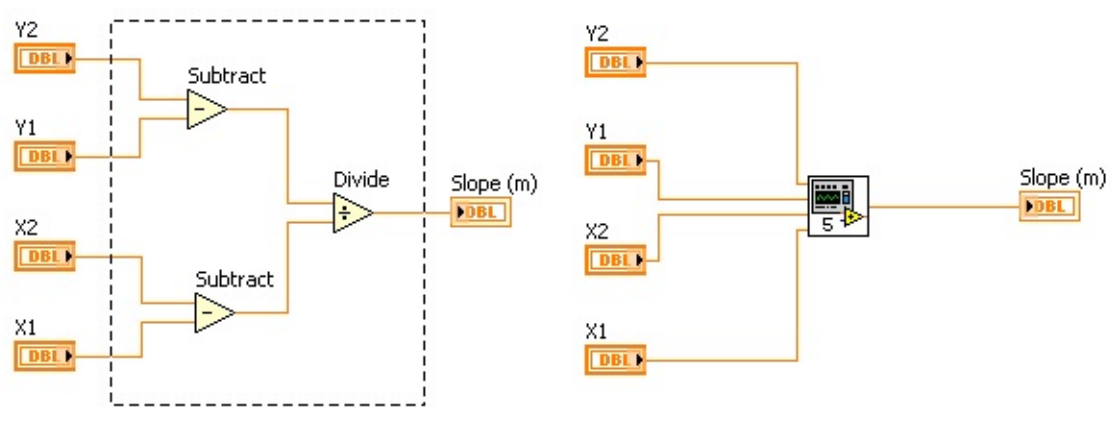
NOTE: To draw horizontal or vertical straight lines, press the < key while you use the P tool to drag the cursor.

g.

Double-click the tool, shown in this media, and change the font to .

h. Type . Reposition the text if necessary.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



65

i. Select the icon and select in the section to create a black and white icon, which LabVIEW uses for printing unless you have a color printer.

j. When the icon is complete, click the button. The icon appears in the upper right corner of the front panel.

2. Right-click the icon and select from the shortcut menu and assign terminals to the switch and the thermometer.



a. Click the left terminal in the connector pane.

b. Click the control. The left terminal turns green.

c. Click the right terminal in the connector pane.

d. Click the  indicator. The right terminal turns orange.



e. Click an open space on the front panel.

3. Save the VI as  in the  directory. You

will use this VI later in the course.

4. Close the VI.

2.6 Creating a SubVI from Sections of a VI

You can simplify the block diagram of a VI by converting sections of the block diagram into subVIs. Convert a section of a VI into a subVI by using the  tool to select the section of the block diagram you want to reuse and selecting 

 An icon for the new subVI replaces the selected section

of the block diagram. LabVIEW creates controls and indicators for the new subVI and wires the subVI to the existing wires. Figure 2.11 shows how to convert a selection into a subVI.

Figure 2.11

The new subVI uses a default pattern for the connector pane and a default icon. Double-click the subVI to edit the connector pane and icon, and to save the subVI.

NOTE: Do not select more than 28 objects to create a subVI because 28 is the maximum number of connections on a connector pane.

This content is available online at <http://cnx.org/content/m12210/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>

CHAPTER 2. MODULAR PROGRAMMING

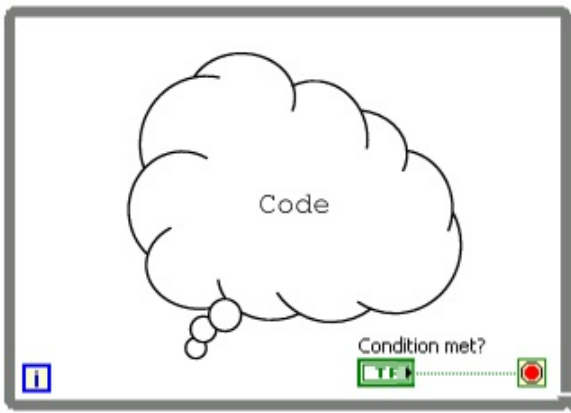
2.7 Summary, Tips, and Tricks on Modular Programming

- A VI within another VI is called a subVI. Using subVIs helps you manage changes and debug the block diagram quickly.
- After you build a VI front panel and block diagram, build the icon and the connector pane so you can use the VI as a subVI.
- The connector pane is a set of terminals that corresponds to the controls and indicators of that VI.

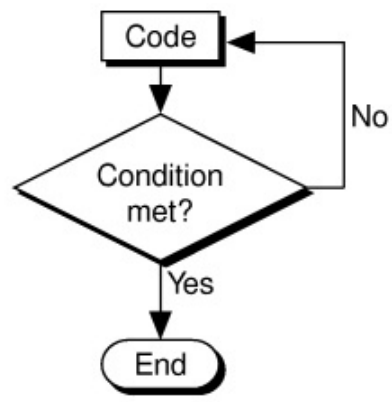
- Define connections by assigning a front panel control or indicator to each of the connector pane terminals.
- Create custom icons to replace the default icon by double-clicking the icon in the upper right corner of the front panel to open the "Custom Icons" dialog box.
- In the "Custom Icons" dialog box, double-click the Text tool to select a different font.
- You can designate which inputs and outputs are required, recommended, and optional to prevent users from forgetting to wire subVI connections. Right-click a terminal in the connector pane and select "Terminal Properties" from the shortcut menu.
- Document a VI by selecting "Tools" > "Print" and selecting "Print" from the pull-down menu. When you move the cursor over a VI icon, the "Info" window displays this description and indicates which terminals are required, recommended, or optional.
- Add descriptions and tip strips to controls and indicators by right-clicking them and selecting "Properties" from the shortcut menu. When you move the cursor over controls and indicators, the "Info" window displays this description.
- Convert a section of a VI into a subVI by using the "SubVI" tool to select the section of the block diagram you want to reuse and selecting "Create SubVI" from the shortcut menu.

This content is available online at <<http://cnx.org/content/m12211/1.1/>>.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



①



②

```

Repeat (code);
Until Condition met;
End;
  
```





③





Chapter 3

Repetition and Loops

3.1 While Loops


A  executes a subdiagram until a condition is met. The  is similar to a  or a .

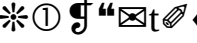
 in text-based programming. Figure 3.1 shows a  in LabVIEW, a flow chart

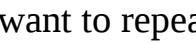
equivalent of the  functionality, and a pseudo code example of the functionality of the .

.

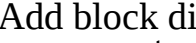
Figure 3.1

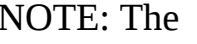
The  is located on the  palette.


Select the  from

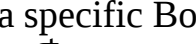
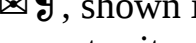
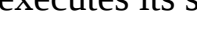
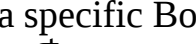
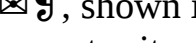
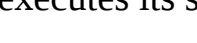
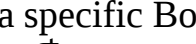
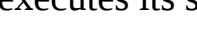
the palette then use the cursor to drag a selection rectangle around the section of the block diagram you want to repeat. When you release the mouse button, a  boundary encloses the section you



selected.

Add block diagram objects to the  by dragging and dropping them inside the .

NOTE: The  always executes at least once.

The  executes the subdiagram until the conditional terminal, an input terminal, receives

a specific Boolean value. The default behavior and appearance of the conditional terminal is   , shown in this media. When a conditional terminal is   , the  executes its subdiagram until the conditional terminal receives a  value.

The  terminal, an output terminal, shown in this media, contains the number of completed iterations. The iteration count always starts at zero. During the first iteration, the iteration terminal returns .

In the block diagram in Figure 3.2, the  executes until the subVI output is greater than or equal to  and the  control is . The  function returns  only if both

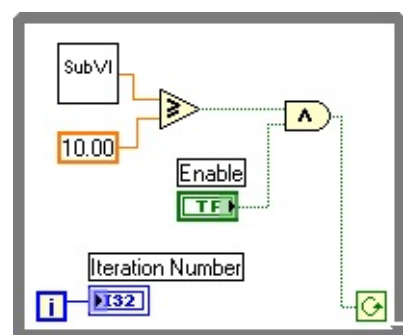
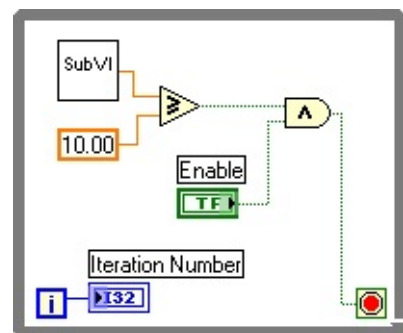
inputs are r and s .

Otherwise, it returns $*s$.

This content is available online at <http://cnx.org/content/m12212/1.2/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>

67



68

CHAPTER 3. REPETITION AND LOOPS

Figure 3.2

In the previous example (Figure 3.2), there is an increased probability of an infinite loop. Generally, the desired behavior is to have one condition met to stop the loop, rather than requiring both conditions to be met.

You can change the behavior and appearance of the conditional terminal by right-clicking the ter-

terminal or the border of the $\{ \heartsuit \spadesuit \clubsuit \}$ and selecting $*\heartsuit \spadesuit \clubsuit$, shown at left. You also can use the

$\spadesuit \clubsuit \heartsuit \spadesuit \clubsuit$ tool to click the conditional terminal to change the condition. When a conditional terminal is

$*\heartsuit \spadesuit \clubsuit$, the $\{ \heartsuit \spadesuit \clubsuit \}$ executes its subdiagram until the conditional terminal receives a $*s$.

value, as shown in Figure 3.3.

Figure 3.3

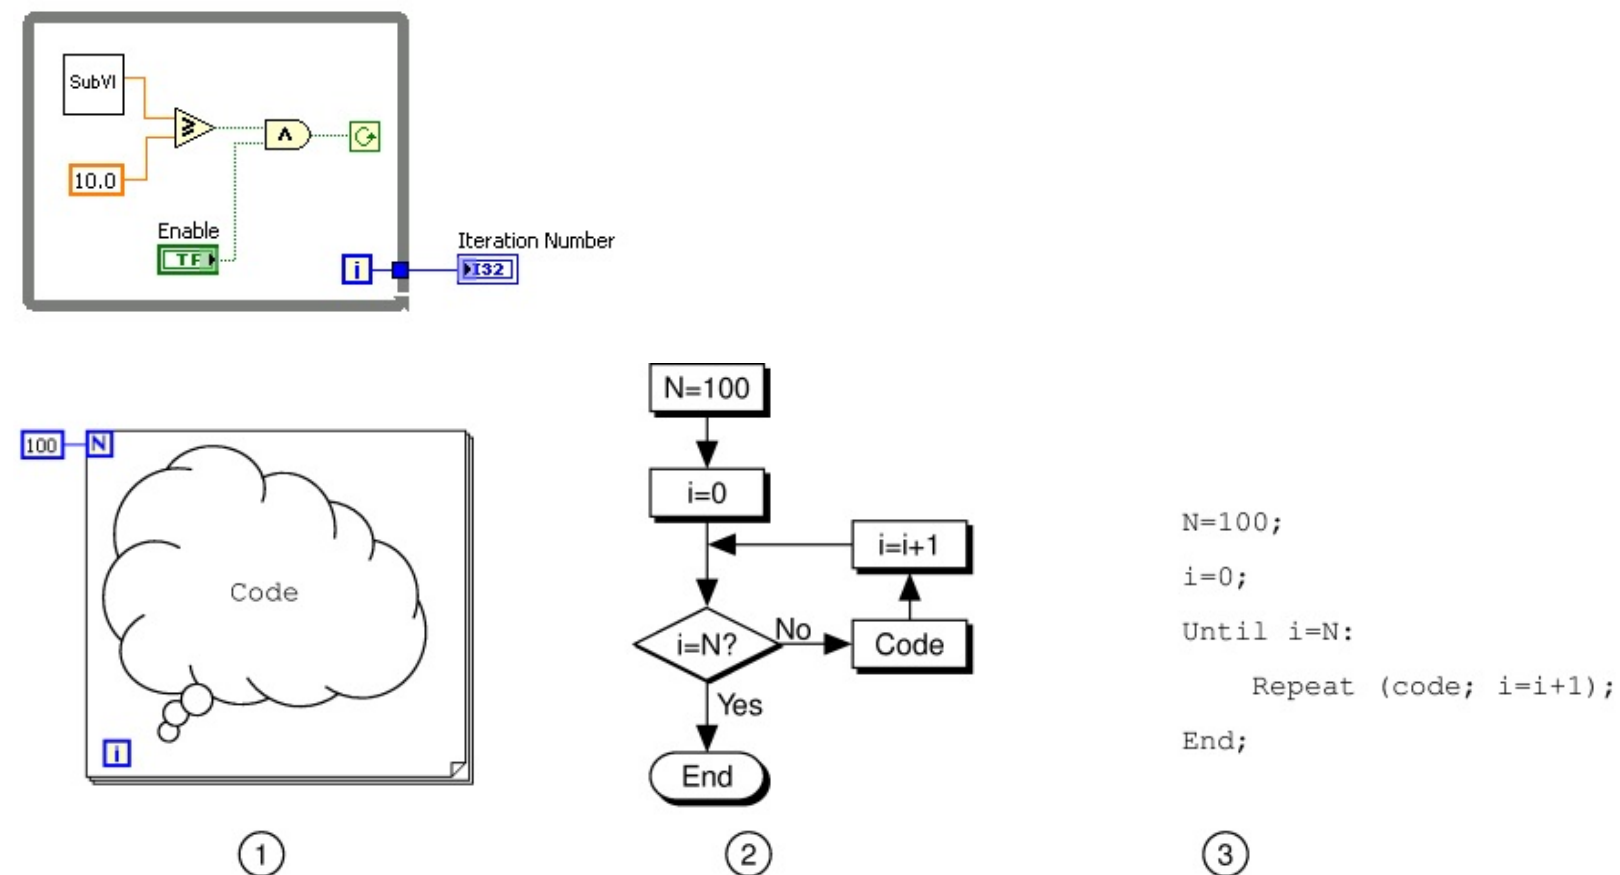
The executes until the subVI output is less than ***** or the control is .

3.1.1 Structure Tunnels

Data can be passed out of or into a through a tunnel. Tunnels feed data into and out of structures. The tunnel appears as a solid block on the border of the . The block is the color of the data type wired to the tunnel. Data pass out of a loop after the loop terminates. When a tunnel passes data into a loop, the loop executes only after data arrive at the tunnel.

In Figure 3.4, the terminal is connected to a tunnel. The value in the tunnel does not get passed to the indicator until the has finished execution.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



69

Figure 3.4

Only the last value of the iteration terminal displays in the indicator.

3.2 For Loops2

A **For Loop** executes a subdiagram a set number of times. Figure 3.5 shows a **For Loop** in LabVIEW, a flow chart equivalent of the **For Loop** functionality, and a pseudo code example of the functionality of the **For Loop**

For Loop.

Figure 3.5

The **For Loop** is located on the **Functions** palette.

You also can

place a **For Loop** on the block diagram, right-click the border of the **For Loop**, and select **Convert to For Loop**

from the shortcut menu to change a **For Loop** to a **For Loop**. The value in the **Count**

terminal (an input terminal), shown in this media, indicates how many times to repeat the subdiagram.

The **Iteration** terminal (an output terminal), shown in this media, contains the number of completed iterations. The iteration count always starts at zero. During the first iteration, the iteration terminal returns **0**.

The **For Loop** differs from the **While Loop** in that the **For Loop** executes a set number of times. A **For Loop**

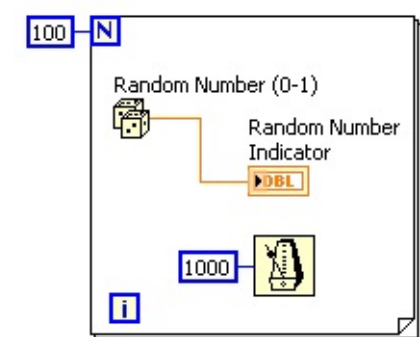
stops executing the subdiagram only if the value at the conditional terminal exists.

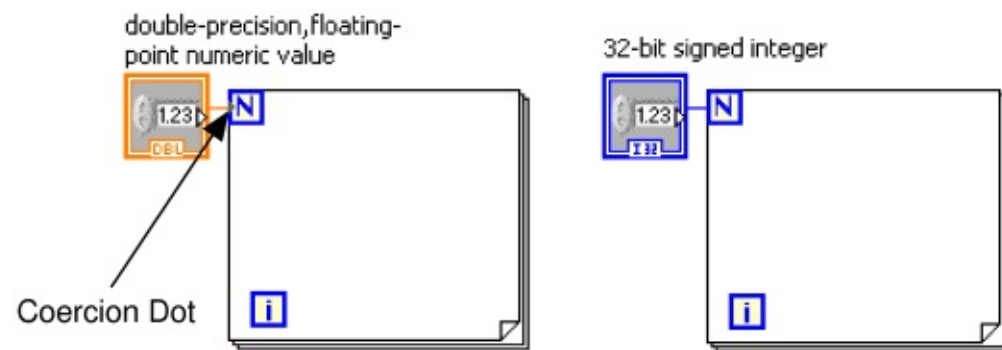
The **For Loop** in Figure 3.6 generates a random number every second for 100 seconds and displays the

random numbers in a numeric indicator.

This content is available online at <http://cnx.org/content/m12214/1.2/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>






70


CHAPTER 3. REPETITION AND LOOPS

Figure 3.6

3.2.1 Wait Functions

The  function, shown in this media, monitors a millisecond counter

and waits until the millisecond counter reaches a multiple of the amount you specify. Use this function to synchronize activities. Place this function within a loop to control the loop execution rate.

The  function, shown in this media, adds the wait time to the code execution time. This can cause a problem if code execution time is variable.

NOTE: The  Express VI, located on the  palette, be-

comes similar to the  function with the addition of built-in error clusters. Refer to Clus-

ters3 for more information about error clusters.

3.2.2 Wait Functions

LabVIEW can represent numeric data types as signed or unsigned integers (8-bit, 16-bit, or 32-bit), floating-point numeric values (single-, double-, or extended-precision), or complex numeric values (single-, double-

, or extended-precision). When you wire two or more numeric inputs of different representations to a function, the function usually returns output in the larger or wider format. The functions coerce the smaller representations to the widest representation before execution, and LabVIEW places a coercion

dot on the terminal where the conversion takes place.





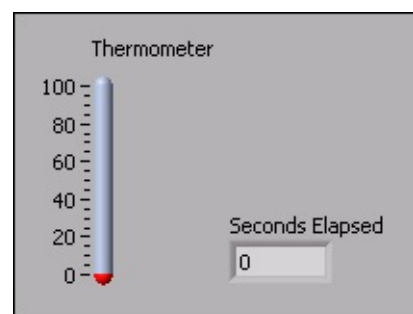
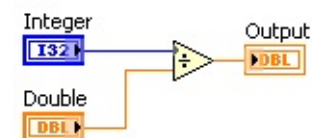
For example, the   count terminal is a 32-bit signed integer. If you wire a double-precision, floating-point numeric to the count terminal, LabVIEW coerces the numeric to a 32-bit signed integer. A coercion dot appears on the count terminal of the first  , as shown in Figure 3.7.

Figure 3.7

3"Error Clusters" <<http://cnx.org/content/m12231/latest/>>

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



71

If you wire two different numeric data types to a numeric function that expects the inputs to be the same data type, LabVIEW coerces one of the terminals to the same representation as the other terminal.

LabVIEW chooses the representation that uses more bits. If the number of bits is the same, LabVIEW chooses unsigned over signed.








In the example in Figure 3.8, a 32-bit signed integer (I32) and a double-precision, floating-point numeric value (DBL) are wired to the   function. The 32-bit signed integer is coerced since it uses fewer bits than the double-precision, floating-point numeric value.

Figure 3.8

To change the representation of a numeric object, right-click the object and select   from the shortcut menu. Select the data type that best represents the   data types.

When LabVIEW converts double-precision, floating-point numeric values to integers, it rounds to the nearest integer. LabVIEW rounds  to the nearest even integer. For example, LabVIEW rounds 2.5 to 2 and 3.5 to 4.

Refer to the Data Types section of Introduction to LabVIEW, of this manual or to the LabVIEW Help for more information about data types.

3.3 Timed Temperature VI4

Exercise 3.3.1

Complete the following steps to build a VI that uses the Thermometer VI to read a temperature once every second for a duration of one minute.


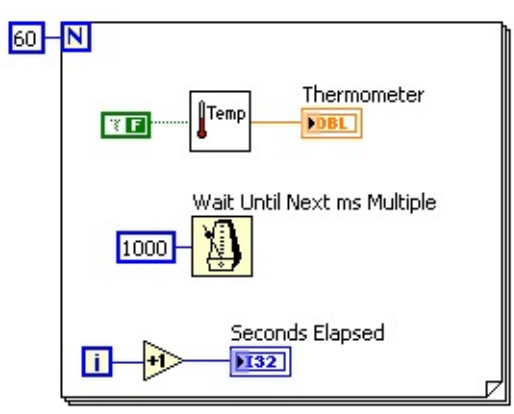
3.3.1 Front Panel

1. Open a blank VI and build the front panel shown in Figure 3.9.

Figure 3.9

This content is available online at <http://cnx.org/content/m12216/1.1/>.

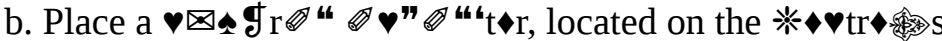
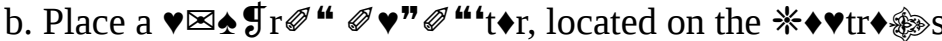
Available for free at Connexions <http://cnx.org/content/col11408/1.1>



CHAPTER 3. REPETITION AND LOOPS

a. Place a thermometer icon, located on the Instruments palette, on the

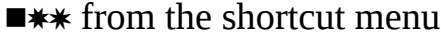
front panel. This provides a visual indication of the temperature reading.

b. Place a  on the front panel, located on the s

 palette,

on the front panel. Label this indicator  "°F" . Right-click the indicator and

select  from the shortcut menu.

 from the shortcut menu.

3.3.2 Block Diagram


1. Build the block diagram shown in Figure 3.10.

Figure 3.10



-

Place a , located on the s



 palette,

on the block diagram. Right-click the  terminal in the upper

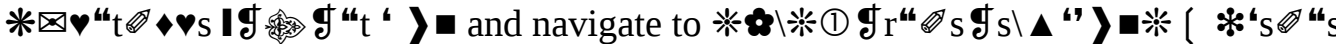

left corner of the  and select  from the shortcut menu.

Type  in the constant to set the  to repeat 60 times.

-

Place the  VI on the block diagram. Select s



 and navigate to 

 to place the VI. This VI reads the temperature from the DAQ

device. Right-click the  input and select 


 from

the shortcut menu. Use a  constant for Fahrenheit or a  constant for

Celsius.


NOTE: If you do not have a DAQ device with a temperature sensor on Channel 0, use

the  VI instead.

Place the  function,



located on the

 palette, on the block diagram.

Right-click the input and select 

from the shortcut menu. Enter

a value of `1000` to set the wait to every second.

Place the  function, located on the 





 palette, on the block diagram. This function

adds one to the iteration terminal output.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>


73



2. Save this VI as  in the  directory.

3. Run the VI. The first reading might take longer than one second to retrieve if the computer needs to configure the DAQ device.


4. If time permits, complete the following optional and challenge steps, otherwise close the VI.

3.3.3 Optional

1. Build a VI that generates random numbers in a  and stops when you click a stop button on the front panel.

2. Save the VI as  in the  directory.

3.3.4 Challenge

1. Modify the  VI to stop when the stop button is clicked or when the

{ } reaches a number of iterations specified by a front panel control.

2. Select

to save the VI as in the directory.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

CHAPTER 3. REPETITION AND LOOPS

3.4 Summary, Tips, and Tricks on Repetition and Loops

- Use structures on the block diagram to repeat blocks of code and to execute code conditionally or in a specific order.
- The executes the subdiagram until the terminal receives a specific Boolean value. By default, the executes its subdiagram until the conditional terminal receives a value.
- The executes a subdiagram a set number of times.
- You create loops by using the cursor to drag a selection rectangle around the section of the block diagram you want to repeat or by dragging and dropping block diagram objects inside the loop.
- The function makes sure that each iteration occurs at certain intervals. Use this function to add timing to loops.
- The function waits a set amount of time.
- Coercion dots appear where LabVIEW coerces a numeric representation of one terminal to match the numeric representation of another terminal.
- Use shift on and to transfer values from one loop iteration to the next.
- Create a shift by right-clicking the left or right border of a loop and selecting

| st r from the shortcut menu.

- To configure a r st r to carry over values to the next iteration, right-click the left terminal and select * * st r from the shortcut menu.
- The * * st r stores data when the loop completes an iteration, sends that value to the next iteration of the loop, and transfers any data type.
- Use the * * st r to avoid unnecessarily long wires.

5This content is available online at <<http://cnx.org/content/m12219/1.1/>>.



Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>





Chapter 4









Customizing VIs








4.1 Configuring the Appearance of Front Panels¹

After you build a VI, you can configure the appearance of the front panel so users can more easily operate the VI. For example, you can hide the menu bar and scrollbars to create VIs that look and behave like standard dialog boxes for each platform.

Select   

    to configure the appearance and behavior of a VI. You also can right-click

the VI icon on the front panel or block diagram and select     from the shortcut menu. You cannot access the     dialog box while a VI is running. Refer to the LabVIEW Basics II: Development Course Manual for more information about configuring the behavior of VIs.

Use the    pull-down menu at the top of the     dialog box to select from several

different option categories, including the following:

General - Displays the current path where a VI is saved, its revision number, revision history, and any changes made since the VI was last saved. You also can use this page to edit the icon or the

size of the alignment grid for the VI.

Documentation - Use this page to add a description of the VI and link to a help file topic. Refer to the original Thermometer VI (Section 2.5) for more information about documenting VIs.

Security - Use this page to lock or password-protect a VI.

Window Appearance - Use this page to configure various window settings.

Window Size - Use this page to set the size of the window.

Execution - Use this page to configure how a VI runs. For example, you can configure a VI to run immediately when it opens or to pause when called as a subVI.

Editor Options - Use this page to set the size of the alignment grid for the current VI and to change the style of control or indicator LabVIEW creates when you right-click a terminal and select

      or       from the shortcut menu.

4.1.1 Window Appearance

In the     dialog box, select {       from the    pull-down

menu to cus-

tomize the window appearance for VIs.

These options apply to the VI when it is running. Use these options to change how the user interacts with the application by restricting access to LabVIEW features and by changing the way the window looks and behaves. You can make the VI look and act like a dialog box so the user cannot interact with other windows while the VI window is open. You also can remove the scrollbars and toolbar, and you can set a window to be centered or automatically sized to fit the screen.


1This content is available online at <<http://cnx.org/content/m12299/1.2/>>.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

75

76

CHAPTER 4. CUSTOMIZING VIS



By default, the VI window title is the same as the VI name. You can customize the VI window title to make it more descriptive than the VI filename. This is useful for localized VIs so the VI window title can be translated to the local language. Remove the checkmark from the  checkbox to edit

      .

To configure the window appearance, select one of the following window styles. A graphical representation of each style displays on the right when you select the style.

Top-level Application Window - Shows the title bar and menu bar, hides the scrollbars and toolbar, allows the user to close the window, allows run-time shortcut menus, does not allow resizing, and shows the front panel when called.

Dialog - The VI functions as a dialog box in the operating system, so the user cannot interact with other LabVIEW windows while this VI window is open. This option does not prevent you from

bringing windows of other applications to the front. (UNIX) You cannot make a window stay in front of all other windows. Dialog style windows stay on top, have no menu bar, scrollbars, or toolbar, allow the user to close the window but not resize it, allow run-time shortcut menus, and show the front panel when called. Also, if a Boolean parameter on the front panel is associated with the  or  key, LabVIEW highlights the parameter with a dark border.

Default - Same window style used in the LabVIEW development environment.

Custom - Custom window style.

Customize - Displays the Customize Window Appearance dialog box.

4.1.2 Window Size

In the **Properties** dialog box, select **Window Size** from the **Appearance** pull-down menu to customize the window size for VIs. This page includes the following components:

Minimum Panel Size - Sets the minimum size of the front panel. If you allow the user to resize the window on the **Appearance** page, the user cannot resize the front panel smaller than the width and height you set on this page.

Size the front panel to the width and height of the entire screen - Automatically resizes the front panel window to fit the screen when you run the VI. The VI does not retain a record of its original size and location, so it stays in the new location if you switch back to edit mode.

Maintain proportions of window for different monitor resolutions - Resizes the VI so it takes up approximately the same amount of screen space when opened on a computer with a different monitor resolution. For example, if you develop a VI on a computer with a monitor resolution of 1,024 × 768, you might want to run the VI on a computer with a monitor resolution of 800 × 600.

Use this control in conjunction with scaling one or all the objects on the front panel.

Scale all objects on front panel as the window resizes - Automatically resizes all front panel objects with respect to and in proportion to the size of the front panel window. Text does not resize because the font sizes are fixed. Use this option when you allow the user to resize the front panel window.

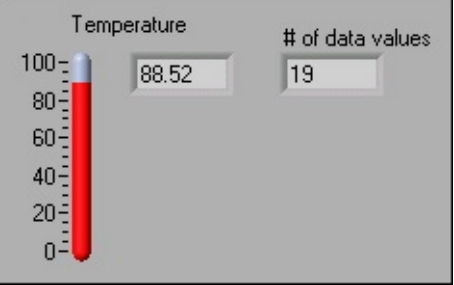
4.2 Opening SubVI Front Panels when a VI Runs²

A single front panel sometimes is too restrictive to present numerous options or displays. To solve this problem, organize VIs so the top-most VI presents high-level options, and subVIs present related options.

TIP: You also can use tab controls to make the front panel more usable.

²This content is available online at <http://cnx.org/content/m12300/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>



When LabVIEW calls a subVI, ordinarily the subVI runs without opening its front panel. If you want a single instance of the subVI to open its front panel when called, use the **Open Front Panel When Called** dialog box. If you want every instance of the subVI to open its front panel when called, use the **Open Front Panel When Called** dialog box.

4.2.1 Single Instance

If you want a single instance of the subVI to open its front panel when called, right-click the subVI and select

Open Front Panel When Called from the shortcut menu to display the **Open Front Panel When Called** dialog box. Place checkmarks in the **Open Front Panel When Loaded** and **Close Afterwards if Originally Closed** checkboxes to

open the subVI front panel when called. This dialog box also includes the following components:

Open Front Panel when loaded - Displays the front panel when the subVI loads or when the VI that calls it loads.

Show Front Panel when called - Displays the front panel when the subVI is called.

Close afterwards if originally closed - If **Open Front Panel when loaded** also contains a checkmark and if the subVI was previously closed, the front panel closes after the subVI runs.

Suspend when called - Suspends a subVI when called and waits for user interaction. This option is the same as selecting **Open Front Panel When Called**.

Open Front Panel When Called.

4.2.2 Every Instance

If you want every instance of the subVI to open its front panel when called, open the subVI and select **Open Front Panel When Called**

Open Front Panel When Called. Select **Open Front Panel When Called** from the **Open Front Panel When Called** pull-down menu, click the **Open Front Panel When Called** button, and place checkmarks in the **Open Front Panel When Loaded** and **Close Afterwards if Originally Closed** checkboxes.

thermometer. Right-click the thermometer and select **Format > Numeric > Signed Integer**

from the shortcut menu to display the digital value.

the shortcut menu to display the digital value.

- Change the format to signed 32-bit integer (I32) representation.

4.3.2 Block Diagram

1. Build the following block diagram.

Figure 4.2

a.

Place the **Get Temperature** VI from a previous exercise (Section 2.5) on the block diagram. This VI acquires the current temperature value.

b.

Place

the

Format to Signed Integer function,

located

on

the

Block Diagram Palette, on the block diagram. Right-

click the input, select **Integer**

in the constant to cause the

timer to execute every 500 ms.

c.

Place the **Wait** function, located on the **Block Diagram Palette**

Block Diagram Palette

Block Diagram Palette, on the block diagram. This function multiplies

each element of the output array by 0.50 to scale the x values to represent the time



interval at which the VI takes the measurements.

d.


Place the  VI, located in the  directory,

on the block diagram. This VI plots the temperature data on an XY graph.

e. Complete the block diagram as shown in the previous figure.

2. Save the VI as  in the  directory.

3. Configure the subVI to display its front panel when called.

a. Double-click the  subVI to open its front panel.



Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



79

b. Select .

 .

c. Select  from the  pull-down menu.


















d. Click the  button. Configure the window appearance as shown in the dialog box (Figure 4.3).





Figure 4.3

- e. Click the  button twice and save and close the subVI. If the front panel is not closed, it will not close after the subVI runs.
4. Run the    VI. After the VI acquires 10 seconds of temperature data, the front panel of the  VI displays and plots the temperature data. Click the  button to return to the calling VI.
5. Change the window appearance settings for the  subVI to the  window style.
6. Save and close the subVI.
7. Run the    VI again. The  subVI front panel window behaves as a dialog box. For example, the window stays on top of all other windows and uses the system colors.
8. Close all open VIs.

4.4 Keyboard Shortcuts for Controls

While a VI runs, you can press the  key to change the key focus from one control to the next. The key focus is the same as if you had clicked the control. While a control has the key focus, you can use the keyboard to enter the control value. If the control is a text or numeric control, LabVIEW highlights the text so you can edit it. If the control is Boolean, press the  or the  key to change its value.

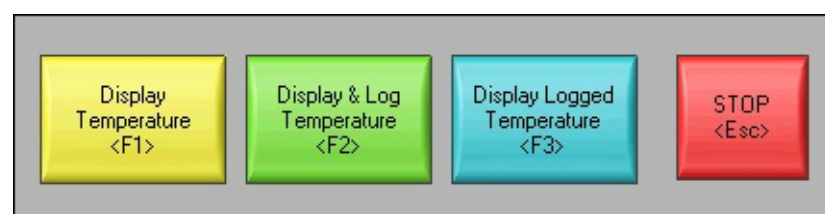
You also can assign keyboard shortcuts to controls so users can navigate the front panel by pressing other keys. Right-click the control and select 

    from the shortcut menu to display the





    dialog box.






This content is available online at <http://cnx.org/content/m12302/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>













NOTE:

The    

     shortcut menu item is dimmed for indicators because

you cannot enter data in an indicator.

Select the shortcut key you want to assign to the control in the      section. The front panel control names that appear in the      listbox correspond to the owned labels of those controls.

To prevent users from accessing a control by pressing the  key while the VI runs, place a checkmark in the                .

4.5 Temperature System VI5

Exercise 4.5.1

4.5.1 Front Panel































1. Open the      VI located in the              directory. The following front panel is already built.

Figure 4.4

The front panel contains four Boolean buttons (Figure 4.4). The mechanical action of the first three buttons is    . This setting changes the control value when you click it and retains the new value until the VI reads it once. At this point the control reverts to its default value, even if you keep pressing the mouse button. This action is similar to a circuit breaker and is useful for stopping    or for getting the VI to perform an action only once each time you set the control. The mechanical action of the  button is    . This setting changes the control value only after you release the mouse button within the graphical boundary of the control. When the VI reads it once, the control reverts to the old value. This action guarantees at least one new value. This action is similar to dialog box buttons and system buttons.

2. Right-click a control and select →

from the shortcut menu to display the dialog box.

3. In the section, assign the shortcut key shown in the Figure 4.4.

4. Repeat list, item 2, p. 80 and list, item 3, p. 80 for each control.

4.5.2 Block Diagram

1. Examine the block diagram (Figure 4.5) which is already built.

This content is available online at <http://cnx.org/content/m12303/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>

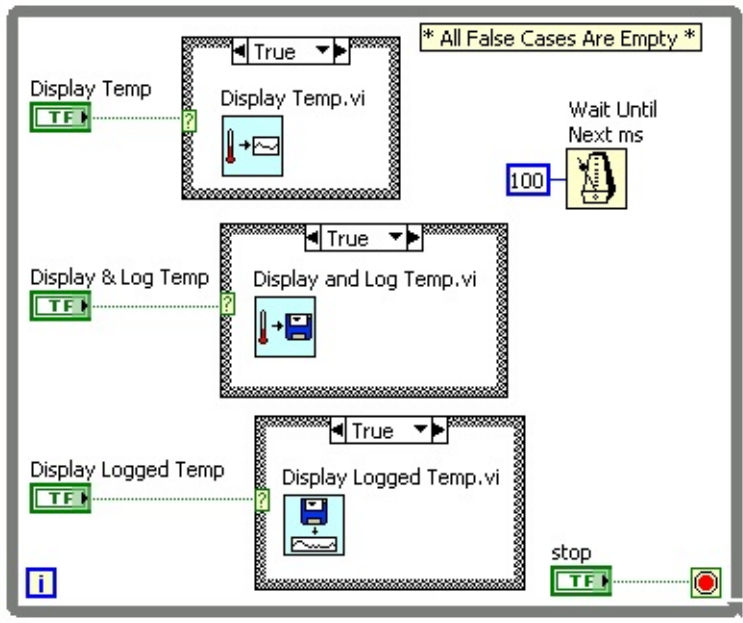


Figure 4.5

The VI simulates a temperature measurement every 500 ms and plots it on a strip chart.

•

The VI simulates a temperature measurement every 500 ms, plots it on a strip chart, and logs it to a file.

•

The VI opens a file that you select, reads the logged data, and displays them on a graph.

2. Configure each subVI to display its front panel when called.

a. Right-click the subVI and select from the shortcut menu.

b. Place checkmarks in the and checkboxes.

c. Click to close the dialog box.

d. Repeat list, item 1, p. 81 through list, item 3, p. 81 for the remaining two subVIs.

3. Save the VI. Display the front panel and run the VI.

4. Click each button and press the corresponding keyboard shortcuts. The three subVIs return to the VI front panel when you press the < > key. Try pressing the < > key to do so.

5. Stop the VI.

6. Configure the VI to run automatically when you open the VI.

a. Select

Properties.

b. Select from the pull-down menu.


c. Place a checkmark in the checkbox.

7. Configure the VI so the menu bar and toolbar are not visible while the VI runs.

a. Select from the pull-down menu.










b. Click the button.

CHAPTER 4. CUSTOMIZING VIS

c. Remove the checkmarks from the     and    ( |   ).

d. Click the  button twice.

8. Save and close all VIs.

9. Open the          VI again. The VI runs automatically when you open it. Click the buttons on the front panel or use the keyboard shortcuts.

10. Stop and close all VIs.


4.6 Editing VI Properties⁶


Sometimes you can select VI properties that make it difficult to edit a VI. For example, you might select the

  (  ) option and disable the menu bar and toolbar. If you set the VI to close and exit LabVIEW

after it runs, you cannot stop the VI and edit it without it closing and exiting LabVIEW. This VI would be very difficult to edit.

NOTE: To exit LabVIEW, you can use the Quit LabVIEW function located on the    




        palette. This function aborts all running VIs and ends the


current session of LabVIEW. The function has one input. If it is wired, the end of the LabVIEW

session occurs only if that input is True. If the input is not wired, the end of the session occurs

when the node executes.


Before you change VI properties, save a backup of the VI to a new location by selecting  



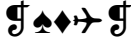
    to avoid situations like the previous examples.

Select the          option to save the VI to a new location along with its

entire

hierarchy. You also can include the  files in the save. After you save the backup VI, change the VI properties of the original VI. If you encounter a problem, you can return to the backup VI.

NOTE:




If you select the  option, you remove the source code of the VI. Select this option only if you never need to edit the VI again. Before you save a VI without the block diagrams, save a backup of the VI with the block diagrams.

If you already saved a development VI with properties that make the VI difficult to edit, refer to the Edit Me VI (Section 4.7) exercise for more information about editing the VI.

4.7 Edit Me VI

Exercise 4.7.1

4.7.1 Front Panel

1. Close any open VIs and open the  VI, located in the  {  directory. The following front panel is already built.

6This content is available online at <http://cnx.org/content/m12304/1.2/>.

7This content is available online at <http://cnx.org/content/m12305/1.2/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>



83

Figure 4.6

The VI is already running when it opens. While the VI runs, you cannot use the menu bar, toolbar, or keyboard shortcuts to edit or abort the VI.

2. Click the **Stop** button. After 10 seconds, the VI stops running and quits LabVIEW.
3. Relaunch LabVIEW and open a blank VI.
4. If the VI you want to edit either does not have subVIs or you do not know what it contains, complete list, item 5, p. 83 through list, item 13, p. 83. However, if the VI you want to edit has subVIs, open one of the subVIs and modify the block diagram to break the subVI. For example, place an **Open VI** function on the block diagram and do not wire the inputs. Open the VI you want to edit. Because its subVI is nonexecutable, the VI that calls it is also nonexecutable. It opens in edit mode and the **Run** button appears broken. Make sure to fix the subVI after you edit the calling VI.
5. Display the block diagram of the new VI.
6. Place the **Open VI** VI, which is already built, on the block diagram. The front panel for the **Open VI** VI displays. Although you can display the block diagram of the **Open VI** VI, you cannot edit it.
7. Select **Tools > Lock**. A dialog box informs you that the VI is locked.
8. Click the **Unlock** button. You now can edit the VI. You also can unlock a VI by selecting **Tools > Properties** and selecting **Run** from the **Run** pull-down menu.
9. Select and delete the **Open VI** function from the block diagram.
10. Save and close the **Open VI** VI. Close the new VI and do not save changes.
11. Open the **Open VI** VI again.
12. After the VI runs, try to edit it.
13. Close the **Open VI** VI.

4.8 Customizing the Controls and Functions Palettes

You can customize the **Controls** and **Functions** palettes to add VIs and controls to the palettes, hide VIs and functions, or rearrange the built-in palettes to make the VIs and functions you use frequently more accessible.

4.8.1 Adding VIs and Controls to the User Library and the Instrument Library

The simplest method for adding VIs and controls to the **User Library** and **Instrument Library** palettes is to save them in the `..\user\vi\controls` directory. When you restart LabVIEW, the **Instrument Library**

Library and **Control Library** palettes

This content is available online at <http://cnx.org/content/m12306/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>

84

CHAPTER 4. CUSTOMIZING VIS

and **User Library**

Library and **Control Library** palettes contain subpalettes for each directory, VI library (e.g., `..\user\vi\controls`),

or menu (e.g., `..\user\vi\controls\myvi`) file in the `..\user\vi\controls` directory, and icons for each file in the `..\user\vi\controls`

directory. After you add files to or remove files from specific directories, LabVIEW automatically updates the palettes when you restart LabVIEW.

The **Instrument Library**

Library palette corresponds to the `..\instrument\vi\controls` di-

rectory. Save instrument drivers in this directory to add them to the **Instrument Library** palette.

When you add VIs or controls to the **User Library** and **Instrument Library** palettes using this method, you cannot

set the name of each subpalette or the exact location of the VIs or controls on the palettes.

4.8.2 Creating and Editing Custom Palette Views

To control the name of each subpalette and the exact location of the VIs and controls you add to the

User Library and **Instrument Library** palettes, you must create a custom palette view. LabVIEW includes two built-

in palette views—**Control Library** and **VI Library**. Select **Tools > Custom Palette Views**

Custom Palette Views to create or edit

custom palette views.

NOTE: You cannot edit a built-in palette view.

4.9 Summary, Tips, and Tricks on Customizing VIs

• Select **Right-click VI Properties** to configure the appearance and behavior of a VI. You also can right-

click the VI icon on the front panel or block diagram and select **Right-click VI Properties** from the shortcut menu.

• If you want a single instance of the subVI to open its front panel when called, right-click the subVI and select **Open Front Panel When Called** from the shortcut menu. Place checkmarks in the **Open Front Panel When Called** checkbox.

• If you want every instance of the subVI to open its front panel when called, select **Right-click VI Properties** and select **Open Front Panel When Called** from the **Open Front Panel When Called** pull-down menu. Click the **Open Front Panel When Called** checkbox.

• If you want every instance of the subVI to open its front panel when called, select **Right-click VI Properties** and select **Open Front Panel When Called** from the **Open Front Panel When Called** pull-down menu. Click the **Open Front Panel When Called** checkbox.

• Assign keyboard shortcuts to controls by right-clicking the control and selecting **Assign Keyboard Shortcut** from the shortcut menu.

• Before you change VI properties, save a backup of the VI to a new location by selecting **Save As** from the **File** menu.













• To edit a VI with properties that make the VI difficult to edit:

• Break one of its subVIs. The VI opens in edit mode because it cannot run with a broken subVI.

• If the VI has no subVIs, place it on the block diagram of a new VI.

• The simplest method for adding VIs and controls to the **Front Panel** and **Block Diagram** palettes is to save them in the **My Documents** directory.

• To create or edit a custom palette view, select           .

• Change to an icon- or text-only palette view by selecting from the                pull-down menu.

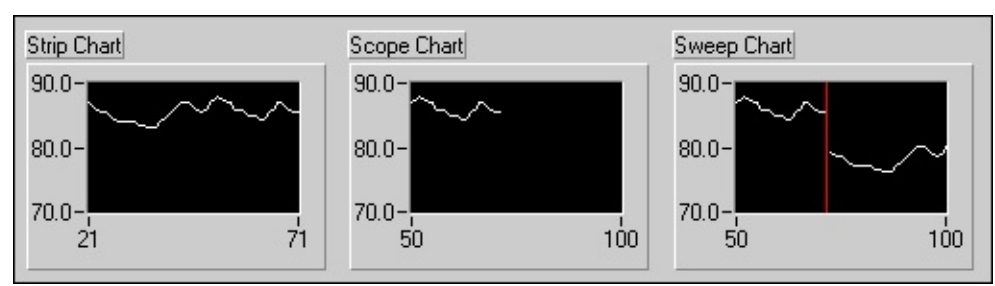
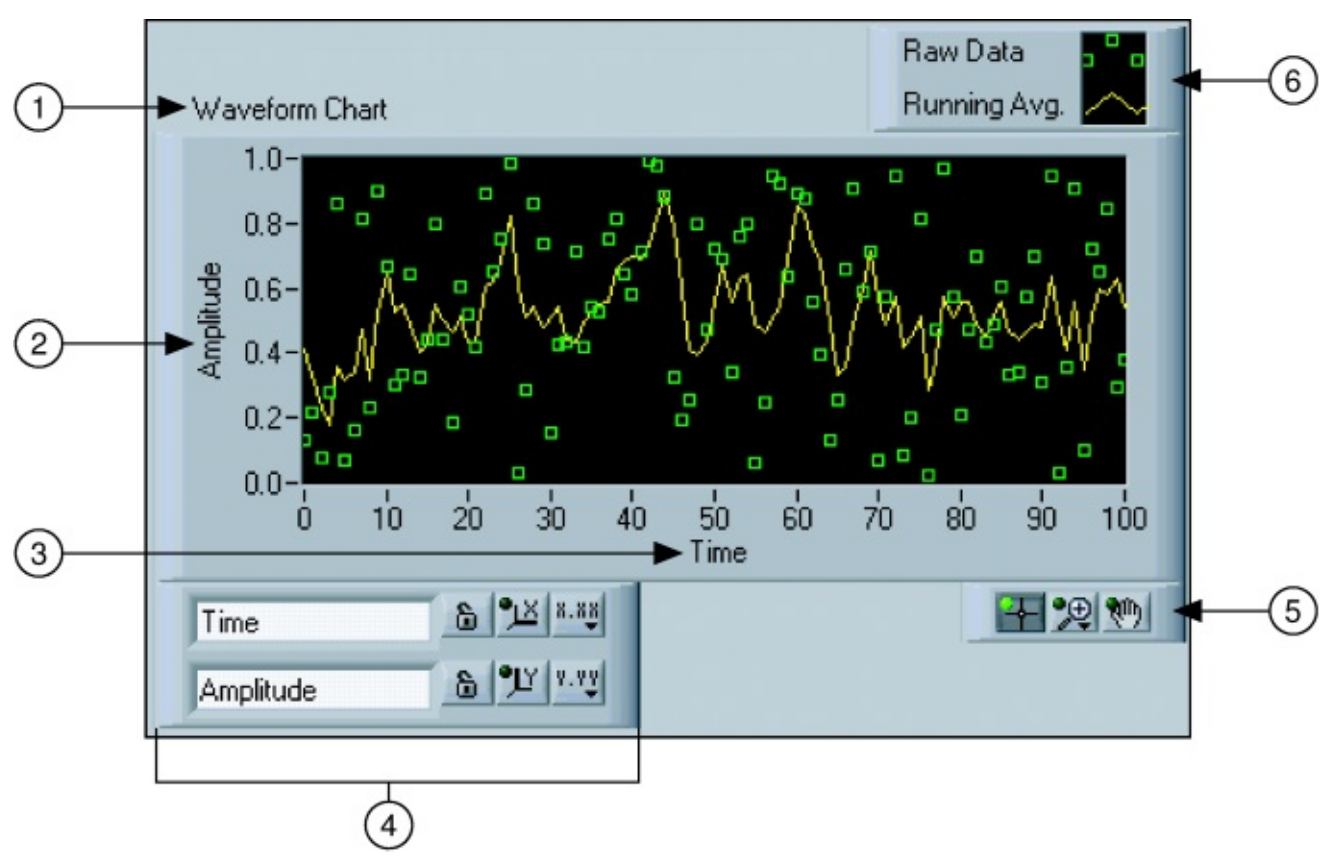
9This content is available online at <http://cnx.org/content/m12307/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1/>

86

CHAPTER 4. CUSTOMIZING VIS

Available for free at Connexions <http://cnx.org/content/col11408/1.1/>



Chapter 5

Plotting Data

5.1 Waveform Charts1

The is a numeric indicator that displays one or more plots. The is located on the s

palette. s can display single or multiple plots. Fig-

ure 5.1 shows the elements of a multiplot waveform chart. Two plots are displayed: and

.

Figure 5.1

Charts use three different modes to scroll data, as shown in the Figure 5.2. Right-click the chart and select

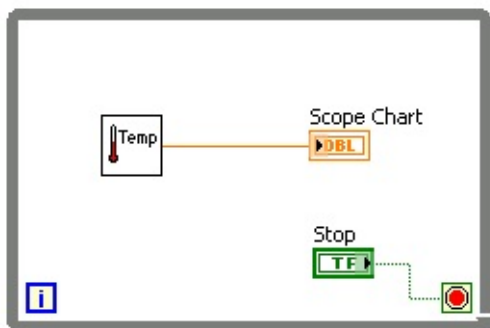
from the shortcut menu. Select , , or

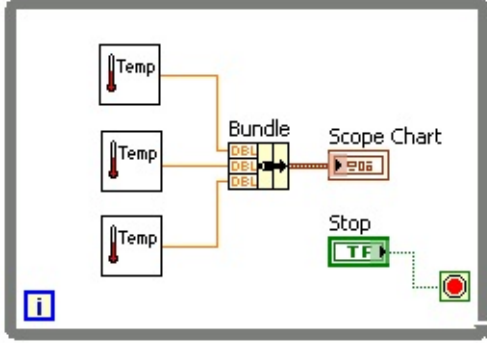
default mode is .

Figure 5.2

A shows running data continuously scrolling from left to right across the chart. A shows one item of data, such as a pulse or wave, scrolling partway across the chart from left to the right. This content is available online at <http://cnx.org/content/m12233/1.2/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>





88

CHAPTER 5. PLOTTING DATA

right. A **Scope Chart** is similar to an EKG display. A **Scope Chart** works similarly to a scope except it shows the older data on the right and the newer data on the left separated by a vertical line. The **Scope Chart**

Scope Chart and **Waveform Chart** have retracing displays similar to an oscilloscope. Because there is less overhead in retracing a plot, the **Scope Chart** and the **Waveform Chart** display plots significantly faster than the **Waveform Plot**

Scope Chart.

5.1.1 Wiring Charts

You can wire a **Scope Chart** directly to a **Waveform Chart**. The data type in the **Waveform Chart** in

Figure 5.3 terminal matches the input data type.

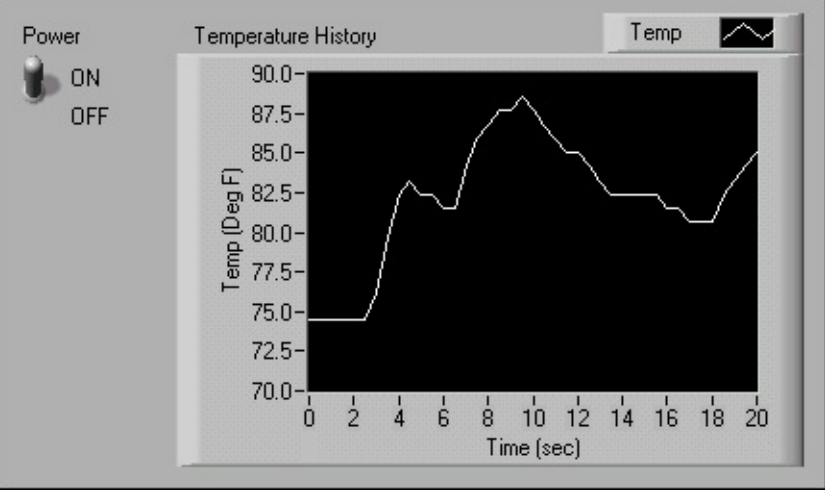
Figure 5.3

Waveform Charts can display multiple plots. Bundle multiple plots together using the **Bundle** function located on the **Bundle** palette. In Figure 5.4, the **Bundle** function bundles the outputs of the three VIs to plot on the waveform chart.

Figure 5.4

The **Waveform Chart** terminal changes to match the output of the **Bundle** function. To add more plots,

use the **Resize** tool to resize the **Bundle** function.



A

89

5.2 Temperature Monitor VI2

Exercise 5.2.1

Complete the following steps to build a VI that measures temperature and displays it on a waveform chart.

5.2.1 Front Panel

1. Open a blank VI and build the front panel shown in Figure 5.5.

Figure 5.5

a. Place the vertical toggle switch, located on the *♦♥tr♦s

*☒tt♦♥s ☆ IⓈⓈt“♥♣s

palette, on the front panel. Label this switch P♦♣♣r. You use the switch to stop the acquisition.

b. Place a ⓈⓈt“♥♣r♦, located on the *♦♥tr♦s

•r“♣♥ ♣♥” ⓈⓈt“♥♣rs palette, on the

front panel. Label the chart | ♣♣♣r“t☒r♣ ○ Ⓢt♦rⓈ. The ⓈⓈt“♥♣r♦ “♥♣r displays the temperature in real time.

c.

The ⓈⓈt“♥♣r♦ “♥♣r ⓈⓈt“♥♣r” labels the plot P♦♣♣t *. Use the ▲ “♣♣♣r♥ tool to

triple-click P t * in the chart legend, and change the label to .

d. The temperature sensor measures room temperature. Use the tool to double-click 10.0 in the y-axis and type 90 to rescale the chart. Leave the x-axis in its default state.

e. Change -10.0 in the y-axis to 70.

f. Label the y-axis and the x-axis .

5.2.2 Block Diagram

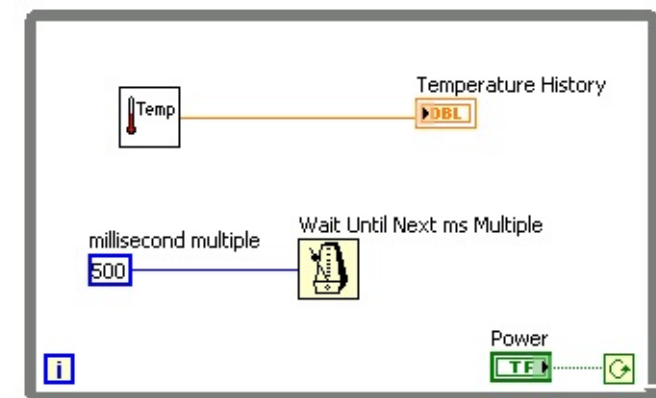
1. Select { }

r' to display the block diagram.

2. Enclose the two terminals in a While Loop, as shown in the block diagram (Figure 5.6).

2 This content is available online at <<http://cnx.org/content/m12234/1.2/>>.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



500

90


CHAPTER 5. PLOTTING DATA

Figure 5.6

3. Right-click the terminal and select .

4. Wire the objects as shown in Figure 5.6.

a.

Place the  on the block diagram.

Select   









    

and

navigate

to

        This subVI returns one temperature measurement from the temperature sensor.

NOTE: Use the         VI if you do not have a DAQ device available.

b.

Place

the

        function,

































located

on

the


        palette, on the block diagram.


c.



Right-click the         input of the         function, select         from the shortcut menu, type 500, and press the         key. The numeric constant specifies a wait of 500ms so the loop

executes once every half-second.

NOTE: To measure temperature in Celsius, wire a Boolean  constant located on the

 palette to the 

input of the  VI. Change the scales on charts and graphs in subsequent exercises to a range of 20 to 32 instead of 70 to 90.






5. Save the VI as  in the  directory.


5.2.3 Run the VI

1. Display the front panel by clicking it or by selecting 

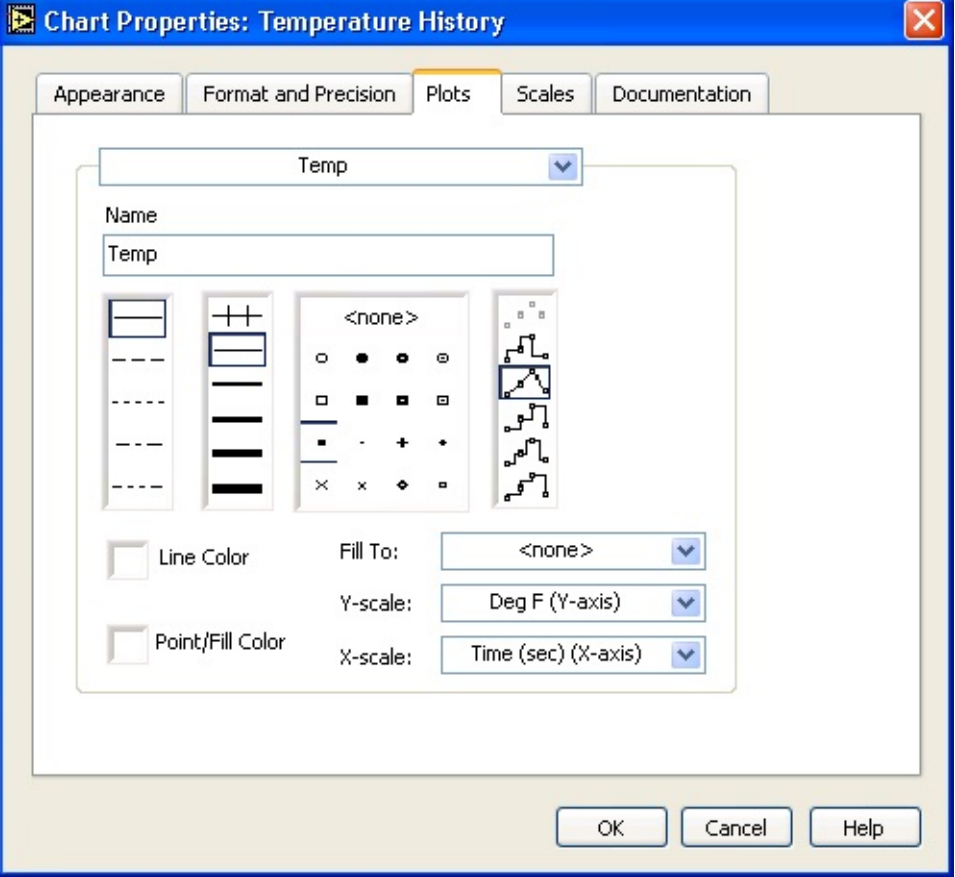
 P'v .

2. Use the  tool to click the vertical toggle switch and turn it to the  position.

3. Run the VI. The subdiagram within the  border executes until the specified condition is . For example, while the switch is on () the  VI takes and returns a new measurement and displays it on the  "rt.

4. Click the vertical toggle switch to stop the acquisition. The condition is , and the loop stops executing.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



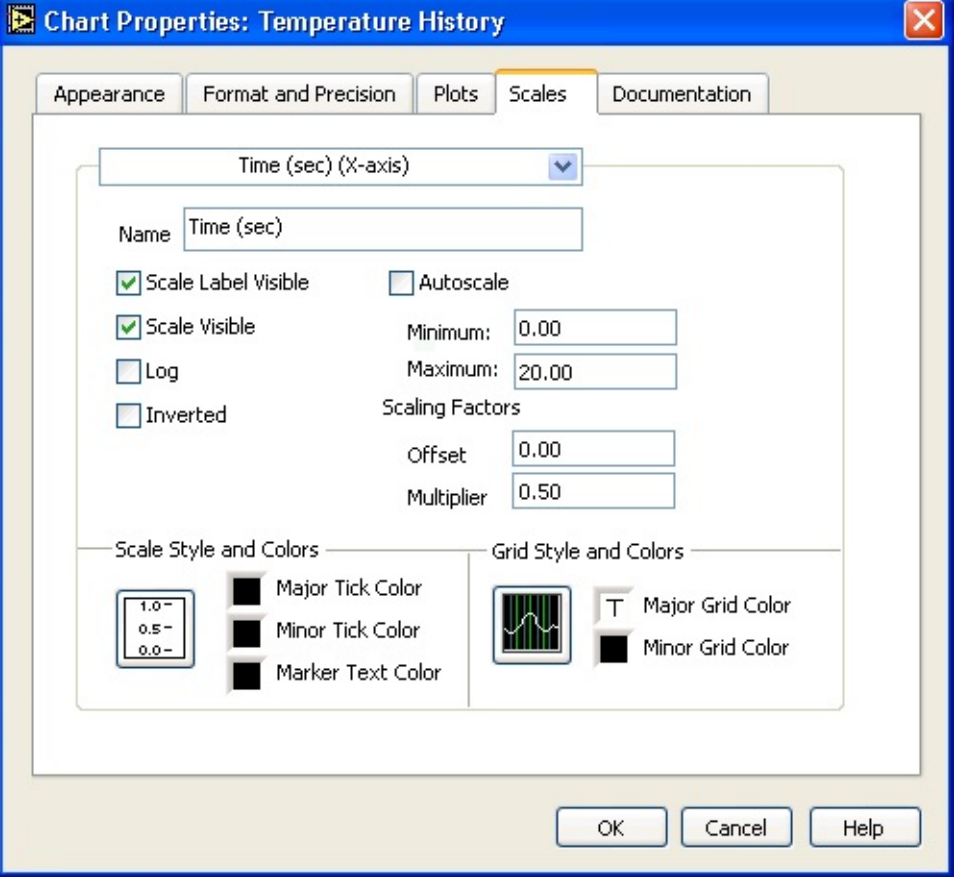
91

5.2.4 Front Panel

1. Format and customize the x- and y-scales of the waveform chart.
 - a. Right-click the chart and select **Properties** from the shortcut menu to display the **Properties** dialog box.
 - b. Click the **Plots** tab. Select **Temp** in the top pull-down menu. Set the **Y-axis** to 1.
 - c. Click the **Plots** tab and select different styles for the y-axis, as shown in Figure 5.7.

Figure 5.7

- d. Select the **Plots** tab and select the **Temp** in the top pull-down menu. Set the scale options as shown in Figure 5.8. Set the **Y-axis** to 0.50 to account for the **sqrt** function.



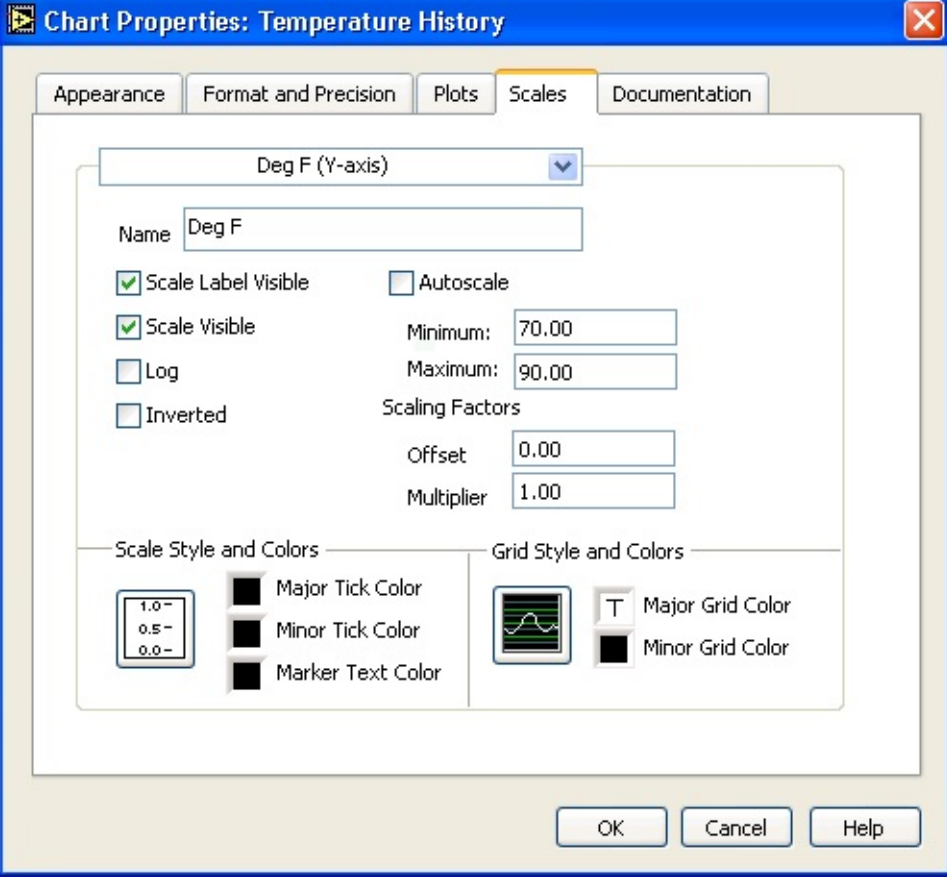
92

CHAPTER 5. PLOTTING DATA

Figure 5.8

e. In the **Format and Precision** tab, select the **Linear** scale in the top pull-down menu. Set the scale options as shown in Figure 5.9.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>




93

Figure 5.9

- f. Click the button to close the dialog box when finished.
- 2. Right-click the and select from the shortcut menu to clear the display buffer and reset the .
- TIP: When a VI is running, you can select from the shortcut menu.
- 3. Each time you run the VI, you first must turn on the vertical toggle switch and then click the button due to the current mechanical action of the switch. Modify the mechanical action of the vertical toggle switch so temperature is plotted on the graph each time you run the VI, without having to first set the toggle switch.
 - a. Stop the VI if it is running.
 - b. Use the tool to click the vertical toggle switch and turn it to the position.

c. Right-click the switch and select  't'  r't  s


 't'  r't  s

from the shortcut menu. This sets the  position as the default value.

d.

Right-click the switch and select  't'  s

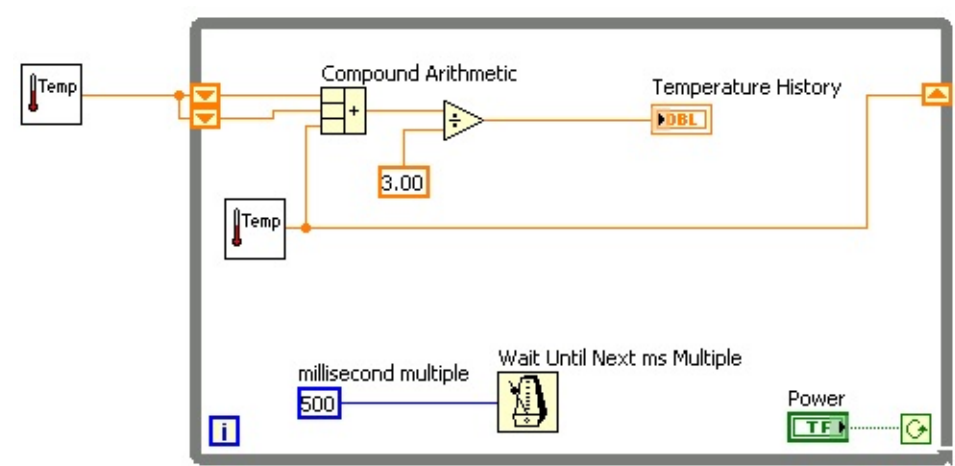
 't'  s

from the shortcut menu. This setting changes the control value when you click it and retains the new value until the VI reads it once. At this point the control reverts to its default value, even if you keep pressing the mouse button. This action is similar to a circuit breaker and is useful for stopping  or for getting the VI to perform an action only once each time you set the control.






5.2.5 Run the VI

1. Run the VI.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



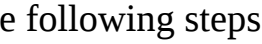

CHAPTER 5. PLOTTING DATA

2. Use the  r't  s tool to click the vertical switch to stop the acquisition. The switch changes to the  position and changes back to  after the  terminal reads the value.

3. Save the VI. You will use this VI in the Temperature Running Average (Section 5.3) VI.

5.3 Temperature Running Average VI3








Exercise 5.3.1

Complete the following steps to modify the  VI to average the last three temperature measurements and display the average on a  "°C".

5.3.1 Front Panel

1. Open the Temperature Monitor (Section 5.2) VI.

2. Select  

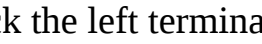


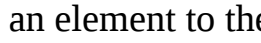
 and rename the VI  |   in the    directory.

5.3.2 Block Diagram

1. Display the block diagram.

2. Right-click the right or left border of the  and select  |  from



the shortcut menu to create a  .

3. Right-click the left terminal of the  and select   from the shortcut menu to add an element to the .

4. Modify the block diagram as in Figure 5.10.

Figure 5.10

a.

Press the   key while you click the  VI and drag it outside

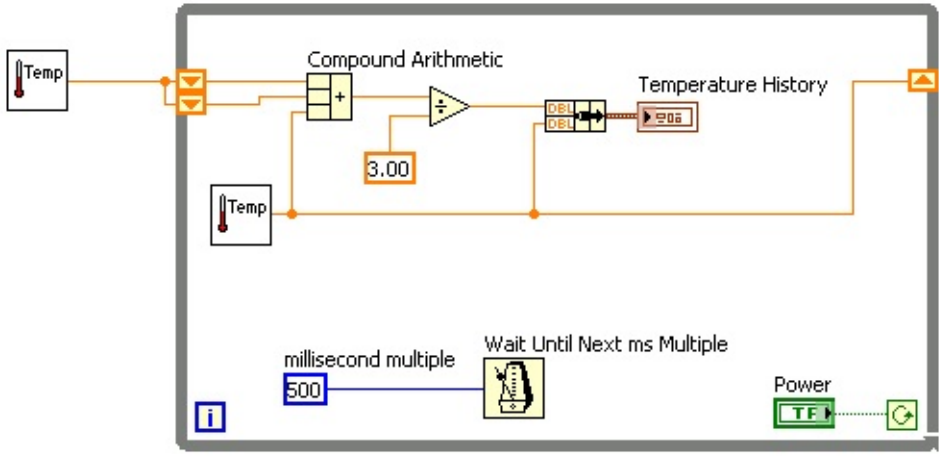
the  to create a copy of the subVI. The  VI returns one tempera-

3This content is available online at <http://cnx.org/content/m12235/1.2/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>



3.00



95

ture measurement from the temperature sensor and initializes the left side of the array before the loop starts.

b.

Place

the

function

function,

located

on

the

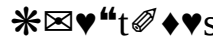
palette, on the block diagram.

This function returns the sum of the current temperature and the two

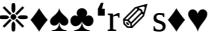
previous temperature readings. Use the 'Resize' tool to resize the function to have three left terminals.

c.

Place the  function,

located on the s


 ☆

 palette, on the block diagram. This function returns the average of the last three temperature readings.

d.

Right-click the  terminal of the  function, select  




t, type

3, and press the  key.

5.3.3 Run the VI

1. Run the VI. During each iteration of the     VI takes one temper-

ature measurement. The VI adds this value to the last two measurements stored in the left

terminals of the   r. The VI divides the result by three to find the average of

the three measurements, the current measurement plus the previous two. The VI displays

the average on the   r. Notice that the VI initializes the   r with



a temperature measurement.

5.3.4 Block Diagram

1. Modify the block diagram as shown in Figure 5.11.




Figure 5.11

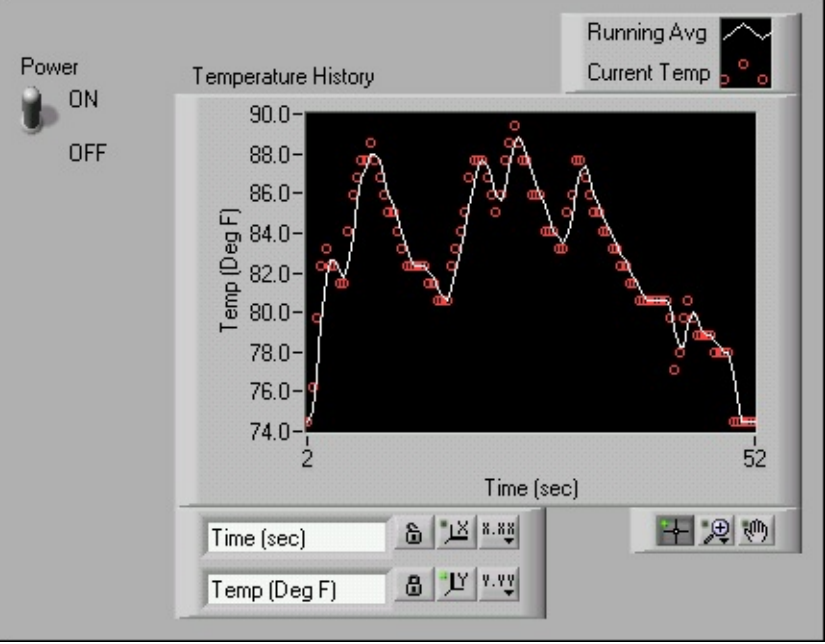
a.

Place the  function, located on the s

      r

palette, on the block diagram. This function bundles the average and current tempera-

ture for plotting on the   r.



96

CHAPTER 5. PLOTTING DATA

2. Save the VI. You will use this VI later in the course.

5.3.5 Run the VI

1. Run the VI. The VI displays two plots on the waveform chart. The plots are overlaid. That is, they share the same vertical scale.
2. If time permits, complete the optional steps. Otherwise, close the VI.

5.3.6 Optional



Customize the waveform chart as shown in Figure 5.12. You can display a plot legend, a scale legend, a graph palette, a digital display, and a scrollbar. By default, a waveform chart displays the plot legend.



Figure 5.12

1. Customize the y-axis.

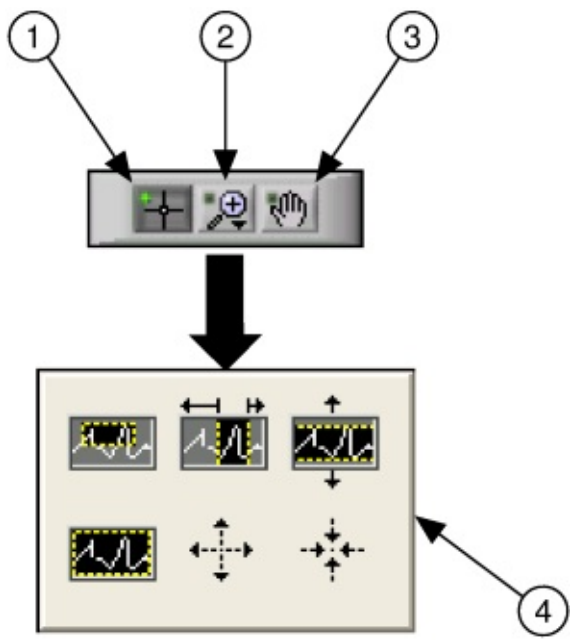
a.

Use the **Format** tool to double-click 70.0 in the y-axis, type 75.0, and press the **Enter** key.

b. **b** - Use the  tool to double-click the second number from the bottom on the y-axis, type 80.0, and press the  key. This number determines the numerical spacing of the y-axis divisions. For example, if the number above 75.0 is 77.5, it indicates a y-axis division of 2.5, changing the 77.5 to 80.0 reformats the y-axis to multiples of 5.0 (75.0, 80.0, 85.0, and so on).





NOTE: The  size has a direct effect on the display of axis scales. Increase the  size if you encounter problems while customizing the axis.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



97

2. Right-click the waveform chart and select        



     from the shortcut


menu to display the scale legend, as shown in Figure 5.13. You can place the scale legend

anywhere on the front panel.

Figure 5.13: 1. X-axis, 2. Y-axis, 3. Scale Labels, 4. Scale Lock Button, 5. Autoscale Button, 6. Scale Format Button






3. Use the scale legend to customize each axis.

a. Make sure the  button appears locked and the  LED is green so the y-axis adjusts the minimum and maximum values to fit the data in the chart.

b. Click the  button to change the format, precision, mapping mode, scale visibility, and grid options for each axis.



4. Use the plot legend to customize the plots.

a. Use the  tool to resize the plot legend to include two plots.

b. Use the  tool to change  to  and to change  to 


. If the text does not fit, use the Positioning tool to resize the plot legend.


c. Right-click the plot in the plot legend to set the line and point styles and the color of the plot background or traces.


5. Right-click the  and select 

 from the short-

cut menu to display the graph palette, as shown in Figure 5.14. You can place the graph palette anywhere on the front panel.

Figure 5.14: 1. Cursor Movement Tool, 2. Zoom Button, 3. Panning Tool, 4. Zoom Pull-down Menu
Use the  button on the graph palette to zoom in or out of sections of the chart or the

whole chart. Use the  tool to pick up the plot and move it around on the display.



Use the  tool to move the cursor on the graph.

6. Run the VI. While the VI runs, use the buttons in the scale legend and graph palette to modify the .

NOTE:

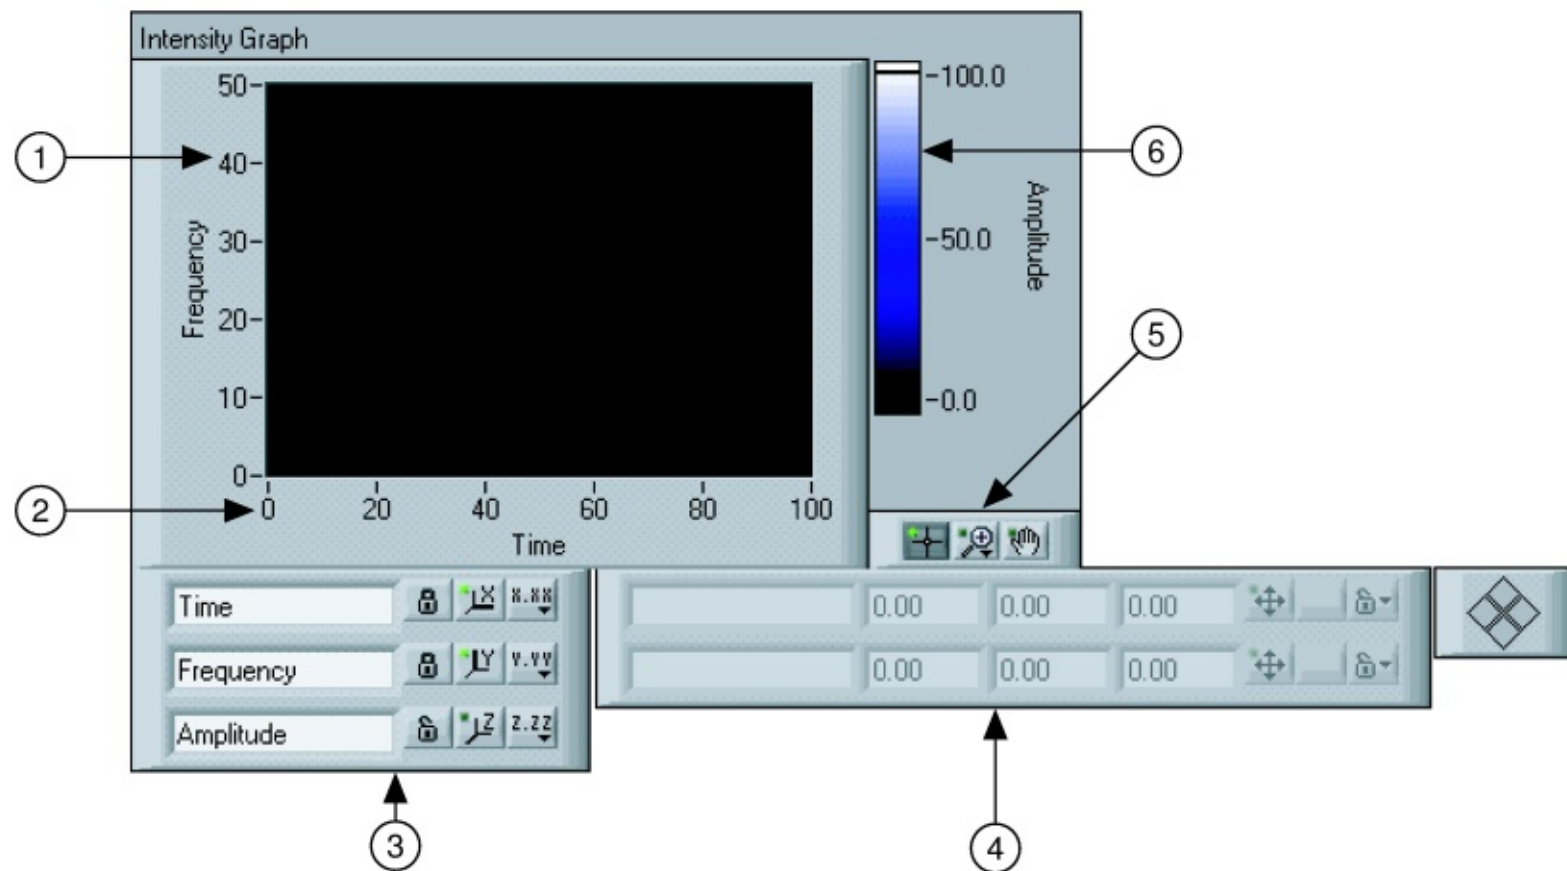
If you modify the axis labels, the display might become larger than the maximum

size that the VI can correctly present.

7. Use the  tool to click the  switch and stop the VI.

8. Save and close the VI.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



98

CHAPTER 5. PLOTTING DATA



5.4 Waveform and XY Graphs

VIs with graphs usually collect the data in an array and then plot the data to the graph. Figure 5.15 shows the elements of a graph.

Figure 5.15

The graphs located on the  palette include the  and .

The  palette include the , , and .

The  plots only single-valued functions, as in $y = f(x)$, with points evenly distributed along the x-axis, such as acquired time-varying waveforms. The  displays any set of points, evenly sampled or not.

Resize the plot legend to display multiple plots. Use multiple plots to save space on the front panel and to make comparisons between plots. $\Delta(x)$ and a automatically adapt to multiple plots.

5.4.1 Single Plot Waveform Graphs

The $\Delta(x)$ accepts a single array of values and interprets the data as points on the graph and increments the x index by one starting at $x = 0$. The graph also accepts a cluster of an initial x value, a

$\Delta(x)$, and an array of y data. Refer to the $\Delta(x)$ VI in the $\Delta(x)$ for examples of the data types that single-plot $\Delta(x)$ s accept.

5.4.2 Multiplot Waveform Graphs

A multiplot $\Delta(x)$ accepts a 2D array of values, where each row of the array is a single plot. The graph interprets the data as points on the graph and increments the x index by one, starting at $x = 0$. Wire a 2D array data type to the graph, right-click the graph, and select $\Delta(x)$ from the shortcut menu to handle each column of the array as a plot. Refer to the $\Delta(x)$ in the $\Delta(x)$

VI in the $\Delta(x)$ for an example of a graph that accepts this data type.

A multiplot $\Delta(x)$ also accepts a cluster of an x value, a $\Delta(x)$ value, and a 2D array of y data.

The graph interprets the y data as points on the graph and increments the x index by $\Delta(x)$, starting at $x = 0$.

Refer to the $\Delta(x)$ in the $\Delta(x)$ VI in the $\Delta(x)$ for

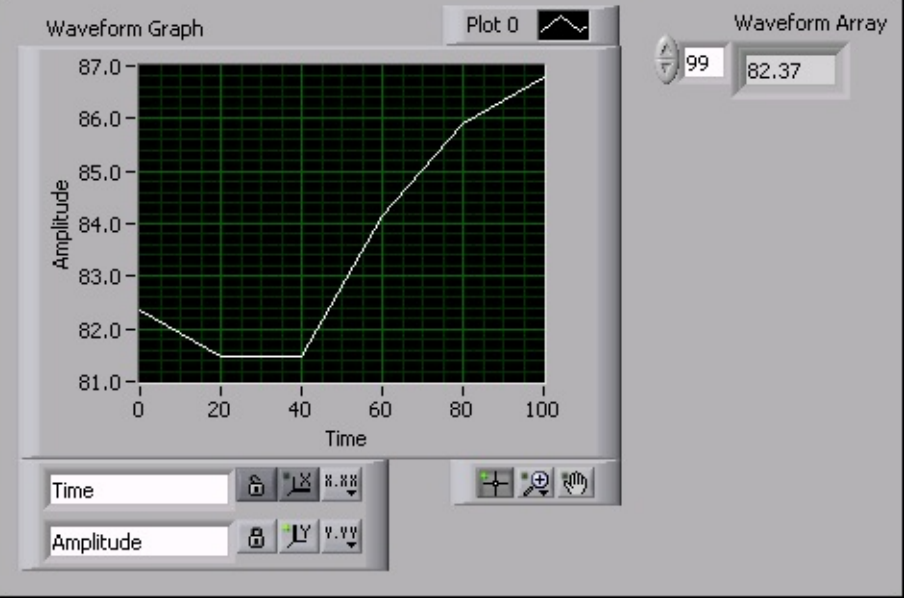
an example of a graph that accepts this data type.

A multiplot $\Delta(x)$ accepts a cluster of an initial x value, a $\Delta(x)$ value, and an array that contains clusters. Each cluster contains a point array that contains the y data. You use the $\Delta(x)$ function to bundle the arrays into clusters, and you use the $\Delta(x)$ function to build the resulting clusters into an array. You also can use the $\Delta(x)$ Array, which creates arrays of clusters that contain inputs you specify. Refer to the $\Delta(x)$ graph in the $\Delta(x)$ VI in the $\Delta(x)$

$\Delta(x)$ for an example of a graph that accepts this data type.

This content is available online at <http://cnx.org/content/m12236/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>



99

5.4.3 Single Plot XY Graphs

The `gGraphXY` VI accepts a cluster that contains an x array and a y array. The `gGraphXY` also accepts an array of points, where a point is a cluster that contains an x value and a y value. Refer to the `gGraphXY`

`gGraphXY` VI in the `Graphing > Waveforms > XY Graphs` palette for an example of single-plot `gGraphXY` data types.

5.4.4 Multiplot XY Graphs

The multiplot `gGraphXY` accepts an array of plots, where a plot is a cluster that contains an x array and a y array. The multiplot `gGraphXY` also accepts an array of clusters of plots, where a plot is an array of points.

A point is a cluster that contains an x value and a y value. Refer to the `gGraphXY` VI in the `Graphing > Waveforms > XY Graphs`

`gGraphXY` for an example of multiplot `gGraphXY` data types.

5.5 Graph Waveform Array VI5

Exercise 5.5.1

Complete the following steps to build a VI that generates and plots an array on a `gGraphXY` and modify the VI to graph multiple plots.

5.5.1 Front Panel

1. Open a blank VI and build the front panel shown in Figure 5.16.

Figure 5.16

a. Place an 'rr'Ⓜ, located on the *♦♥tr♦Ⓜs

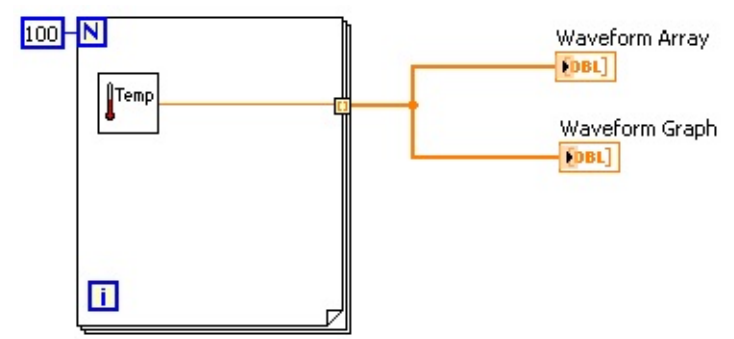
ⓂⓂⓂ *♦♥tr♦Ⓜs Ⓜrr'Ⓜ ☆*ⓂⓂst Ⓜr palette, on the front panel.

b. Label the array { '→ Ⓜ!♦r♠ Ⓜrr'Ⓜ.

c. Place a ♥Ⓜ♠ ⓂrⓂ " Ⓜ♥" Ⓜ"Ⓜt♠, located on the *♦♥tr♦Ⓜs ♦Ⓜ♠ ⓂrⓂ " Ⓜ♥" Ⓜ"Ⓜt♠rs palette, in the 'rr'Ⓜ shell.

5This content is available online at <http://cnx.org/content/m12237/1.2/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>



100

CHAPTER 5. PLOTTING DATA

d. Place a Ⓜ!♦r♠ ♥r'♠♥, located on the *♦♥tr♦Ⓜs


♥r'♠♥ Ⓜ♥" Ⓜ"Ⓜt♠rs palette, on the front panel.

5.5.2 Block Diagram

1. Build the block diagram shown in Figure 5.17.

Figure 5.17

a.

Place the  on the block diagram.

Select  








     

and

navigate





to




     . This subVI returns one temperature reading during each  iteration.

NOTE: Use the    VI if you do not have a DAQ device available.


















b.

Place a  , located on the  

palette, on the block diagram. In this exercise, each   iteration generates a temperature value and stores it in the indexed tunnel. Create a constant of  for the count terminal.

c. Wire the block diagram as shown in Figure 5.17.

NOTE: When you wire data to charts and graphs, refer to the   window for more information about wiring the objects, including whether to use a   or  function, the order of the input terminals, and so on. In general, use a   for single scalar points, a   for an array of y values, and an  ( for an  of x values and an array of y values. For example, if you move the cursor over a   terminal on the block diagram, the information shown in Figure 5.18 appears in the   window. Select 

2. Enter the index of any element in the $\{ \rightarrow \text{array} \}$ index display to view the value of that element. If you enter a number greater than the array size of 100, the display dims.
3. Use the Plot tool to resize $\{ \rightarrow \text{array} \}$ to view more than one element. The indicator displays elements in ascending index order, beginning with the index you entered.

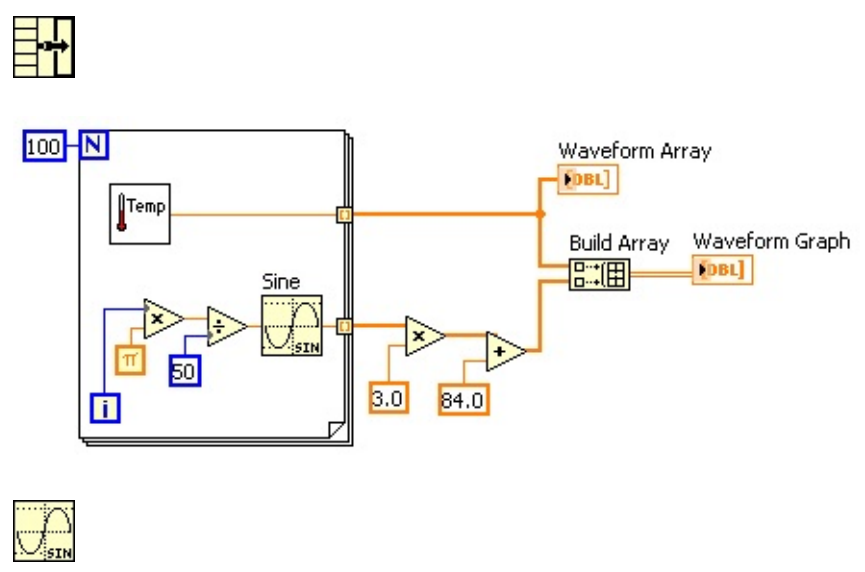
5.5.4 Block Diagram

In this block diagram, you use the default value of the initial x and $\Delta(x)$ value for the waveform. In cases where the initial x and $\Delta(x)$ value are a specific value, use the Sine function to specify an initial x and $\Delta(x)$ value for a $\{ \rightarrow \text{array} \}$.

1. Modify the block diagram as shown in Figure 5.19.

Figure 5.19

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



CHAPTER 5. PLOTTING DATA

a. Place the Sine function, located on the Sine palette, on the block diagram. This function assembles the plot elements into a single cluster. The elements include the initial x value (20), the $\Delta(x)$ value (0.5), and the y array of waveform data.

- b. Create two numeric constants for the initial x value and $\Delta(x)$ value.
- c. Label the $\Delta(x)$ constant by typing Δ . Use the **Text** tool to select the Δ and select the **Font** font from the **Font** pull-down menu on the toolbar. Δ converts to the delta symbol (Δ).
- d. Wire the block diagram as shown in Figure 5.19.

2. Save the VI.

5.5.5 Run the VI

1. Display the front panel and run the VI. The graph displays the same 100 points of data with a starting value of 20 and a $\Delta(x)$ of 0.5 for each point on the x-axis. In a timed test, this graph would correspond to 50 seconds worth of data starting at 20 seconds.

NOTE: Change the initial x and $\Delta(x)$ values in only one location, either the **Initial Value** function or in the **Graph Properties** dialog box.

2. If time permits, complete the optional steps. Otherwise, close the VI.

5.5.6 Optional

1. Right-click the **Graph** and select **Graph Properties** from the shortcut menu to display the graph palette. Click the **Legend** button to see the data on the graph in more detail.
2. Right-click the graph and select **Graph Properties** from the shortcut menu to display the scale legend.
3. Return to the block diagram. Create a multiple-plot waveform graph by building a 2D array of the data type normally passed to a single-plot graph. Modify the block diagram as shown in Figure 5.20.

Figure 5.20

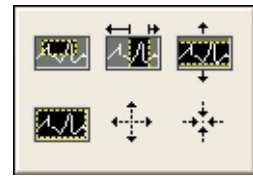
a.

Place

the

graphing function, located on the graphing palette, on the block

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



103

diagram. Use this function to build an array of points that represents one cycle of a sine wave.

b.

Place

the

graphing function,

located

on

the

*⊠♥“t⊠♦♥s ⊠rr'⊠

*⊠♥“t⊠♦♥s ⊠rr'⊠ palette, on the block diagram. This function creates the data structure to plot two arrays on a ⊠'→⊠!♦r♠ ♡r'♣♥.

c.

Place

the

♣⊠ constant,

located

on

the

*⊠♥“t⊠♦♥s ⊠r⊠t♥♠⊠t⊠ “ ☆

*♠♣♣'r⊠s♦♥ *⊠♣r⊠ss ⊠⊠♠⊠r⊠ “ *⊠♣r⊠ss ⊠⊠♠⊠r⊠ “ *♠♥st'♥ts palette,

on

the

block diagram.

d. Wire the block diagram as shown Figure 5.20.

4. Save the VI.

5. Display the front panel and run the VI. The two waveforms plot on the same ⊠'→⊠!♦r♠ ♡r'♣♥.

6. Display the block diagram.

7. Right-click the wire to

{ '→⊠!♦r♠ ⊠rr'⊠ , select *⊠st♠ Pr♦'⊠s *♠♥tr⊠s ♡r'♣♥

■♥”⊠“t♠rs from the shortcut menu, and select a waveform graph to place a graph probe on the wire.



8. Display the front panel and run the VI. The probe shows only the data array. The sine wave

is not present because you did not place the probe on the wire to which the sine wave is bundled.

9. Close the Pr♦'⌘ window.

10. Zoom in on a portion of the graph.









a.

Click the  button on the graph palette, shown in this media, to display the  pull-down menu.



b. Select  '⌘  |  "t'♥:⌘ , as shown in Figure 5.21.

Figure 5.21

c. Click and drag a selection rectangle on the graph. When you release the mouse button, the graph display zooms in on the selected area.

d. You also can select  '⌘  (|  "t'♥:⌘  or  '⌘   "t⌘" ⌘ . Experiment with these options.

e.







Select  ♥♦  from the lower left corner of the pull-down menu to undo

a zoom or click the x-axis single fit button and the y-axis single fit button on the scale legend, shown in this media and this media.

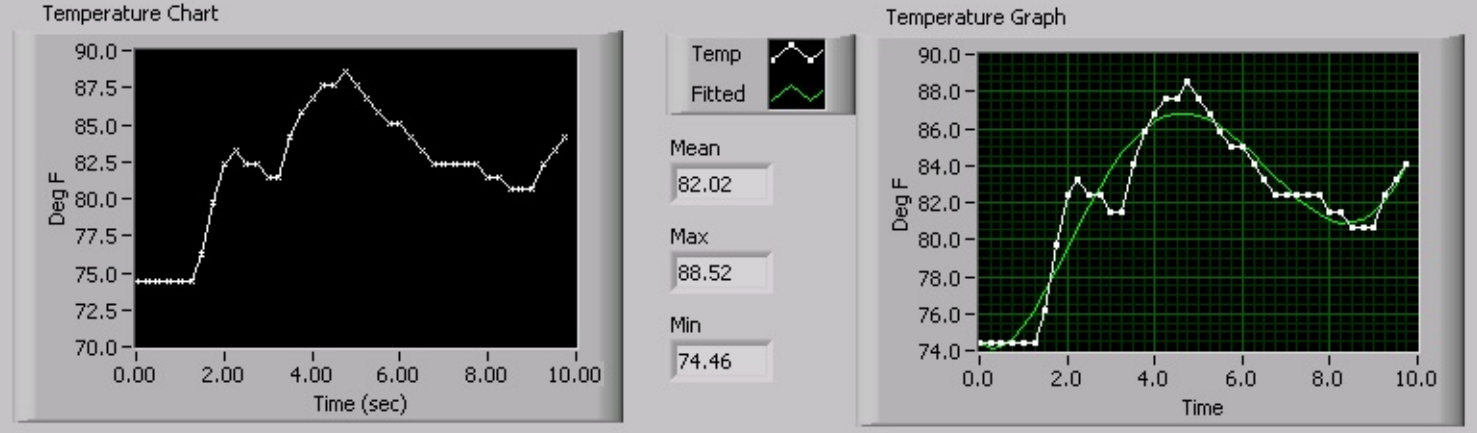
11.

Use the P♥♥⌘ ♥♥ tool, shown in this media, to click and drag the graph display. Click the x-axis and y-axis single fit buttons again to restore the display to its original position.

12.

Use the       tool, shown in this media, to return the cursor to standard mode.

13. Save and close the VI.



104

CHAPTER 5. PLOTTING DATA

5.6 Temperature Analysis VI6

Exercise 5.6.1

Complete the following steps to build a VI that measures temperature every 0.25 seconds for 10 seconds. During the acquisition, the VI displays the measurements in real time on a “rt. After the acquisition is complete, the VI plots the data on a graph and calculates the minimum, maximum, and average temperatures. The VI displays the best fit of the temperature graph.

5.6.1 Front Panel

1. Open a blank VI and build the front panel shown in Figure 5.22.

Figure 5.22

- a. Set the point style of the “rt plot to a small x.
- b. Hide the plot legend of the “rt.
- c. Change the label of the “rt to | | *rt.
- d. Change the label of the “rt to | | or.
- e. Right-click | | and select Properties from the shortcut menu. On the “Format” tab, change the x-axis multiplier to 1000. On the “rt” Properties tab, change the “Format” to *. The data for | | or will be formatted on the block diagram.

- f. Resize the plot legend of the to show two plots.
- g. Change the name of to and to .
- h. Set the point style of the plot to a small square.
- i. Do not create the , , and indicators yet. They will be created from the block diagram.

5.6.2 Block Diagram

1. Build the block diagram Figure 5.23.

This content is available online at <http://cnx.org/content/m12238/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>

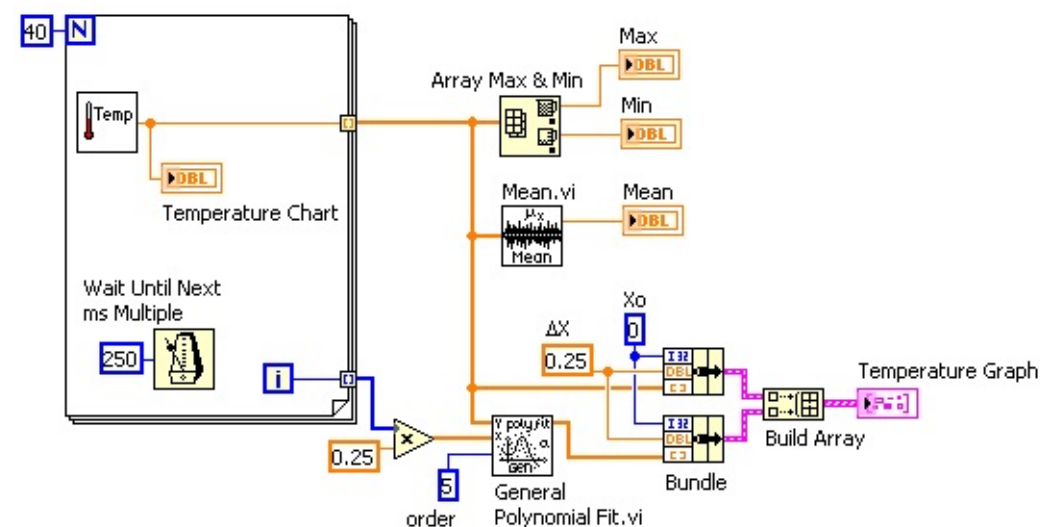



Figure 5.23

a.

Place the  VI on the block diagram.

Select  s



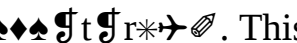
 s |   ' > ■

and

navigate

to

 s \ ^ " ' > ■ * { * ' s ' s

■ \  r * → . This subVI returns one point of temperature data.

b.

Place

the


{ ' t > ♥ t  ♦  t as ▼  t   function,

located

on

the

 s   s |   ☆  ♦ ♥ palette, on the block diagram. This

function causes the  r ▲ ♦ ♦ to execute every 0.25seconds (250ms).

c.

Place the  r ' ② ▼ ' ① ☆ ▼ ♥ function, located on the  s



 s  r ' ② palette, on the block diagram. This function returns the maximum

and minimum temperature.

d.

Place

the

▼ 


VI,

located

on

the









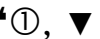




palette,

on

the block diagram. This subVI returns the average of the temperature measurements.


e. Right-click the output terminals of the  ▼  ▼  function and ▼  VI and select 

 from the shortcut menu to create the ▼ , ▼ , and ▼ 

indicators.

f.


Place the  VI, located on the 



 palette, on the block diagram.

This subVI returns an array that is a polynomial fit to the temperature array.

g.

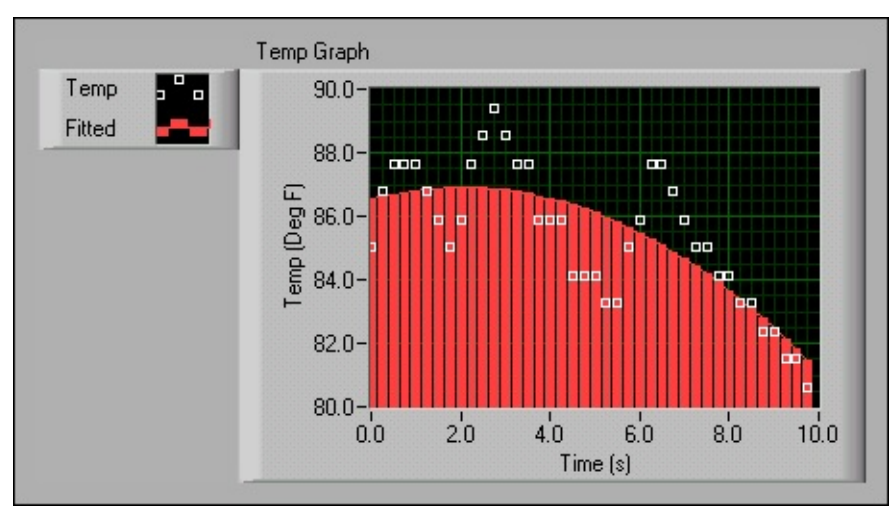
Place the  function, located on the 



palette, on the block diagram. This function assembles the plot elements into a single

cluster. Press the $\langle \text{*tr} \rangle$ key while you drag the function to copy it. The elements include the initial x value (*), the $\Delta(x)$ value (***), and the y array of temperature

Available for free at Connexions <http://cnx.org/content/col11408/1.1>



106

CHAPTER 5. PLOTTING DATA

data. The $\Delta(x)$ value of *** is required so that the VI plots the temperature array points every 0.25 seconds on the $\langle \text{*tr} \rangle$ key.

h.

Place

the

$\langle \text{*tr} \rangle$ function, located on the

$\langle \text{*tr} \rangle$ palette, on the block diagram.

This function creates an array of clusters from the temperature cluster and the best fit cluster.

i. Complete the block diagram as shown.

2. Save the VI as $\langle \text{*tr} \rangle$ in the $\langle \text{*tr} \rangle$ directory.

5.6.3 Run the VI













1. Display the front panel and run the VI. The graph displays both the temperature data and best fit curve of the temperature waveform.
2. Try different values for the polynomial order constant on the block diagram and run the VI again.
3. Change the appearance of the plots by modifying the plot styles and fill styles.
 - a. Right-click the  plot display in the plot legend and select  P  ts
 "tt  r
P  t from the shortcut menu, the top middle option.
 - b. Right-click the  "tt  " plot display in the plot legend, select  'r P  ts from the shortcut menu, and select the second option in the middle row. The  '→  !♦r♠ ♣r'♣♥ should appear similar to the front panel in Figure 5.24.

Figure 5.24

4. Save and close the VI.

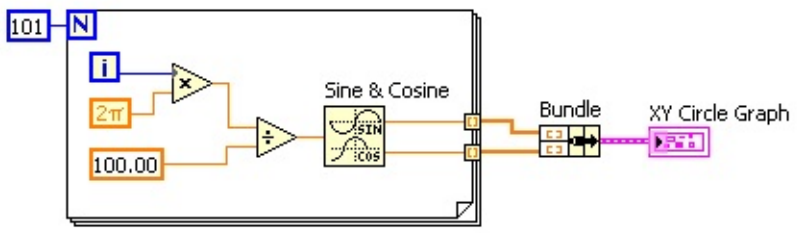
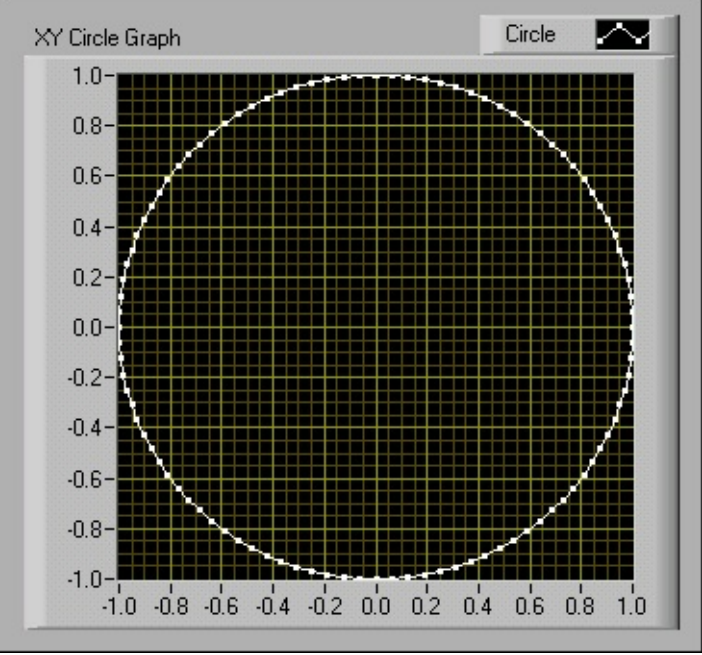
5.7 Graph Circle VI7

Exercise 5.7.1

Complete the following steps to build a VI that plots a circle using independent x and y arrays.

7This content is available online at [<http://cnx.org/content/m12239/1.1/>](http://cnx.org/content/m12239/1.1/).

Available for free at Connexions [<http://cnx.org/content/col11408/1.1>](http://cnx.org/content/col11408/1.1)



107

5.7.1 Front Panel

1. Open a blank VI and build the front panel shown in Figure 5.25.

Figure 5.25

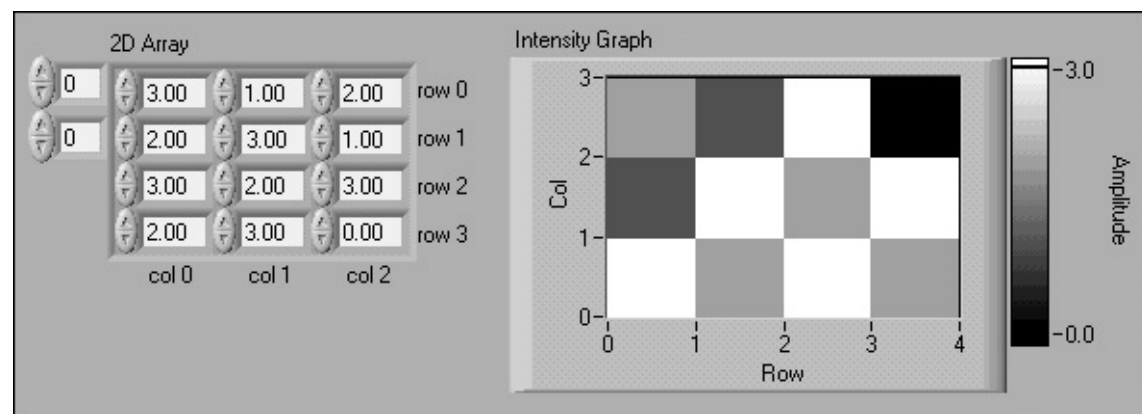
- Place an XY Circle Graph indicator, located on the XY Graph palette, on the front panel.
- Label the graph 'Circle'.
- Change Plot Style to Line in the plot legend.
- Right-click the plot in the plot legend, select Plot Style from the shortcut menu, and select the small square.
- Change the scale labels and ranges, as shown in Figure 5.25.

5.7.2 Block Diagram

1. Build the block diagram shown in Figure 5.26.

Figure 5.26

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>



108

CHAPTER 5. PLOTTING DATA

a.

Place the \cos function, located on the \cos palette, on the block diagram.

\cos

Place the \sin function, located on the \sin palette, on the block diagram. This function builds an array of points that represents one cycle of a sine wave and a cosine wave.

b.

Place the plot function, located on the plot palette, on the block diagram.

plot

palette, on the block diagram. This function assembles the sine array and the cosine array to plot the sine array against the cosine array to produce a circle.

c.

Place the Plot palette, on the front panel, on the palette, on the

front panel.

2. Save the VI as `Plot.vi` in the `LabVIEW\Examples\Getting Started` directory.

3. Display the front panel and run the VI.

4. Close the VI.

5.8 Intensity Plots⁸

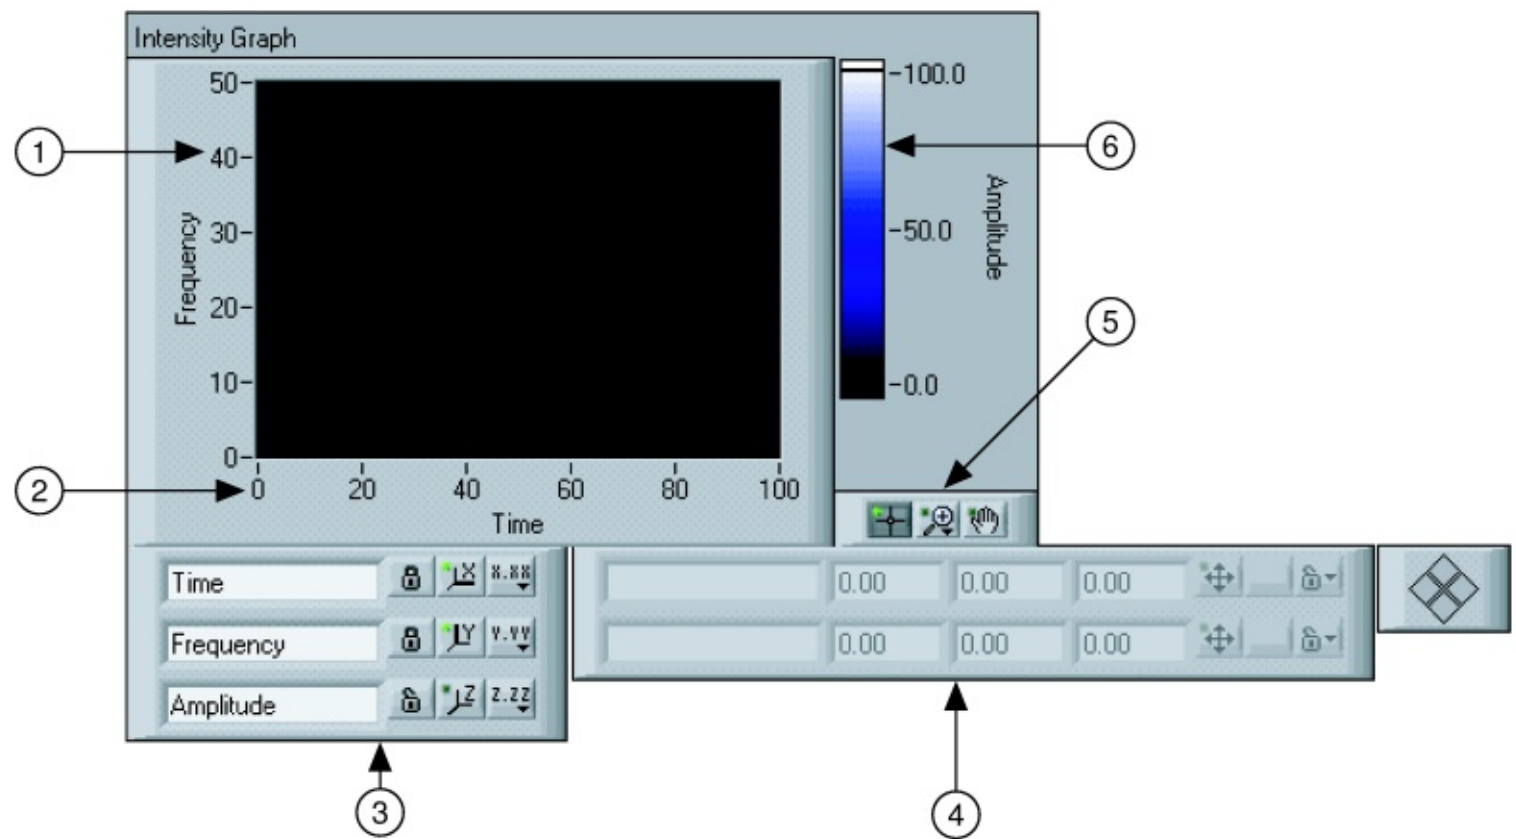
You can use intensity graphs and charts to display patterned data, such as temperature patterns and topographical terrain, where the magnitude represents altitude. Like the waveform graph and chart, the intensity graph features a fixed display while the intensity chart features a scrolling display. The intensity graph and chart accept a 2D array of numbers. Each number in the array represents a specific color. The indexes of the elements in the 2D array set the plot locations for the colors. The intensity graph or chart can display up to 256 discrete colors.

Figure 5.27 shows a 4×3 array plotted on an intensity graph. The graph transposes the array elements.

Figure 5.27

⁸This content is available online at <http://cnx.org/content/m12240/1.2/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>



109

5.8.1 Intensity Graph and Chart Options

The intensity graphs and charts share many of the optional parts of the waveform graphs and charts, which you can show or hide by right-clicking the graph or chart and selecting **View Options** from the shortcut menu. In addition, because the intensity graphs and charts include color as a third dimension, a scale similar to a color ramp control defines the range and mappings of values to colors. Figure 5.28 shows the elements of an intensity graph.

Figure 5.28

Use the **Color Ramp** or **Position** tools to right-click the marker next to the color ramp, select **Color Ramp** from the shortcut menu to change the color associated with a marker, and select the color you want from the color picker that appears. To add markers to a color ramp, right-click the color ramp and select **Color Ramp** from the shortcut menu. To change the value of an arbitrary marker on a color ramp, use the **Color Ramp** tool to drag the marker to the value you want or use the **Color Ramp** tool to highlight the text of the marker and enter a new value.

5.9 Intensity Graph Example VI9

Exercise 5.9.1

In this exercise, you use a VI that displays a wave interference pattern on an intensity graph. You also use the VI to plot a 2D array of data on the graph.

5.9.1 Front Panel

1. Open and run the Intensity Graph Example (Figure 5.29) VI located in the

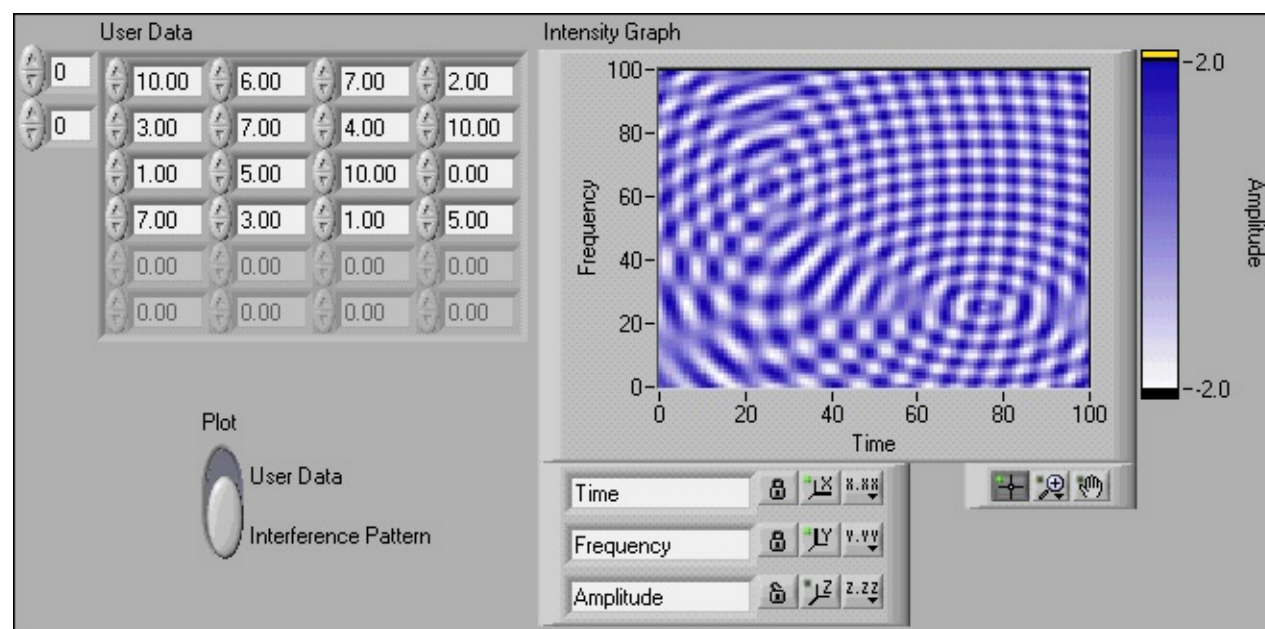
$\ast \clubsuit \ast \textcircled{1}$ $\text{\textcircled{J}}_r$ " $\text{\textcircled{s}}$ $\text{\textcircled{J}}$ $\text{\textcircled{s}}$ \blacktriangle " $\text{\textcircled{}} \text{\textcircled{}} \ast \{ \ast 's \text{\textcircled{s}}$ \blacksquare directory.

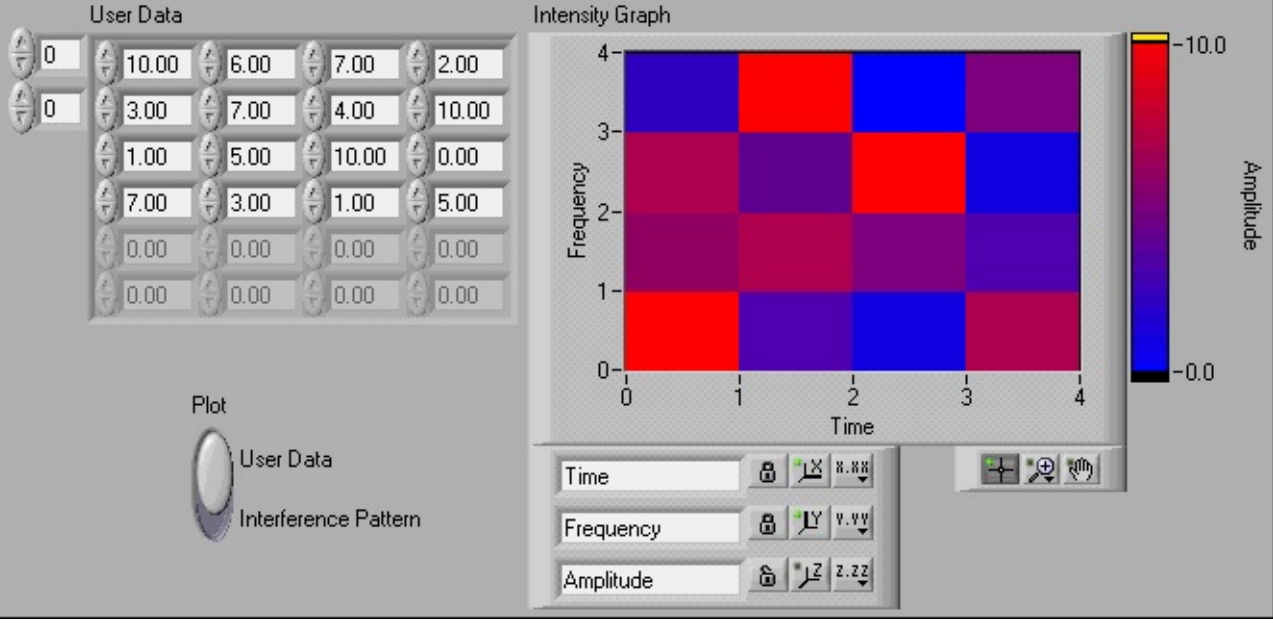
By default, the VI plots an interference

waveform. A $\text{\textcircled{P}} \text{\textcircled{r}} \text{\textcircled{c}} \text{\textcircled{c}} \text{\textcircled{J}} \text{\textcircled{r}} \text{\textcircled{t}} \text{\textcircled{2}}$ $\blacklozenge \blacklozenge \text{\textcircled{}} \text{\textcircled{J}}$ on the block diagram defines the color range used in the intensity graph. You can change the color range by opening the block diagram and modifying the $\ast \blacklozenge \text{\textcircled{r}} \text{\textcircled{r}} \text{\textcircled{4}} \text{\textcircled{2}}$ constant.

9This content is available online at <http://cnx.org/content/m12241/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>





110

CHAPTER 5. PLOTTING DATA

Figure 5.29

2. Change the Plot switch on the front panel to 'User Data' and enter values between 0.0 and 10.0 in the array control. Run the VI. Notice how the magnitude of each element is mapped to the intensity graph.

Figure 5.30

3. Close the VI. Do not save changes.

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

111

5.10 Summary, Tips, and Tricks on Plotting Data

- The 'Plot' switch is a special numeric indicator that displays one or more plots.
- The 'Plot' switch has the following three update modes:
 - A 'Scroll' mode shows running data continuously scrolling from left to right across the chart.
 - A 'Sweep' mode shows one item of data, such as a pulse or wave, scrolling partway across the chart from left to the right.
 - A 'Sweep' mode is similar to an EKG display. A sweep works similarly to a scope except it

Build a VI that continuously measures the temperature once per second and displays the temperature on a scope chart. If the temperature goes above or below limits specified with front panel controls, the VI turns on a front panel LED. The chart plots the temperature and the upper and lower temperature limits. You should be able to set the limit from the following front panel.

Save the VI as `Temperature_VI.vi` in the `LabVIEW\Examples\5.11` directory.

Exercise 5.11.3

Modify the VI you created in Exercise 5.11.2 to display the maximum and minimum values of the temperature trace.

TIP:

Use `min` and `max` functions and two `min` and `max` functions located on the `Functions\Math\Statistics`



`min` and `max` functions in the `Functions\Math\Statistics` palette.

10 This content is available online at <http://cnx.org/content/m12242/1.2/>.

11 This content is available online at <http://cnx.org/content/m12243/1.1/>.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>

112

CHAPTER 5. PLOTTING DATA

Select `File`

`Save` to save the VI as `Temperature_VI.vi` in the `LabVIEW\Examples\5.11` directory.

Available for free at Connexions <http://cnx.org/content/col11408/1.1>

INDEX

113

Index of Keywords and Terms

Keywords are listed by the section with that keyword (page numbers are in parentheses). Keywords do

not necessarily appear in the text of the page. They are merely associated with that section. Ex.

apples, § 1.1 (1) **Terms** are referenced by the page they appear on. Ex. apples, 1

A Acquiring a Signal VI, § 1.5(21)

N National Instruments, § 1.1(2), § 1.2(3),

appearance, § 4.1(75)

§ 1.3(14), § 1.4(16), § 1.5(21), § 1.6(33), § 1.7(36),

§ 1.8(42), § 1.9(43), § 1.10(47), § 4.1(75),

B block diagram, 2, § 1.4(16), § 1.4(16)

§ 4.2(76), § 4.3(77), § 4.4(79), § 4.5(80), § 4.6(82),

C

§ 4.7(82), § 4.8(83), § 4.9(85), § 5.2(89),

connector pane, 2, 55

§ 5.3(94), § 5.7(106), § 5.9(109), § 5.11(111)

Controls, § 4.4(79)

Customizing, § 4.8(83), § 4.9(85)

P palettes, § 4.8(83)

D

plotting data, § 5.11(111)

Debug, § 1.9(43)

pop-up graph, § 4.3(77)

Debugging Techniques, § 1.8(42), § 1.8(42)

Documentation Resources, § 1.6(33), § 1.6(33)

R Reduce Samples VI, § 1.7(36)

E environment, § 1.2(3)

S Shortcuts, § 4.4(79)

exercise, § 1.5(21), § 1.7(36), § 1.9(43), § 4.3(77),

SubVI, § 4.2(76)

§ 4.5(80), § 4.7(82), § 5.2(89), § 5.3(94),

subVIs, § 2.4(60)

§ 5.7(106), § 5.9(109), § 5.11(111)

summary, § 1.10(47), § 4.9(85)

F front panel, 2, § 1.3(14), § 1.3(14), § 4.2(76)

T Temperature Monitor, § 5.2(89)

G

Temperature Running Average VI, § 5.3(94)

Graph Circle VI, § 5.7(106)

Temperature System, § 4.5(80)

I

icon, 2

tips, § 1.10(47)

Intensity Graph Example VI, § 5.9(109)

tricks, § 1.10(47)

L LabVIEW, § 1.1(2), § 1.2(3), § 1.3(14), § 1.4(16),

U UNIX, 76

§ 1.5(21), § 1.6(33), § 1.7(36), § 1.8(42),

V VI, § 4.3(77), § 4.5(80), § 4.6(82), § 4.7(82),

§ 1.9(43), § 1.10(47), § 4.1(75), § 4.2(76),

§ 4.9(85)

§ 4.3(77), § 4.4(79), § 4.5(80), § 4.6(82),

VI properties, § 4.6(82)

§ 4.7(82), § 4.8(83), § 4.9(85), § 5.2(89),

virtual instruments, 2

§ 5.3(94), § 5.7(106), § 5.9(109), § 5.11(111)

VIs, 2

LabVIEW Environment, § 1.2(3)

lesson one, § 1.10(47)

W waveform chart, 87

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

114

ATTRIBUTIONS

Attributions

Collection: LabVIEW Graphical Programming

Edited by: Serhat Beyenir

URL: <http://cnx.org/content/col11408/1.1/>

License: <http://creativecommons.org/licenses/by/3.0/>

Module: "LabVIEW"

By: National Instruments

URL: <http://cnx.org/content/m12192/1.2/>

Page: 2

Copyright: National Instruments

License: http://creativecommons.org/licenses/by/1.0

Module: "LabVIEW Environment"

By: National Instruments

URL: <http://cnx.org/content/m12193/1.3/>

Pages: 3-14

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Front Panel"

By: National Instruments

URL: <http://cnx.org/content/m12194/1.1/>

Pages: 14-16

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Block Diagram"

By: National Instruments

URL: <http://cnx.org/content/m12195/1.2/>

Pages: 16-21

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Acquiring a Signal VI"

By: National Instruments

URL: <http://cnx.org/content/m12196/1.3/>

Pages: 21-32

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "LabVIEW Documentation Resources"

By: National Instruments

URL: <http://cnx.org/content/m12199/1.1/>

Pages: 33-36

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

ATTRIBUTIONS

115

Module: "Reduce Samples VI"

By: Malan Shiralkar

URL: <http://cnx.org/content/m12200/1.2/>

Pages: 36-42

Copyright: Malan Shiralkar

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Debugging Techniques"

By: National Instruments

URL: <http://cnx.org/content/m12201/1.1/>

Pages: 42-43

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Debug Exercise (Main) VI"

By: National Instruments

URL: <http://cnx.org/content/m12202/1.1/>

Pages: 43-46

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Summary, Tips, and Tricks on Introduction to LabVIEW"

By: National Instruments

URL: <http://cnx.org/content/m12203/1.2/>

Pages: 47-50

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Modular Programming"

By: National Instruments

URL: <http://cnx.org/content/m12204/1.2/>

Pages: 51-53

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Icons and Connector Panes"

By: National Instruments

URL: <http://cnx.org/content/m12205/1.2/>

Pages: 53-56

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Convert C to F VI"

By: National Instruments

URL: <http://cnx.org/content/m12207/1.2/>

Pages: 56-60

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

116

ATTRIBUTIONS

Module: "Using SubVIs"

By: National Instruments

URL: <http://cnx.org/content/m12208/1.1/>

Pages: 60-61

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Thermometer VI"

By: National Instruments

URL: <http://cnx.org/content/m12209/1.1/>

Pages: 61-65

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Creating a SubVI from Sections of a VI"

By: National Instruments

URL: <http://cnx.org/content/m12210/1.1/>

Page: 65

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Summary, Tips, and Tricks on Modular Programming"

By: National Instruments

URL: <http://cnx.org/content/m12211/1.1/>

Page: 66

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "While Loops"

By: National Instruments

URL: <http://cnx.org/content/m12212/1.2/>

Pages: 67-69

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "For Loops"

By: National Instruments

URL: <http://cnx.org/content/m12214/1.2/>

Pages: 69-71

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Timed Temperature VI"

By: National Instruments

URL: <http://cnx.org/content/m12216/1.1/>

Pages: 71-73

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

ATTRIBUTIONS

117

Module: "Summary, Tips, and Tricks on Repetition and Loops"

By: National Instruments

URL: <http://cnx.org/content/m12219/1.1/>

Page: 74

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Configuring the Appearance of Front Panels"

By: National Instruments

URL: <http://cnx.org/content/m12299/1.2/>

Pages: 75-76

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Opening SubVI Front Panels when a VI Runs"

By: National Instruments

URL: <http://cnx.org/content/m12300/1.1/>

Pages: 76-77

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Pop-up Graph VI and Use Pop-up Graph VI"

By: National Instruments

URL: <http://cnx.org/content/m12301/1.2/>

Pages: 77-79

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Keyboard Shortcuts for Controls"

By: National Instruments

URL: <http://cnx.org/content/m12302/1.1/>

Pages: 79-80

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Temperature System VI"

By: National Instruments

URL: <http://cnx.org/content/m12303/1.1/>

Pages: 80-82

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Editing VI Properties"

By: National Instruments

URL: <http://cnx.org/content/m12304/1.2/>

Page: 82

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

118

ATTRIBUTIONS

Module: "Edit Me VI"

By: National Instruments

URL: <http://cnx.org/content/m12305/1.2/>

Pages: 82-83

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Customizing the Controls and Functions Palettes"

By: National Instruments

URL: <http://cnx.org/content/m12306/1.1/>

Pages: 83-84

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Summary, Tips, and Tricks on Customizing VIs"

By: National Instruments

URL: <http://cnx.org/content/m12307/1.1/>

Page: 85

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Waveform Charts"

By: National Instruments

URL: <http://cnx.org/content/m12233/1.2/>

Pages: 87-88

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Temperature Monitor VI"

By: National Instruments

URL: <http://cnx.org/content/m12234/1.2/>

Pages: 89-94

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Temperature Running Average VI"

By: National Instruments

URL: <http://cnx.org/content/m12235/1.2/>

Pages: 94-97

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Waveform and XY Graphs"

By: National Instruments

URL: <http://cnx.org/content/m12236/1.1/>

Pages: 98-99

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

ATTRIBUTIONS

119

Module: "Graph Waveform Array VI"

By: National Instruments

URL: <http://cnx.org/content/m12237/1.2/>

Pages: 99-103

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Temperature Analysis VI"

By: National Instruments

URL: <http://cnx.org/content/m12238/1.1/>

Pages: 104-106

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Graph Circle VI"

By: National Instruments

URL: <http://cnx.org/content/m12239/1.1/>

Pages: 106-108

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Intensity Plots"

By: National Instruments

URL: <http://cnx.org/content/m12240/1.2/>

Pages: 108-109

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Intensity Graph Example VI"

By: National Instruments

URL: <http://cnx.org/content/m12241/1.1/>

Pages: 109-110

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Summary, Tips, and Tricks on Plotting Data"

By: National Instruments

URL: <http://cnx.org/content/m12242/1.2/>

Page: 111

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Module: "Additional Exercises for Plotting Data"

By: National Instruments

URL: <http://cnx.org/content/m12243/1.1/>

Pages: 111-112

Copyright: National Instruments

License: <http://creativecommons.org/licenses/by/1.0>

Available for free at Connexions <<http://cnx.org/content/col11408/1.1>>

LabVIEW Graphical Programming

Introduction to LabVIEW

About Connexions

Since 1999, Connexions has been pioneering a global system where anyone can create course materials and make them fully accessible and easily reusable free of charge. We are a Web-based authoring, teaching and learning environment open to anyone interested in education, including students, teachers, professors and lifelong learners. We connect ideas and facilitate educational communities.

Connexions's modular, interactive courses are in use worldwide by universities, community colleges, K-12

schools, distance learners, and lifelong learners. Connexions materials are in many languages, including English, Spanish, Chinese, Japanese, Italian, Vietnamese, French, Portuguese, and Thai. Connexions is part of an exciting new information distribution system that allows for **Print on Demand Books**. Connexions has partnered with innovative on-demand publisher QOOP to accelerate the delivery of printed course

materials and textbooks into classrooms worldwide at lower prices than traditional academic publishers.